SAMSUNG

ELECTRONICS

© Samsung Electronics Co., Ltd. **APR. 2000**

Printed in Korea

AH68-00462A

SERVICE MANUAL

DVD-611/611B/615/511

SAMSUNG

DVD PLAYER

DVD-611/611B/615

DVD-511

SERVICE Manual

DVD PLAYER

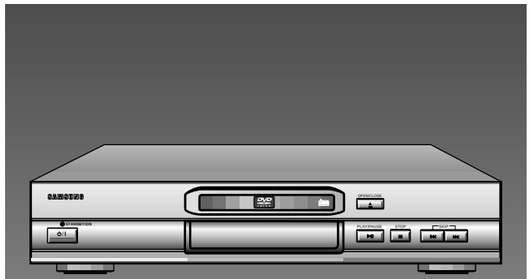

DVD-611/611B/615

DVD-511

CONTENTS

1. Precautions
2. Reference Information
3. Product Specification
4. Disassembly and Reassembly
5. Circuit Descriptions
6. Troubleshooting
7. Exploded Views and Parts List
8. Electrical Parts List
9. Block Diagrams
10. PCB Diagrams
11. Wiring Diagram
12. Schematic Diagrams

1. Precautions

1-1 Safety Precautions

1) Before returning an instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:

(1) Be sure that no built-in protective devices are defective or have been defeated during servicing. (1)Protective shields are provided to protect both the technician and the customer. Correctly replace all missing protective shields, including any remove for servicing convenience.
(2)When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including, but not limited to, nonmetallic control knobs, insulating fish papers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning.

(2) Be sure that there are no cabinet openings through which adults or children might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, excessively wide cabinet ventilation slots, and an improperly fitted and/or incorrectly secured cabinet back cover.

(3) Leakage Current Hot Check-With the instrument completely reassembled, plug the AC line cord directly into a 120V AC outlet. (Do not use a isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards institute (ANSI) C101.1 Leakage Current for Appliances and Underwriters Laboratories (UL) 1270 (40.7). With the instrument's AC switch first in the ON position and then in the OFF position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinets, screwheads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis.
Any current measured must not exceed 0.5mA. Reverse the instrument power cord plug in the outlet and repeat the test. See Fig. 1-1.
Any measurements not within the limits specified herein indicate a potential shock hazard that must be eliminated before returning the instrument to the customer.

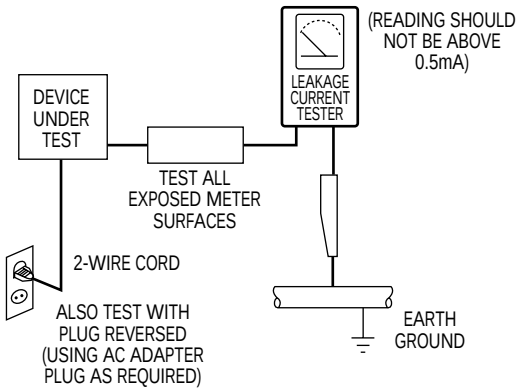
(READING SHOULD NOT BE ABOVE 0.5mA)
LEAKAGE CURRENT TESTER
DEVICE UNDER TEST
TEST ALL EXPOSED METER SURFACES
2-WIRE CORD
ALSO TEST WITH PLUG REVERSED (USING AC ADAPTER PLUG AS REQUIRED)
EARTH GROUND

Fig. 1-1 AC Leakage Test

(4) Insulation Resistance Test Cold Check-(1) Unplug the power supply cord and connect a jumper wire between the two prongs of the plug. (2) Turn on the power switch of the instrument. (3) Measure the resistance with an ohmmeter between the jumpered AC plug and all exposed metallic cabinet parts on the instrument, such as screwheads, antenna, control shafts, handle brackets, etc. When an exposed metallic part has a return path to the chassis, the reading should be between 1 and 5.2 megohm. When there is no return path to the chassis, the reading must be infinite. If the reading is not within the limits specified, there is the possibility of a shock hazard, and the instrument must be re-pared and rechecked before it is returned to the customer. See Fig. 1-2.

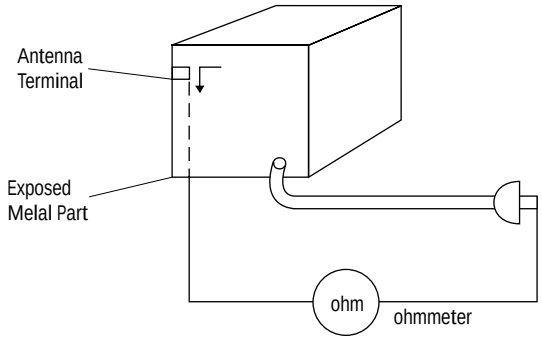

Fig. 1-2 Insulation Resistance Test

2) Read and comply with all caution and safety related notes non or inside the cabinet, or on the chassis.

3) Design Alteration Warning-Do not alter of add to the mechanical or electrical design of this instrument. Design alterations and additions, including but not limited to, circuit modifications and the addition of items such as auxiliary audio output connections, might alter the safety characteristics of this instrument and create a hazard to the user. Any design alterations or additions will make you, the service, responsible for personal injury or property damage resulting therefrom.

4) Observe original lead dress. Take extra care to assure correct lead dress in the following areas:
(1) near sharp edges, (2) near thermally hot parts (be sure that leads and components do not touch thermally hot parts), (3) the AC supply, (4) high voltage, and (5) antenna wiring. Always inspect in all areas for pinched, out-of-place, or frayed wiring, Do not change spacing between a component and the printed-circuit board. Check the AC power cord for damage.

5) Components, parts, and/or wiring that appear to have overheated or that are otherwise damaged should be replaced with components, parts and/ or wiring that meet original specifications.
Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

6) Product Safety Notice-Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by shading, an (⚠)or a (⚠)on schematics and parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might created shock, fire and/or other hazards. Product safety is under review continuously and new instructions are issued whenever appropriate.

1-2 Servicing Precautions

CAUTION : Before servicing Instruments covered by this service manual and its supplements, read and follow the Safety Precautions section of this manual.

Note : If unforseen circument create conflict between the following servicing precautions and any of the safety precautions, always follow the safety precautions. Remember: Safety First.

1-2-1 General Servicing Precautions

(1) a. Always unplug the instrument's AC power cord from the AC power source before (1) re-moving or reinstalling any component, circuit board, module or any other instrument assembly, (2) disconnecting any instrument electrical plug or other electrical connection, (3) connecting a test substitute in parallel with an electrolytic capacitor in the instrument.

b. Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this service manual might be equipped.

c. Do not apply AC power to this instrument and /or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.

d. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.

Note : Refer to the Safety Precautions section ground lead last.

(2) The service precautions are indicated or printed on the cabinet, chassis or components. When servicing, follow the printed or indicated service precautions and service materials.

(3) The components used in the unit have a specified flame resistance and dielectric strength.
When replacing components, use components which have the same ratings. Components i-entified by shading, by(⚠) or by (⚠) in the circuit diagram are important for safety or for the characteristics of the unit. Always replace them with the exact replacement components.

(4) An insulation tube or tape is sometimes used and some components are raised above the printed wiring board for safety. The internal wiring is sometimes clamped to prevent contact with heating components. Install such elements as they were.

(5) After servicing, always check that the removed screws, components, and wiring have been installed correctly and that the portion around the serviced part has not been damaged and so on. Further, check the insulation between the blades of the attachment plug and accessible conductive parts.

1-2-2 Insulation Checking Procedure

Disconnect the attachment plug from the AC outlet and turn the power ON. Connect the insulation resistance meter (500V) to the blades of the attachment plug. The insulation resistance between each blade of the attachment plug and accessible conductive parts(see note) should be more than 1 Megohm.

Note : Accessible conductive parts include metal panels, input terminals, earphone jacks, etc.

1-3 ESD Precautions

Electrostatically Sensitive Devices (ESD)

Some semiconductor (solid state) devices can be damaged easily by static electricity.
Such components commonly are called Electrostatically Sensitive Devices(ESD). Examples of typical ESD devices are integrated circuits and some field-effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

(1) Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.

(2) After removing an electrical assembly equipped with ESD devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.

(3) Use only a grounded-tip soldering iron to solder or unsolder ESD devices.

(4) Use only an anti-static solder removal devices. Some solder removal devices not classified as “anti-static” can generate electrical charges sufficient to damage ESD devices.

(5) Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ESD devices.

(6) Do not remove a replacement ESD device from its protective package until immediately before your are ready to install it.(Most replacement ESD devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive materials).

(7) Immediately before removing the protective materials from the leads of a replacement ESD device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION : Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

(8) Minimize bodily motions when handling unpackaged replacement ESD devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ESD device).

1-4 Handling the optical pick-up

The laser diode in the optical pick up may suffer electrostatic breakdown because of potential static electricity from clothing and your body.

The following method is recommended.

(1) Place a conductive sheet on the work bench (The black sheet used for wrapping repair parts.)

(2) Place the set on the conductive sheet so that the chassis is grounded to the sheet.

(3) Place your hands on the conductive sheet(This gives them the same ground as the sheet.)

(4) Remove the optical pick up block

(5) Perform work on top of the conductive sheet. Be careful not to let your clothes or any other static sources to touch the unit.

Be sure to put on a wrist strap grounded to the sheet.
Be sure to lay a conductive sheet made of copper etc. Which is grounded to the table.

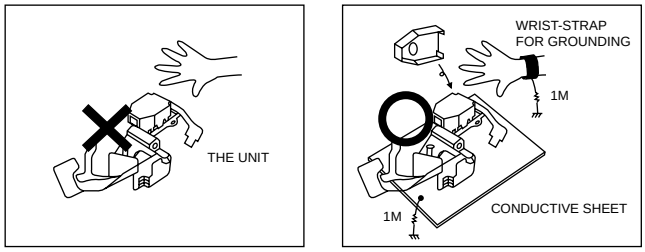

Fig.1-3

(6) Short the short terminal on the PCB, which is inside the Pick-Up ASS'Y, before replacing the Pick-Up. (The short terminal is shorted when the Pick-Up Ass'y is being lifted or moved.)

(7) After replacing the Pick-up, open the short terminal on the PCB.

1-5 Pick-up disassembly and reassembly

1-5-1 Disassembly

1) Remove the power cable.
2) Switch SW3 on deck PCB to “OFF” before removing the FPC.
   (Inserted into Main PCB DCN1. See Fig. 1-4)
3) Disassemble the deck.
4) Disassemble the deck PCB.

1-5-2 Assembly

1) Replace the Pick-up.
2) Assemble the deck PCB.
3) Reassemble the deck.
4) Insert FPC into Main PCB DCN1 and switch SW3 on deck PCB to “ON”. (See Fig 1-4)

Note : If the assembly and disassembly are not done in correct sequence, the Pick-up may be damaged.

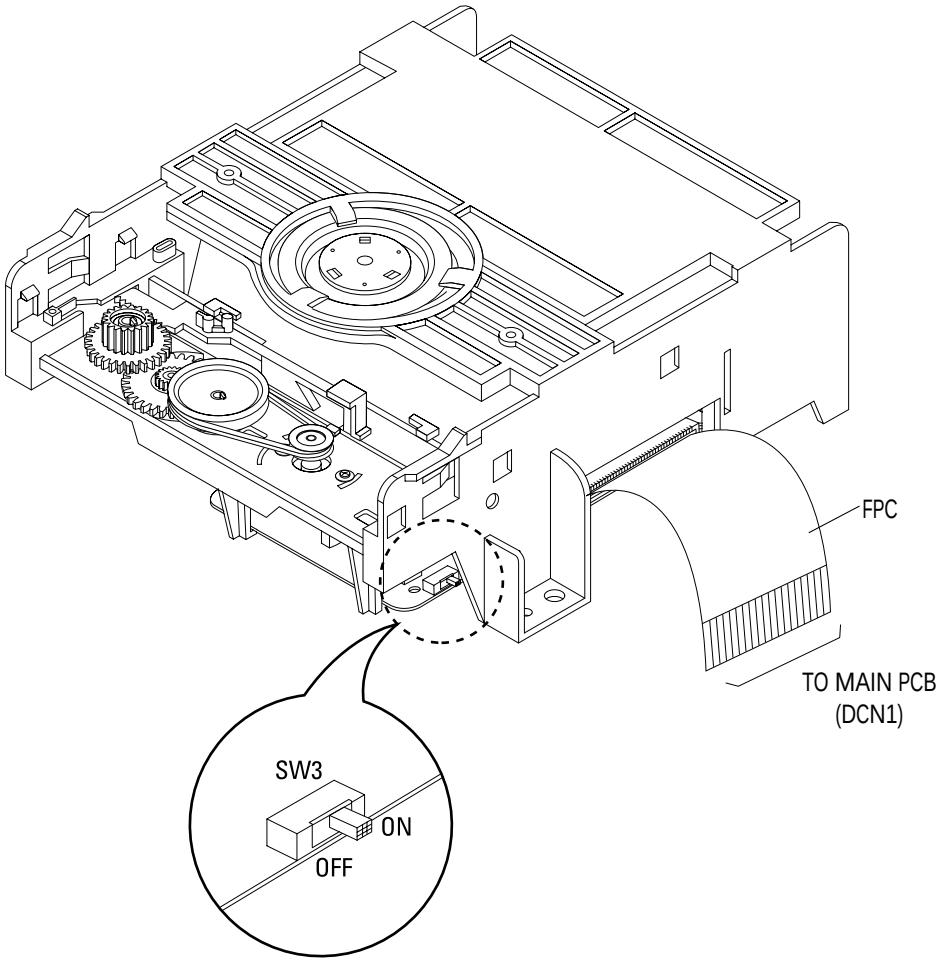

Fig. 1-4

2. Reference Information

2-1 IC Descriptions

2-1-1 AIC1 (AK4393 ; Digital-to-Analog Converter)

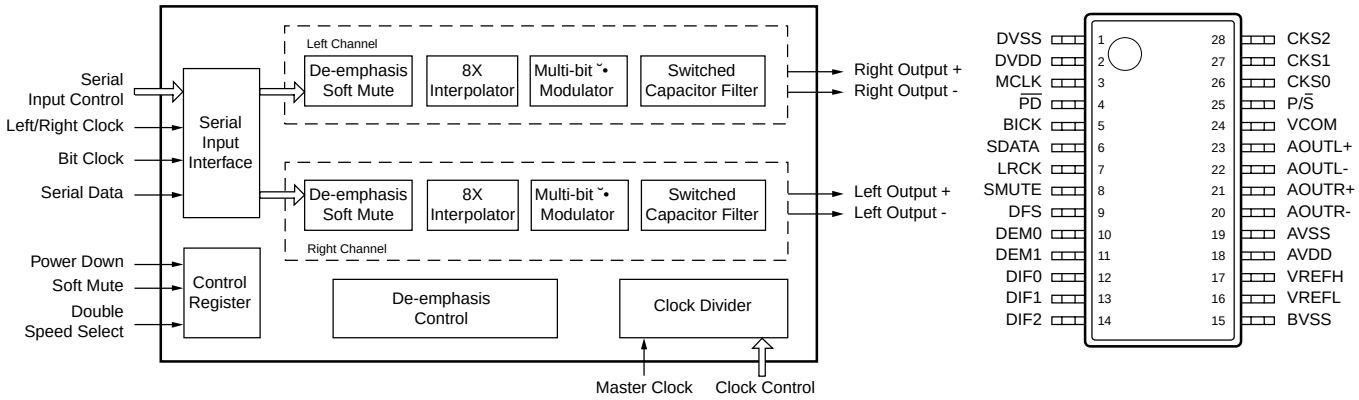

No.	Pin Name	I/O	Pin Function and Description
1	DVSS	-	Digital Ground. Digital ground is 0V.
2	DVDD	-	Digital Supply. 3.3V or 5.0V nominal.
3	MCLK	I	Master Clock Input.
4	PD	I	Power-down and Reset. When low the AK4393 is in Power-down Mode and held in reset. The AK4393 should always be reset after power-up.
5	BICK	I	Audio Serial Data Clock Input. A clock input of 64fs or more is recommended.
6	SDATA	I	Serial Data Input.
7	LRCK	I	Left/Right Clock Input. Defines the sampling rate, F_S.
8	SMUTE (or CS)	I	Soft Mute Input or Chip Select Input. If the P/S pin (pin 25) is high, SMUTE controls the soft mute function as follows: - When SMUTE goes high, the soft mute cycle is initiated. - When SMUTE goes low, the output mute is slowly released. If the P/S pin is low, SMUTE is the Chip Select Input for the Serial Control Mode. Chip select is active when SMUTE is low.
9	DFS	I	Double Sampling Speed Input. When low, this pin defines the Normal Speed Mode, and 128 xF_S oversampling is implemented. When high, the DFS pin defines the Double Speed Mode, implemented with 64 x F_S oversampling. This pin features an internal pull-down.
10	DEM0 (or CCLK)	I	De-emphasis Enable #0 or Control Data Clock Input. If the P/S pin (pin 25) is high, DEM0 is used to select the De-emphasis Mode according to Table 3. If the P/S pin os low DEM0 is the clock input for the Serial Control Mode.
11	DEM1 (or CDTI)	I	De-emphasis Enable #1 or Control Data Input. If the P/S pin (pin 25) is high, DEM1 is used to select the De-emphasis Mode according to Table 3. If the P/S pin is low, DEM1 is the control data input for the Serial Control Mode.
12	DIF0	I	Digital Input Format Select #0.
13	DIF1	I	Digital Input Format Select #1.
14	DIF2	I	Digital Input Format Select #2.
15	BVSS	-	Substrate Ground Pin. Substrate ground is 0V.
16	VREFL	I	Low Level Voltage Reference Input. Normally connected to analog ground.
17	VREFH	I	High Level Voltage Reference Input. Normally connected to analog supply.
18	AVDD	-	Analog Supply. Analog supply is 5V nominal.
19	AVSS	-	Analog Ground. Analog ground is 0V.
20	AOUTR-	O	Right Channel Negative Output.
21	AOUTR+	O	Right Channel Positive Output.
22	AOUTL-	O	Left Channel Negative Output.
23	AOUTL+	O	Left Channel Positive Output.
24	VCOM	O	Common Voltage Output. Common voltage output is 2.6V nominal.
25	P/S	I	Parallel/Serial Control Mode Select Input. If Low, the Serial Control Mode is implemented. If High, the Parallel Control Mode is selected. This pin has an internal pull-up.
26	CKS0	I	Master Clock Select #0.
27	CKS1	I	Master Clock Select #1.
28	CKS2	I	Master Clock Select #2.

2-1-2 DIC1 (KS1453 ; Data Processor)

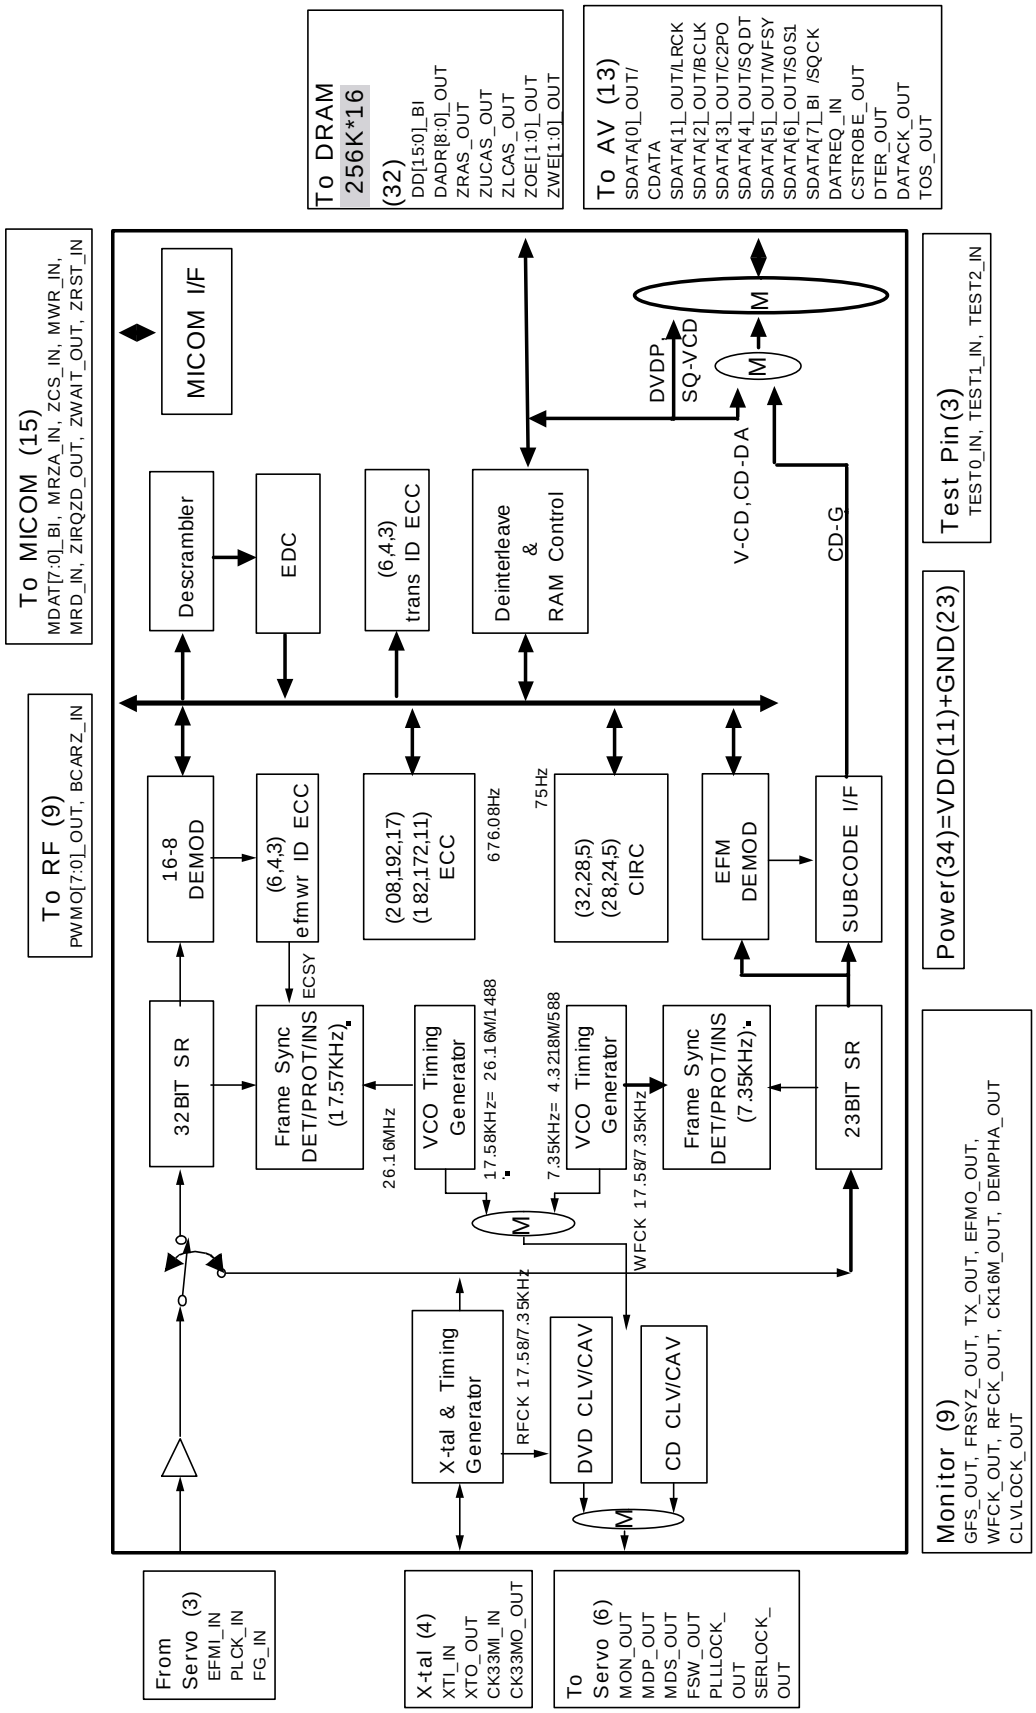

No.	Pin Name	Description	I/O	Notes
1	DVSS	Digital GND (0 V)		
2	ZCS_IN	Chip Select (Active Low)	I	MICOM
3	MRZA_IN	Micom Register Select (L REGISTER H fi DATA)	I	MICOM
4	DVSS	Digital GND (0 V)		
5	MDAT7_BI	MICOM Data Bus	B	MICOM
6	MDAT6_BI	MICOM Data Bus	B	MICOM
7	MDAT5_BI	MICOM Data Bus	B	MICOM
8	MDAT4_BI	MICOM Data Bus	B	MICOM
9	MDAT3_BI	MICOM Data Bus	B	MICOM
10	MDAT2_BI	MICOM Data Bus	B	MICOM
11	MDAT1_BI	MICOM Data Bus	B	MICOM
12	MDAT0_BI	MICOM Data Bus	B	MICOM
13	DVDD	Digital Power (+5V)		
14	XTI_IN	System Clock Input for 26.16 MHz	I	XTAL
15	XTO_OUT	System Clock Output for 26.16 MHz	O	XTAL
16	DVSS	Digital GND (0 V)		
17	DD15_BI	DRAM Data Bus	B	DRAM
18	DD0_BI	DRAM Data Bus	B	DRAM
19	DD14_BI	DRAM Data Bus	B	DRAM
20	DD1_BI	DRAM Data Bus	B	DRAM
21	DVSS	Digital GND (0 V)		
22	DD13_BI	DRAM Data Bus DRAM Address Bus	B	DRAM
23	DD2_BI	DRAM Data Bus	B	DRAM
24	DD12_BI	DRAM Data Bus	B	DRAM
25	DD3_BI	DRAM Data Bus	B	DRAM
26	DVDD	Digital Power (+5 V)		
27	DD11_BI	Digital Data Bus	B	DRAM
28	DD4_BI	Digital Data Bus	B	DRAM
29	DD10_BI	Digital Data Bus	B	DRAM
30	DD5_BI	Digital Data Bus	B	DRAM
31	DVSS	Digital GND (0 V)		
32	DD9_BI	DRAM Data Bus	B	DRAM
33	DD6_BI	DRAM Data Bus	B	DRAM
34	DD8_BI	DRAM Data Bus	B	DRAM
35	DD7_BI	DRAM Data Bus	B	DRAM
36	DVSS	Digital GND (0 V)		
37	ZLCAS_OUT	DRAM Low Column Address Strobe	O	DRAM
38	ZUCAS_OUT	DRAM Upper Column Address Strobe	O	DRAM
39	ZWE1_OUT	DRAM Write Enable 1 (8M ONLY)	O	DRAM
40	ZWE0_OUT	DRAM Write Enable 0 (4M, 8M, 16M)	O	DRAM
41	ZOE1_OUT	DRAM Output Enable 1 (16M MODE DADR9)	O	DRAM
42	DVDD	Digital Power (+5 V)		
43	ZOE0_OUT	DRAM Output Enable 0	O	DRAM
44	ZRAS_OUT	DRAM Row Address Strobe	O	DRAM
45	DADR8_OUT		O	DRAM
46	DADR7_OUT	DRAM Address Bus	O	DRAM
47	DVSS	Digital GND (0 V)		
48	DADR0_OUT	DRAM Address Bus	O	DRAM
49	DADR6_OUT	DRAM Address Bus	O	DRAM
50	DADR1_OUT	DRAM Address Bus	O	DRAM
51	DADR5_OUT	DRAM Address Bus	O	DRAM
52	DADR2_OUT	DRAM Address Bus	O	DRAM
53	DADR4_OUT	DRAM Address Bus	O	DRAM
54	DADR3_OUT	DRAM Address Bus	O	DRAM
55	DVSS	Digital GND (0 V)		
56	DVSS	Digital GND (0 V)		
57	TOS_OUT	Top of Sector	O	AV Decoder
58	DATACK_OUT	Data Acknowledge Signal Output	O	AV Decoder
59	DVDD	DIGITAL Power (+5 V)		
60	SDATA0_OUT	DVD Data/CD Data Bit Stream (CDATA)	O	AV Decoder
61	SDATA1_OUT	DVD Data/CD Data L/R Clock (LRCK)	O	AV Decoder
62	SDATA2_OUT	DVD Data/CD Data Bit Clock (BLCK)	O	AV Decoder
63	SDATA3_OUT	DVD Data/CD Data Error Flag (C2PO)	O	AV Decoder
64	SDATA4_OUT	DVD Data/Subcode Serial Data (SQDT)	O	AV Decoder

No.	Pin Name	Description	I/O	Notes
65	SDATA5_OUT	DVD Data/Subcode Frame Sync (WFSY)	O	AV Decoder
66	SDATA6_OUT	DVD Data/Subcode Block Sync (S0S1)	O	AV Decoder
67	SDATA7_BI	DVD Data/Subcode Serial Clock (SQCK)	B	AV Decoder
68	DVSS	Digital GND (0 V)		
69	CSTROBE_OUT	Data Strobe (Clock) Output	O	AV Decoder
70	DATREQ_IN	Data Request from A/V Decoder or ROM Decoder	I	AV Decoder
71	DTER_OUT	DVD Data Error Output	O	AV Decoder
72	DVSS	Digital GND (0 V)		
73	PWMO7_OUT	PWM Output Signal	O	RF
74	PWMO6_OUT	PWM Output Signal	O	RF
75	PWMO5_OUT	PWM Output Signal	O	RF
76	PWMO4_OUT	PWM Output Signal	O	RF
77	DVDD	Digital Power (+5 V)		
78	PWMO3_OUT	PWM Output Signal	O	RF
79	PWMO2_OUT	PWM Output Signal	O	RF
80	PWMO1_OUT	PWM Output Signal	O	RF
81	PWMO0_OUT	PWM Output Signal	O	RF
82	DVSS	Digital GND (0 V)		
83	DVSS	Digital GND (0 V)		
84	DVSS	Digital GND (0 V)		
85	DVDD	DIGITAL Power (+5 V)		
86	DVDD	DIGITAL Power (+5 V)		
87	DVSS	Digital GND (0 V)		
88	DVSS	Digital GND (0 V)		
89	DVSS	Digital GND (0 V)		
90	DVSS	Digital GND (0 V)		
91	FRSYZ_OUT	Frame Sync Out	O	Monitor
92	TX_OUT	Digital Out	O	Monitor
93	GFS_OUT	Good Frame Sync Detection State Output (OK at H)	O	Monitor
94	DVSS	Digital GND (0 V)		
95	CK33MI_IN	System Clock Input for 33.8688 MHz	I	X-tal
96	CK33MO_OUT	System Clock Output for 33.8688 MHz	O	X-tal
97	DVDD	Digital Power (+5 V)		
98	TEST0_IN	Test Mode Selection Terminal	I	
99	TEST1_IN	Test Mode Selection Terminal	I	
100	TEST2_IN	Test Mode Selection Terminal	I	
101	EFMO_OUT	EFM Out	O	Monitor
102	WFCK_OUT	Write Frame Pulse	O	Monitor
103	RFCK_OUT	Reference Frame Pulse	O	Monitor
104	PLCK_IN	Phase Locked Clock	I	Servo
105	DVSS	Digital GND (0 V)		
106	PLLLOCK_OUT	Lock Signal for PLL	O	Servo
107	CLVLOCK_OUT	Lock Signal for CLV	O	Monitor
108	SERLOCK_OUT	Lock Signal for SERVO	O	Servo
109	MDP_OUT	Spindle Motor Phase Control Signal (3-STATE)	O	Servo
110	MDS_OUT	Spindle Motor Speed Control Signal (3-STATE)	O	Servo
111	DVSS	Digital GND (0 V)		
112	DVSS	Digital GND (0 V)		
113	MON_OUT	Spindle Motor Output Filter Switching Output	O	Servo
114	FG_IN	Reference Signal for CAV	I	Servo
115	FSW_OUT	Spindle Motor Output Filter Switching Output (3-STATE)	O	Servo
116	EFMI_IN	EFM/EFM+ Signal Input Notes	I	Servo
117	DVDD	Digital Power (+5 V)		
118	DVDD	Digital Power (+5 V)		
119	DVDD	Digital Power (+5 V)		
120	CK16M_OUT	CK33Ms 2 Division Clock / 16.9344 MHz	O	Monitor
121	DEMPHA_OUT	HIGH, when on Deemphasis	O	Monitor
122	BCARZ_IN	BCA Input Signal	I	RF
123	DVSS	Digital GND (0 V)		
124	ZRST_IN	Hardware Reset (Active Low)	I	MICOM
125	ZWAIT_OUT	Micom Read / Write Access Wait (Wait at L)	O	MICOM
126	ZIRQZD_OUT	Interrupt Request to Micom	O	MICOM
127	MRD_IN	Micom Read Strobe (Active Low)	I	MICOM
128	MWR_IN	Micom Write Strobe (Active Low)	I	MICOM

2-1-3 DIC2 (KM416C254D ; CMOS 4M DRAM)

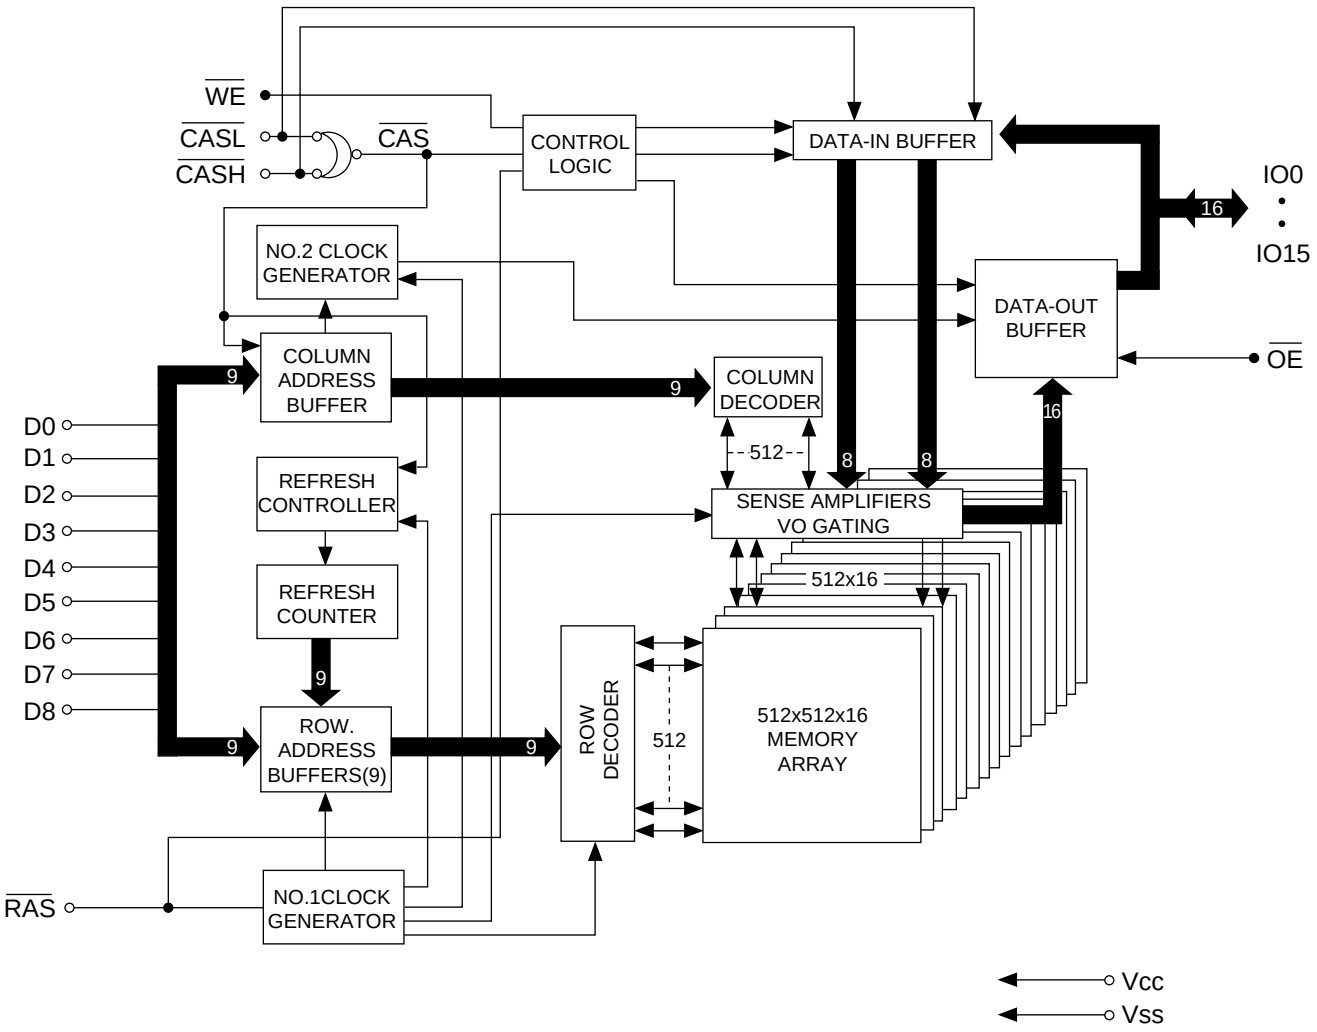

PIN NO.	SYM.	TYPE	DESCRITION
16~19, 22~26	A0~A8	Input	Address Input
14	$\overline{RAS}$	Input	Row Address Strobe
28	$\overline{CASH}$	Input	Column Address Strobe/Upper Byte Control
29	$\overline{CASL}$	Input	Column Address Strobe/Lower Byte Control
13	$\overline{WE}$	Input	Write Enable
27	$\overline{OE}$	Input	Output Enable
2~5, 7~10, 31~34, 36~39	I/O0~I/O15	Input/Output	Data Input/Output
1, 6, 20	Vcc	Supply	Power, 5V
21, 35, 40	Vss	Ground	Ground
11, 12, 15, 30	NC	-	No Connect

2-1-4 MIC1 (TMP95C265 ; Main Micom)

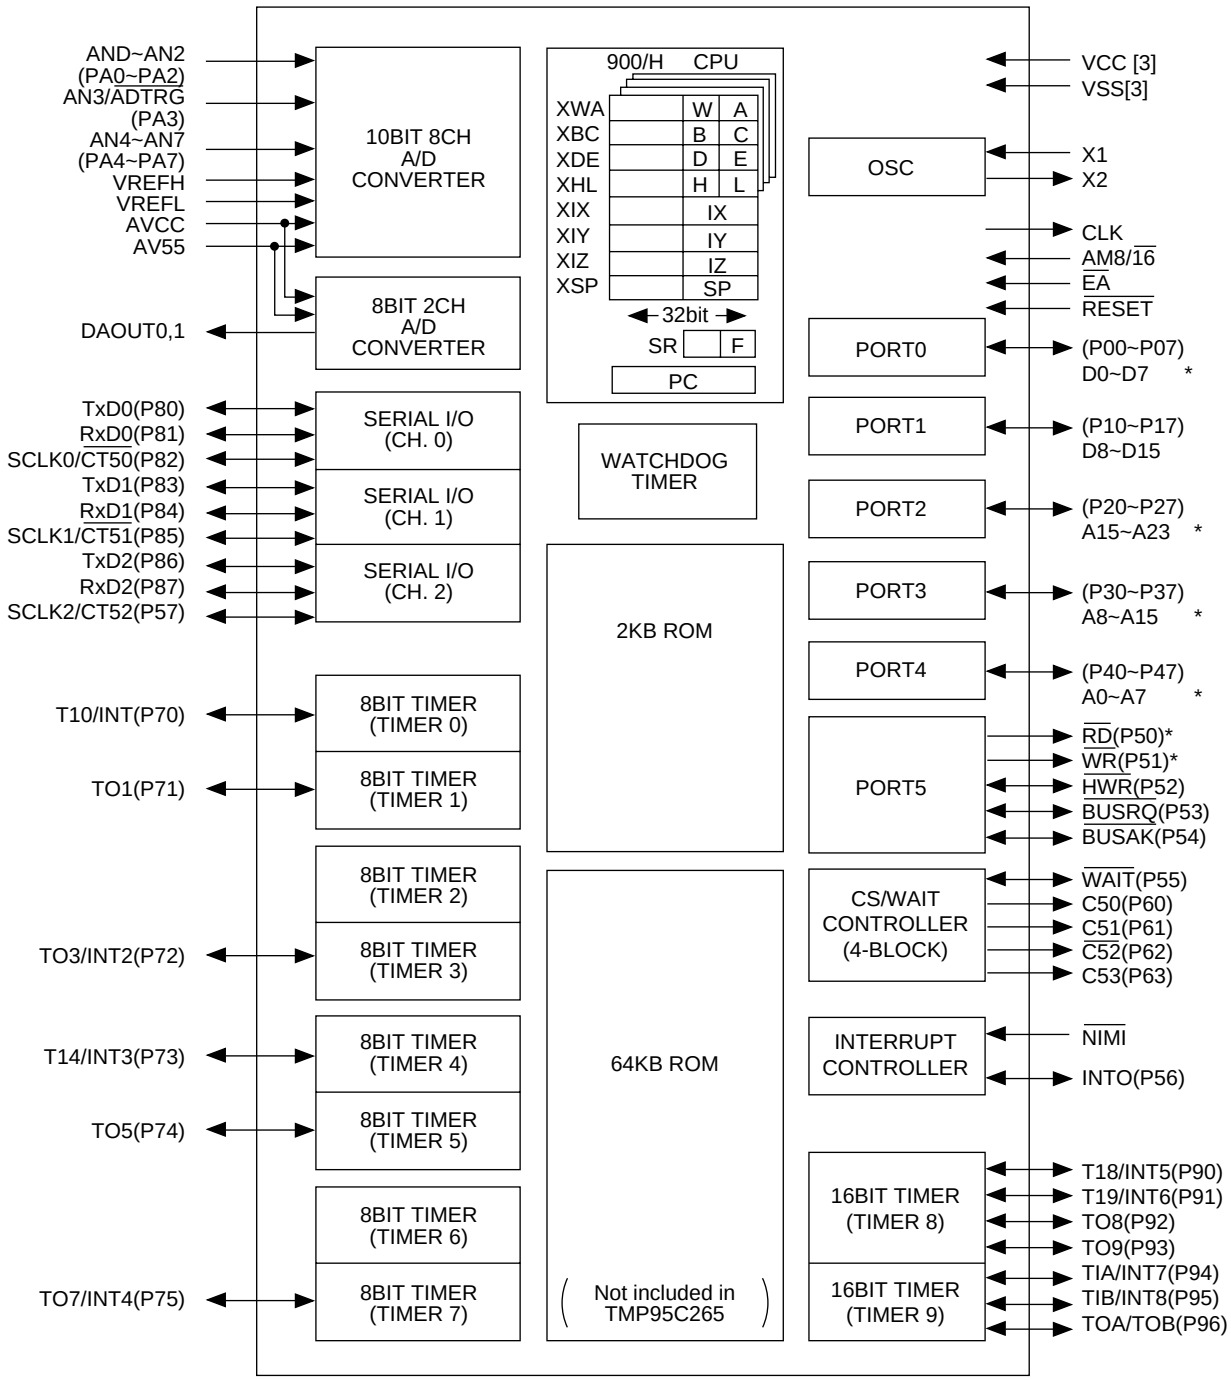

NO	PORT NAME	ASSIGNED NAME	DESCRIPTION	TYPE	REMARK
1	VREFL	DGND	A/D Ref Input(L)	I	DGND
2	AVss	DGND	A/D Ref Input	-	DGND
3	AVcc	5D	A/D VCC Input	-	5D
4	DAOUT0	MTP1		0	NC
5	DAOUT1	MPT2		0	NC
6	/NMI	-	PULL-UP	I	
7	P53	CSB	D. Servo IC Chip Select	0	KS1452(10)
8	P54/BUSAK	MTP3		0	
9	/WAIT	/MWAIT	/Wait(ZiVA, DSP)	I	/MWait
10	P56	DVD/CD	DVD/CD RF AGC Gain Select	0	RF(KS1461)
11	SCLK2	SCLK	Serial Data Clock	I	FRONT
12	P80/TXD0	MD	RF Contrl Data	0	KS1461(69)
13	P81/RXD0	STB	RF Data Latch	I/0	KS1461(71)
14	P82/SCLKO	MC	RF Control Clock	0	KS1461(70)
15	P83/TXD1	MTP5		0	NC
16	P84/RXD1	MTP6		0	NC
17	P85/SCLK1	MTP4		0	NC
18	TXD2	RXD	Serial Data Output	0	FRONT
19	RXD2	TXD	Serial Data Input	I	FRONT
20	CSO	/CSO	EPROM(M27C801) Select	0	EPROM(M27C801)
21	CS1	/CS1	SRAM(KM681000) Select	0	SRAM(KM681000)
22	CS2	/DVD1CS	AVDecoder(ZiVA4) Select	0	AVDecoder(ZiVA4)
23	CS3	/DSPCS	Data Processor(KS1453) Select	0	Data Processor(KS1453)
24	CLK	CLK	CLOCK OUTPUT (System Clock÷2)	0	fc/2
25	Vcc	5D		-	VCC
26	Vss	GDND	GND	-	GND
27	X1	X1	High Frequency OSC in	I	20MHz
28	X2	X2	High frequency OSC out	0	
29	/EA	/EA	Internal ROM Less Mode	I	GND
30	/REST	/MRST	Master reset from FRONT	I	FRONT, IC
31	INT1	SRQ	Interrupt from Front Micom	I	FRONT
32	P71	RRQ	Request to Front Micom	0	FRONT
33	P72	SCL	EEPROM CLOCK	0	KS24C020(6)
34	P73	SDA	EEPROM DATA I/O	0	KS24C020(5)
35	P74	OPEN	Tray Out Motor Control Output	0	DRIVER(0PIN-, 16)
36	P75	CLOSE	Tray In Motor Control Output	0	DRIVER(0PIN-, 17)
37	INT5	FGINT	Interrupt from Spindle Motor FG	I	DRIVER(FG, 2)
38	P91	ACT MUTE	Driver IC MUTE(Actuator)	0	DRIVER(MUTE4, 37)
39	P92	M/D MUTE	Driver IC MUTE(Spindle)	0	DRIVER(MUTE3, 38)
40	P93	ZRST	DSP H/W reset	0	KS1453(124)
41	INT7	/DVDINT	Interrupt from AV-DEC	I	INV(ZiVA-4(51))
42	INT8	/DSPINT	Interrupt from DSP	I	INV(KS1453(126))
43	P96	ZIVA_RST	AV Decoder Reset(Active H:4.0, L:4.1)	0	ZiVA-4(52)
44	Vcc	5D			
45	D0	HAD0	Data 0	I/0	
46	D1	HAD1	Data 1	I/0	
47	D2	HAD2	Data 2	I/0	
48	D3	HAD3	Data 3	I/0	
49	D4	HAD4	Data 4	I/0	
50	D5	HAD5	Data 5	I/0	

NO	PORT NAME	ASSIGNED NAME	DESCRIPTION	TYPE	REMARK
51	D6	HAD6	Data6	I/0	
52	D7	HAD7	Data7	I/0	
53	P10	CLSW	Close Switch	I	DECK
54	P11	OPSW	Open Swithc	I	DECK
55	P12	MTP8	Reserved I/0	0	NC
56	P13	MTP9	Reserved I/0	0	NC
57	P14	MTP10	Reserved I/0	0	NC
58	P15	MTP11	Reserved I/0	0	NC
59	P16	MTP12	Reserved I/0	0	NC
60	P17	MTP13	Reserved I/0	0	NC
61	AM8/16	AM8	Address Mode(H:8 BIT MODE)	I	VCC
62	Vss	DGND		-	GND
63	Vcc	5D		-	VCC
64	A23	HA23	SERVO /RD Strobe Mask Signal	0	74HCOO(5)
65	P26/A22	MRP14	Reserved Address Port	0	NC
66	P25/A21	MRP15	Reserved Address Port	0	NC
67	P24/A20	MRP16	Reserved Address Port	0	NC
68	A19	HA19	Address 19	0	EPROM, SRAM ADDRESS
69	A18	HA18	Address 18	0	EPROM, SRAM ADDRESS
70	A17	HA17	Address 17	0	EPROM, SRAM ADDRESS
71	A16	HA16	Address 16	0	EPROM, SRAM ADDRESS
72	A15	HA15	Address 15	0	EPROM, SRAM ADDRESS
73	A14	HA14	Address 14	0	EPROM, SRAM ADDRESS
74	A13	HA13	Address 13	0	EPROM, SRAM ADDRESS
75	A12	HA12	Address 12	0	EPROM, SRAM ADDRESS
76	A11	HA11	Address 11	0	EPROM, SRAM ADDRESS
77	A10	HA10	Address 10	0	EPROM, SRAM, Zlva Adrs
78	A9	HA9	Address 9	0	EPROM, SRAM, Zlva Adrs
79	A8	HA8	Address 8	0	EPROM, SRAM, Zlva Adrs
80	A7	HA7	Address 7	0	EPROM, SRAM ADDRESS
81	A6	HA6	Address 6	0	EPROM, SRAM ADDRESS
82	A5	HA5	Address 5	0	EPROM, SRAM ADDRESS
83	A4	HA4	Address 4	0	EPROM, SRAM ADDRESS
84	A3	HA3	Address 3	0	EPROM, SRAM ADDRESS
85	A2	HA2	Address 2	0	EPROM, SRAM ADDRESS
86	A1	HA1	Address 1(SERVO DAB)	0	EPROM, SRAM ADDRESS
87	A0	HA0	Address 0(DSP DAB)	0	EPROM, SRAM ADDRESS
88	/RD	/RD	/Read Strobe	0	/Read
89	/WR	/WR	/Write Strobe	0	/Write
90	P52	RSTB	RF&Servo IC Reset	0	KS1461 (73), KS1452 (9)
91	Vss	DGND		-	DGND
92	PA0	RFRP	Tracking Lock monitir from SERVO	I	KS1452 (7)
93	PA1	TILTO	Monitor signal	I	KS1452 (69)
94	PA2	MTP17	Reserved I	I	NC
95	PA3	SENSE	SENSE monitor from SERVO	I	KS1452 (22)
96	PA4	FR	Spindle direcrion from SP Driver	I	BA6849FP (20)
97	PA5	SLOCK	LOCK monitor from DSP	I	KS1453 (108)
98	PA6	FOKB	Focus lock monitor from RF	I	KS1461 (48)
99	PA7	RFO	RF sum signal (Analog Lnput)	I	RFO
100	VREFH	5D	A/D Ref Input (H)	I	5D

2-1-5 MIC2 (M27C801 ; 8Mbit (1Mbx8) UVEPROM and OTP EPROM)

LOGIC DIAGRAM

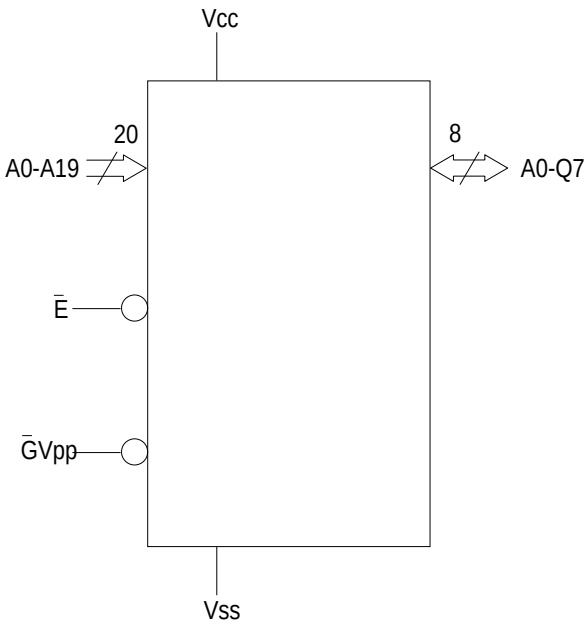

TOP VIEW

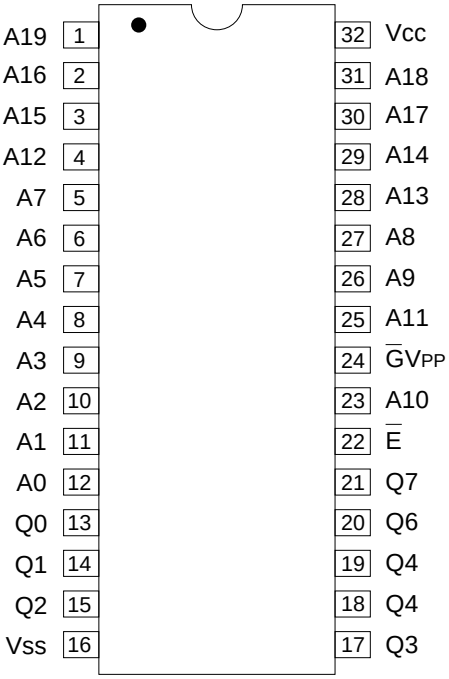

NAME	FUNCTION
A0-A19	Address Inputs
Q0-Q7	Data Outputs
$\overline{E}$	Chip Enable
$\overline{O}$Vpp	Output Enable/Program Supply
Vcc	Supply Voltage
Vss	Ground

2-1-6 MIC3 (W24256A ; 32K x 8 High Speed CMOS Static RAM)

BLOCK DIAGRAM

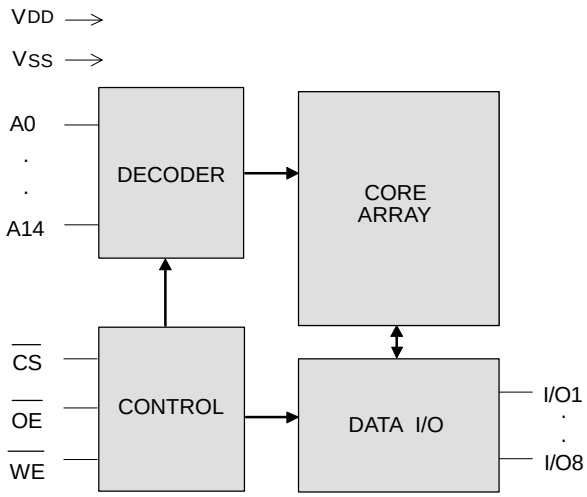

TOP VIEW

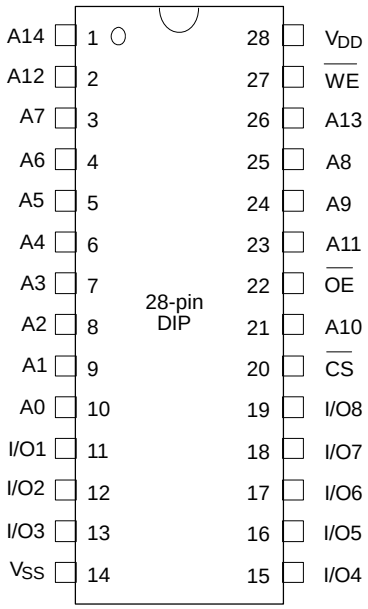

SYMBOL	DESCRIPTION
A0 - A14	Address Inputs
I/O1 - I/O8	Data Inputs/Outputs
$\overline{CS}$	Chip Select Input
$\overline{WE}$	Write Enable Input
$\overline{OE}$	Output Enable Input
V DD	Power Supply
V SS	Ground

2-1-7 FIC1 (LC86P6232 ; Front Micom)

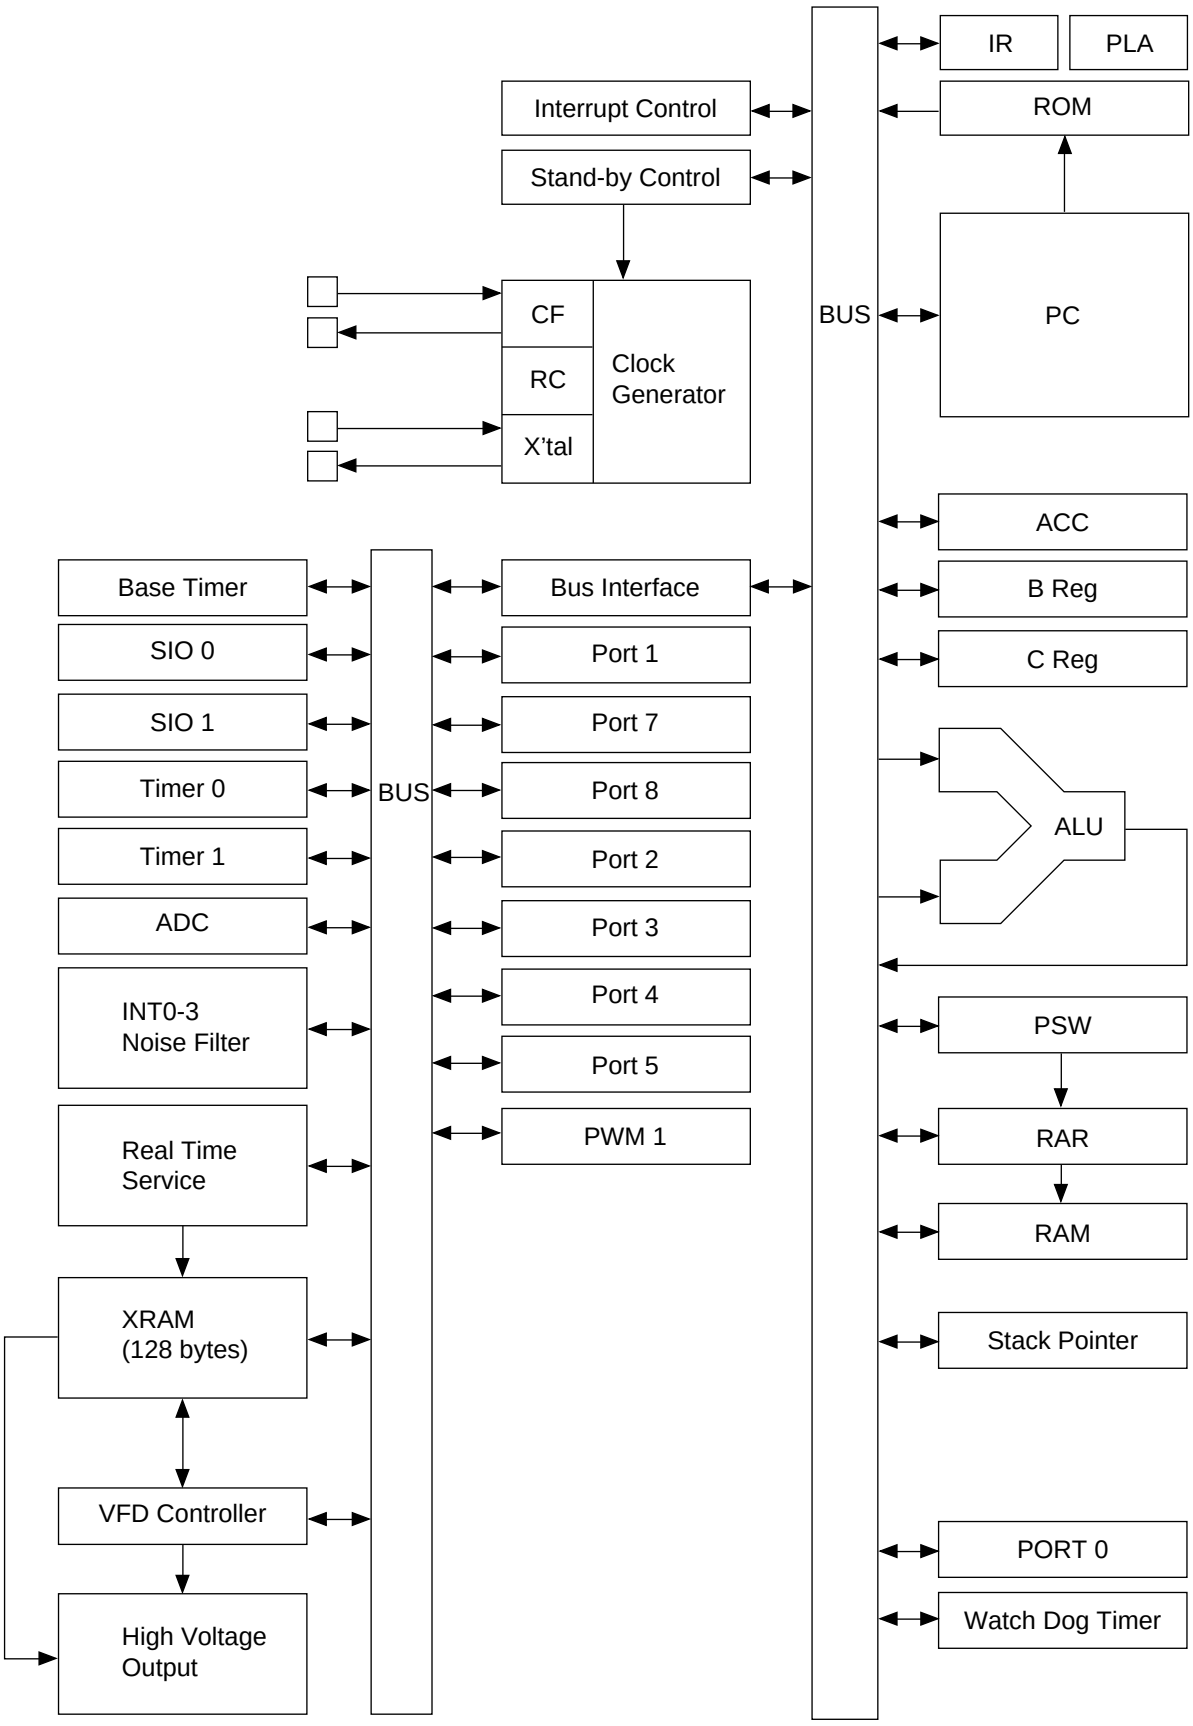

NO	PORT NAME	TYPE	ASSIGNED NAME	DESCRIPTION	REMARK
1	P52	0	MRST	Front end reset	RESET
2	PWM1	-	TP1		NC
3	P20	0	CS1	Chip Select 1	AK4393
4	P21	0	CCLK	Control Data Clock	AK4393/AK4356
5	P22	0	CDTI	Control Data	AK4393/AK4356
6	P23	0	CS2	Chip Select 2	AK4356
7	P24	0	DARST	PD(Power Down)	AK4393
8	P25	0	DARST 1	PD(Power Down)	AK4356
9	P26	0	VMUTE0	BA7660 MUTE(VIC2)	VIDEO(RESERVED)
10	P27	0	VMUTE1	BA7660 MUTE(VIC1)	VIDEO(RESERVED)
11	TEST1	-	TP4		NC
12	*RES	I	*RES	Reset	
13	XT1	-	GND	Low Frequency OSC in	
14	XT2	-	TP5	Low Frequency OSC out	
15	VSS	-	GND		
16	CF1	I	-	High Frequency OSC in	
17	CF2	0	-	High Frequency OSC out	
18	VDD	-	VDD		
19	ANO/P8 0	I	ECHO_VR	ECHO volume A/D input	KARAOKE
20	AN1/P8 1	I	MIC_DET	MIC detect	KARAOKE
21	AN2/P8 2	-	TP19		NC
22	AN3/P8 3	I	KEY0	KEY SCAN	TACT SW
23	AN4/P8 4	I	KEY1	KEY SCAN	TACT SW
24	AN5/P8 5	I	KEY2	KEY SCAN	TACT SW
25	AN6/P8 6	-	NC		
26	AN7/P8 7	-	NC		
27	P70/IN TO	I	RRQ	Request to Front Micom	MAIN MICOM
28	P71/IN T1	-	TP25		NC
29	P72/IN T2	-	TP26		NC
30	P73/IN T3	I	REMOCON	REMOCON data in	REMOCON EYE
31	S0/T0	0	GRID11	FLT GRID CONTROL	FLT
32	S1/T1	0	GRID10	FLT GRID CONTROL	FLT
33	S2/T2	0	GRID9	FLT GRID CONTROL	FLT
34	S3/T3	0	GRID8	FLT GRID CONTROL	FLT
35	S4/T4	0	GRID7	FLT GRID CONTROL	FLT
36	S5/T5	0	GRID6	FLT GRID CONTROL	FLT
37	S6/T6	0	GRID5	FLT GRID CONTROL	FLT
38	S7/T7	0	GRID4	FLT GRID CONTROL	FLT
39	S8/T8	0	GRID3	FLT GRID CONTROL	FLT
40	S9/T9	0	GRID2	FLT GRID CONTROL	FLT
41	S10/T10	0	GRID1	FLT GRID CONTROL	FLT
42	S11/T11	0			
43	S12/T12	0	SEG1	FLT SEGMENT CONTROL	FLT
44	S13/T13	0	SEG2	FLT SEGMENT CONTROL	FLT
45	S14/T14	0	SEG3	FLT SEGMENT CONTROL	FLT
46	S15/T15	0	SEG4	FLT SEGMENT CONTROL	FLT
47	VOD	-	+5V		
48	VP	-	-28V		
49	S16	0	SEG5	FLT SEGMENT CONTROL	FLT
50	S17	0	SEG6	FLT SEGMENT CONTROL	FLT

NO	PORT NAME	TYPE	ASSIGNED NAME	DESCRIPTION	REMARK
51	S18	-	SEG7	FLT SEGMENT CONTROL	FLT
52	S19	-	SEG8	FLT SEGMENT CONTROL	FLT
53	S20	-	SEG9	FLT SEGMENT CONTROL	FLT
54	S21	0	SEG10	FLT SEGMENT CONTROL	FLT
55	S22	0	SEG11	FLT SEGMENT CONTROL	FLT
56	S23	0	SEG12	FLT SEGMENT CONTROL	FLT
57	S24	0	SEG13	FLT SEGMENT CONTROL	FLT
58	S25	0	SEG14	FLT SEGMENT CONTROL	FLT
59	S26	0	SEG15	FLT SEGMENT CONTROL	FLT
60	S27	0	SEG16	FLT SEGMENT CONTROL	FLT
61	S28	0	SEG17	FLT SEGMENT CONTROL	FLT
62	S29	0	SEG18	FLT SEGMENT CONTROL	FLT
63	S30	0	SEG19	FLT SEGMENT CONTROL	FLT
64	S31	0	SEG20	FLT SEGMENT CONTROL	FLT
65	P00	I	MODE4	HARDWARE MODE SELECT	MARKET CODE
66	P01	I	MODE3	HARDWARE MODE SELECT	MARKET CODE
67	P02	I	MODE2	HARDWARE MODE SELECT	MARKET CODE
68	P03	I	MODE1	HARDWARE MODE SELECT	MARKET CODE
69	P04	I	MODE0	HARDWARE MODE SELECT	MARKET CODE
70	P05	-	TP10		NC
71	P06	-	TP11		NC
72	P07	--			NC
73	P10/S0 0	0	TXD	SERIAL DATA OUT	SERIAL DATA OUT
74	P11/S1 0	I	RXD	SERIAL DATA IN	SERIAL DATA IN
75	P12/SC K0	0	SCLK	SERIAL CLOCK	SERIAL CLOCK
76	P13/S0 1	-	TP12		NC
77	P14/SI 1	-	TP13		NC
78	P15/SC K1	-	TP14		NC
79	P16/BU Z	-	TP15		NC
80	P17/PW MO	-	TP16		NC
81	P30	I	S1	SHUTTLE DATA	JOG/SHUTTLE
82	P31	I	S2	SHUTTLE DATA	JOG/SHUTTLE
83	P32	I	S3	SHUTTLE DATA	JOG/SHUTTLE
84	P33	I	S4	SHUTTLE DATA	JOG/SHUTTLE
85	P34	I	J1	JOG DATA	JOG/SHUTTLE
86	P35	I	J2	JOG DATA	JOG/SHUTTLE
87	P36	I	AT	VIDEO OUT SEL.	VIDEO SELECT(OPEN)
88	P37	I	AD	VIDEO OUT SEL.	VIDEO SELECT
89	VSS	-	+5V		
90	VDD	-	GND		
91	P40	0	RGBCTL	SCART CONTROL	SCART JACK
92	P41	0	SCON_B	SCART CONTROL	SCART JACK
93	P42	-	TP28		NC
94	P43	0	WIDE	SCART CONTROL	SCART JACK
95	P44	0	SRQ	request to main micom	NC
96	P45	0	SAVE	POWER SAVE MODE	POWER
97	P46	0	AMUTE1	REAR MUTE	AUDIO
98	P47	0	AMUTE0	FRONT MUTE	AUDIO
99	P50	0	LED	STANDBY LED	LED
100	P51	0	ON/OFF	POWER ON/OFF CONTROL	POWER

2-1-8 RIC1 (KS1461 ; RF Signal Processor)

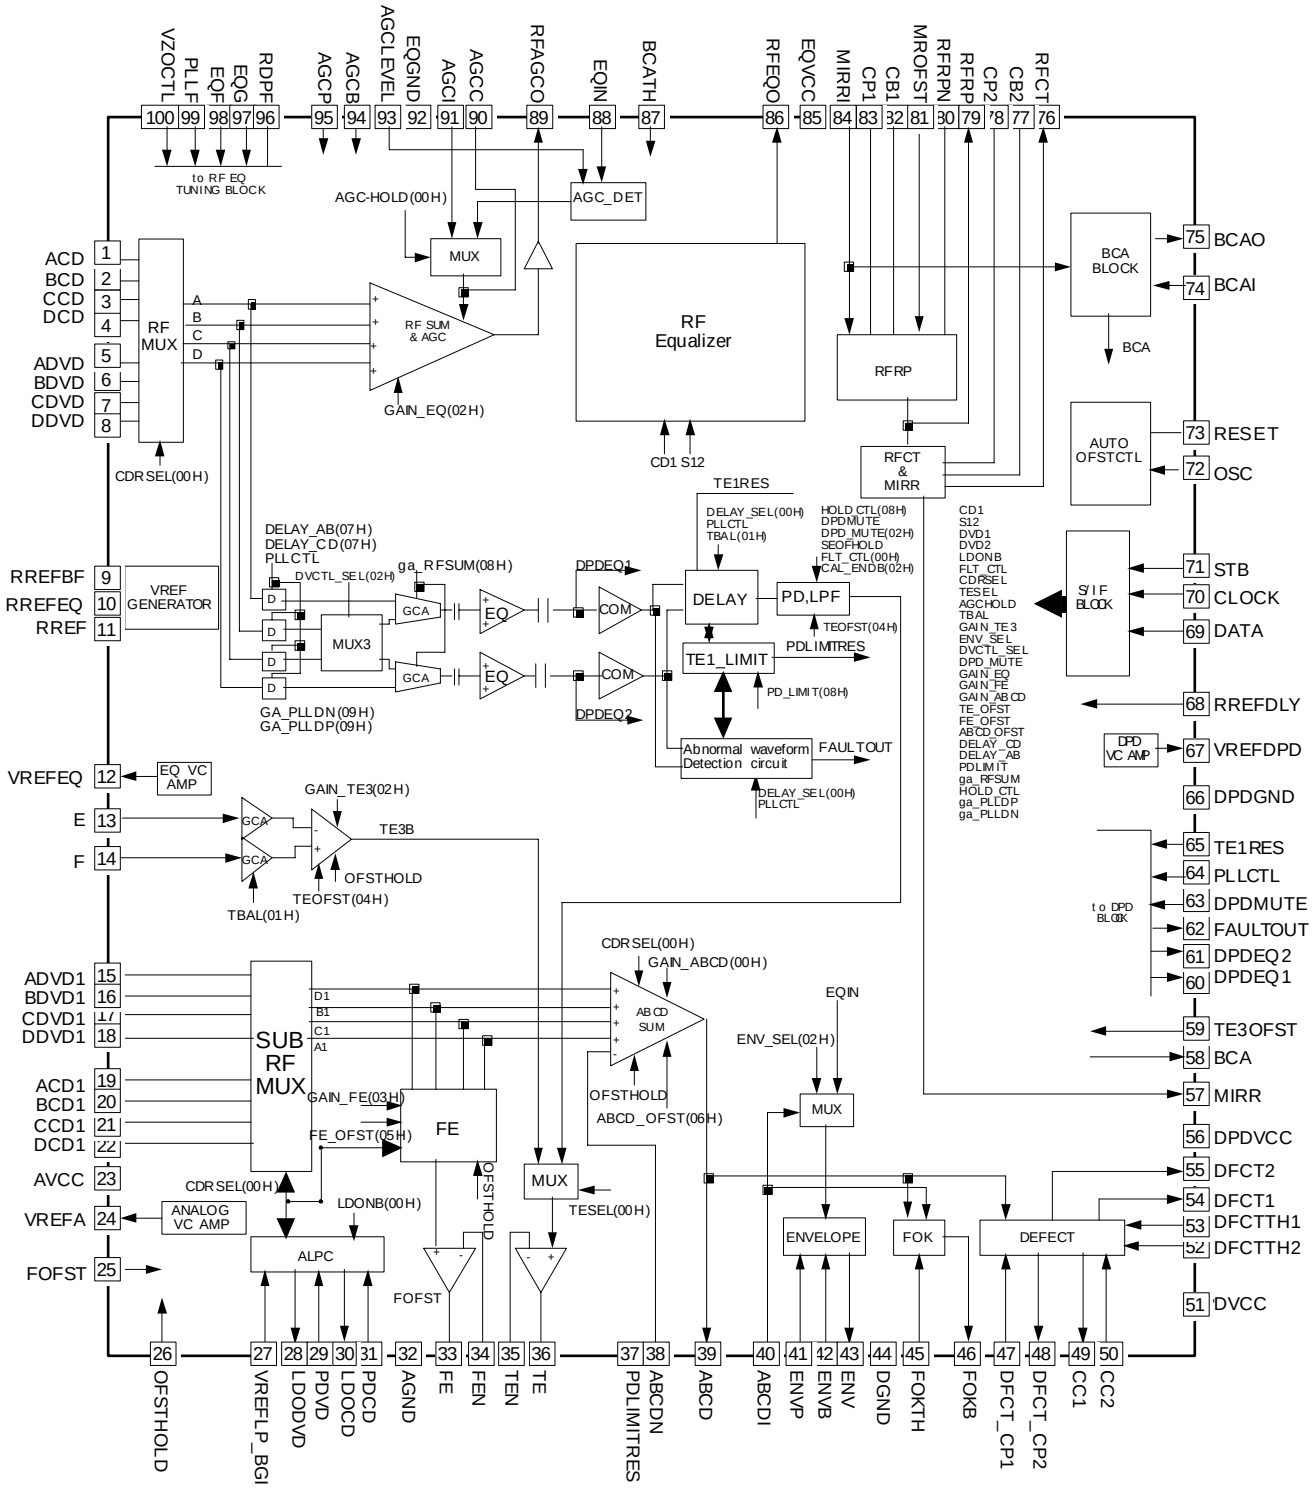

Pin No.	Pin Name	I/O	Description	Related Block	Related Part
1	ACD	I	Optical main beam A, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
2	BCD	I	Optical main beam B, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
3	CCD	I	Optical main beam C, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
4	DCD	I	Optical main beam D, AC Coupling input terminals for CD of RF block	PRE AMP	P/U
5	ADVD	I	Optical main beam A, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
6	BDVD	I	Optical main beam B, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
7	CDVD	I	Optical main beam C, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
8	DDVD	I	Optical main beam D, AC Coupling input terminals for DVD of RF block	PRE AMP	P/U
9	RREFBF	-	RF AMP I/O buffer bias resistance connection terminal	RF AMP	-
10	RREFEQ	-	RF EQ BIAS resistance connection terminal	RF EQ	-
11	RREF	-	Analog Block bias resistance connection terminal	ANALOG	-
12	VREFEQ	-	CAP connection terminal for RF EQ Center voltage	EQ VC AMP	-
13	E	I	CD Optical sub beam E input terminal for Servos	TE 3B	P/U
14	F	I	CD Optical sub beam F input terminal for Servos	TE 3B	P/U
15	ADVD1	I	Optical main beam A input terminal for DVD of Servo block	SERVO AMP	P/U
16	BDVD1	I	Optical main beam B input terminal for DVD of Servo block	SERVO AMP	P/U
17	CDVD1	I	Optical main beam C input terminal for DVD of Servo block	SERVO AMP	P/U
18	DDVD1	I	Optical main beam D input terminal for DVD of Servo block	SERVO AMP	P/U
19	ACD1	I	Optical main beam A input terminal for CD of Servo block	SERVO AMP	P/U
20	BCD1	I	Optical main beam B input terminal for CD of Servo block	SERVO AMP	P/U
21	CCD1	I	Optical main beam C input terminal for CD of Servo block	SERVO AMP	P/U
22	DCD1	I	Optical main beam D input terminal for CD of Servo block	SERVO AMP	P/U
23	AVCC	P	Power voltage input terminal for Analog Part	ANALOG	-
24	VREFA	I/O	CAP connection terminal for Analog Part center voltage Uses an external block	ANA VC AMP	SERVO
25	FOFST	-	CAP connection terminal (open) for Focus Auto Offsets	FE AMP	-
26	OFSTHOLD	I	On/Off terminal for Auto Offset Block. (L: Auto Offset Adjustments, H: Serial Offset Adjustments)	OFSTCTL	MICOM
27	VREFLP_BGI	I	Band gap voltage input block for ALPC	ALPC	-
28	LDODVD	O	Optical Laser Diodes operation voltage output terminal for DVD	ALPC	P/U
29	PDDVD	I	Optical Laser Monitor Diode voltage input terminal for DVD	ALPC	P/U
30	LDOCD	O	Optical Laser Diode operating voltage output terminal for CD	ALPC	P/U
31	PDCD	I	Optical Laser Monitor Diode voltage input terminal for CD	ALPC	P/U
32	AGND	P	Power GND terminal for Analog Part	ANALOG	-
33	FE	O	FE AMP output terminal	FE AMP	DSSP
34	FEN	I	Input terminal for selecting FE AMP Gain	FE AMP	-
35	TEN	I	Input terminal for selecting TE AMP Gain	TE AMP	-
36	TE	O	TE AMP output terminal	TE AMP	DSSP
37	PDLIMTRES	-	Bias resistance terminal for PDLIMIT	DPD	-
38	ABCDN	I	ABCD AMP for selecting Gain (-) input terminal	ABCD AMP	-
39	ABCD	O	ABCD AMP output terminal	ABCD AMP	-
40	ABCDI	I	ABCD AC Coupling input terminal for servo monitor	SERVO MONIT	-
41	ENVP	-	CAP connection terminal for selecting the RC value of Peak Hold for detecting RF Envelopes	RF ENV	-
42	ENVB	-	CAP connection terminal for selecting the RC value of Bottom Hold for detecting RF Envelopes	RF ENV	-
43	ENV	O	RF Envelope Detect Output terminal	RF ENV	DSSP
44	DGND	P	Power GND input terminal for digital circuits	DIGITAL	-
45	FOKTH	I	Focus OK comparating level input terminal	FOKB	-
46	FOKB	O	Focus OK comparator output terminal (L: Focus OK)	FOKB	DSSP
47	DFCT_CP1	-	Connection terminal for RC value of Peak Hold, for selecting the maximum time for Servo signal	DFCT	-
48	DFCT_CP2	-	Connection terminal for RC value of Peak Hold, for selecting the minimum defect time for PLL	DFCT	-
49	CC1	O	Peak Hold Output terminal for selecting the minimum Defect time for Defect	DFCT	-
50	CC2	I	Peak Hold AC Coupling Input terminal for Defect	DFCT	-
51	DVCC	P	Power voltage input terminal for digital circuit	DIGITAL	-
52	DFCTTH2	-	Resistance connection terminal for selecting the Defect Comparating Level for PLL	DEFECT	-
53	DFCTTH1	-	Resistance connection terminal for selecting the Defect Comparating Level for Servo	DEFECT	-
54	DFCT1	O	Defect output terminal for Servo	DEFECT	DSSP
55	DFCT2	O	Defect output terminal for PLL	DEFECT	PLL
56	DPDVCC	P	Power voltage input terminal for DPD TE	DPD	-
57	MIRR	O	Mirror output terminal	MIRR	DSSP
58	BCA	O	BCA output terminal	BCA	DSP

Pin No.	Pin Name	I/O	Description	Related Block	Related Part
59	TE3OFST	-	Cap connection terminal (open) for 3B TE Offset	3B TE AMP	-
60	DPDEQ1	O	DPD EQ (A+C) output terminal	DPD	-
61	DPDEQ2	O	DPD EQ (B+D) output terminal	DPD	-
62	FAULTOUT	O	DPD abnormal wave form output terminal (monitor)	DPD	-
63	DPDMUTE	I	DPD TE MUTE control terminal (H: Mute)	DPD	MICOM
64	PLLCTL	I	DPD TE PLL variable input terminal	DPD	SERVO
65	TE1RES	I	DPD TE PLL variable bias resistance	DPD	-
66	DPDGND	P	Power GND input terminal for DPD TE	DPD	-
67	VREFDPD	O	CAP connection terminal for DPD TE center voltage	DPD VC AMP	-
68	RREFDLY	-	Bias resistance connection terminal for Delay Block	Delay Block	-
69	DATA	I	Data input terminal	Serial Interface	MICOM
70	CLOCK	I	Clock input terminal	Serial Interface	MICOM
71	STB	I	Data Enable input terminal	Serial Interface	MICOM
72	OSC		Input terminal for RC value of OSC, for Auto Offset Block	Auto OFSTCTL	-
73	RESET	I	Reset input terminal (L: Reset) for Auto Offset Block	Auto OFSTCTL	MICOM
74	BCAI	I	BCA Filter1	BCA	-
75	BCAO	O	BCA Filter2 Related	BCA	-
76	RFCT	O	RF Ripple Center voltage output terminal for Mirror	MIRROR	DSSP
77	CB2	-	CAP connection terminal of RC value of Bottom Hold, for RFCT generation	MIRROR	-
78	CP2	-	CAP connection terminal of RC value of Peak Hold, for RFCT generation	MIRROR	-
79	RFRP	O	RF Ripple Amp output terminal for Mirror	MIRROR	DSSP
80	RFRPN	I	Input terminal for selecting RFRP Amp gain	MIRROR	-
81	MROFST	I	RF Ripple Offset control terminal for Mirror	MRROR	-
82	CB1	-	RC connection terminal of RC value of Bottom Hold, for RFRP generation	MRROR	-
83	CP1	-	RC connection terminal of RC value of Peak Hold, for RFRP generation	MRROR	-
84	MIRRI	I	Input terminal for MIRR signal generation	MRROR	-
85	EQVCC	P	Power voltage input signal for RF EQ	RF EQ	-
86	RFEQ0	0	RF EQ output terminal	RF EQ	PLL
87	BCATH	I	BCA Comparating Level control terminal	BCA	DSP
88	EQIN	I	RFAGCO input terminal for RF EQ	RFEQ,RFENV	DSSP
89	RFAGCO	O	RF AGC AMP output terminal	RF AGC	-
90	AGCC	-	CAP connection terminal for time constant of AGC	RF AGC	-
91	AGCI	I	AGC voltage input terminal while in AGC hold	RF AGC	-
92	EQGND	P	Power GND input terminal for RF EQ	RF EQ	-
93	AGCLEVEL	I	AGC Level control voltage input terminal (3.5 V) while in AGC hold off	RF AGC	-
94	AGCB	-	RC connection terminal for RC value of Bottom Hold, for RF AGC	RF AGC	-
95	AGCP	-	RC connection terminal for RC value of Peak Hold, for RF AGC	RF AGC	-
96	RDPF	-	Bias resistance connection terminal for selecting RF EQ frequency	RF EQ	-
97	EQG	I	RF EQ Boost Gain control voltage input terminal	RF EQ	DSSP
98	EQF	I	RF EQ Peak Frequency control voltage input terminal	RF EQ	DSSP
99	PLLF	I	Wide-band PLL compatible RF EQ Peak Frequency Control terminal	RF EQ	DSSP
100	VZOCTL	I	RF EQ zero control terminal	RF EQ	DSSP

2-1-9 SIC1 (KS1452 ; Servo Processor)

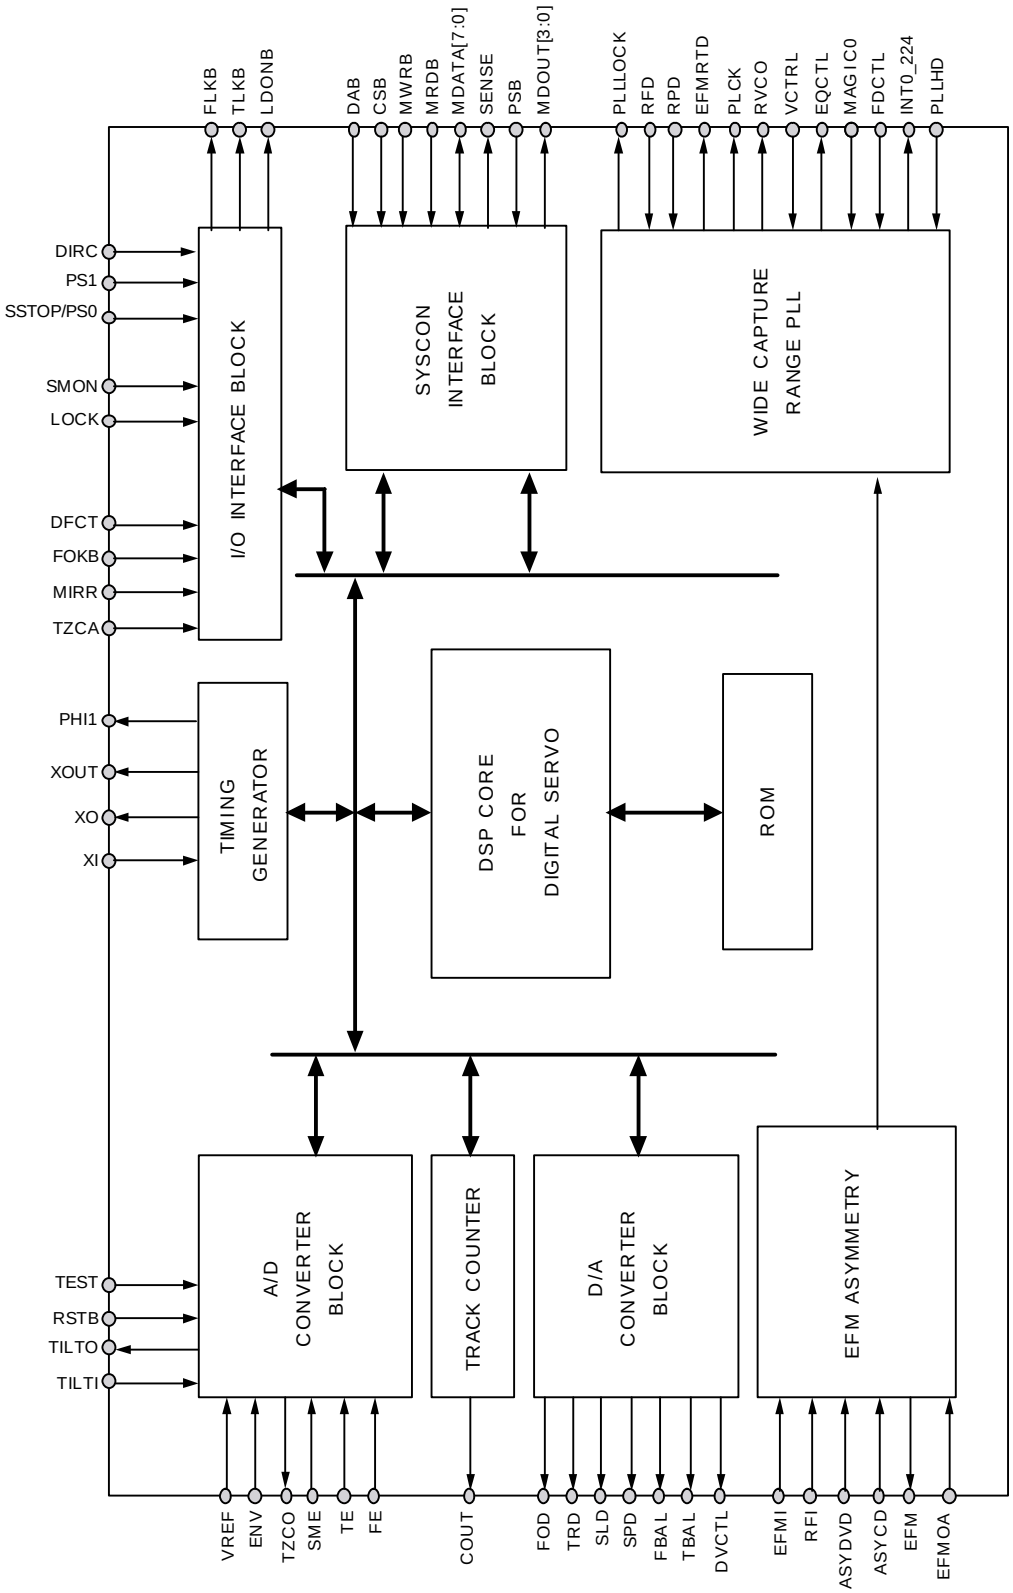

No	Name	I/O	Description
1	MDOUT3	O	Mode data3 out controlled by micom
2	SSTOP/PS0PS1	I	Limit switch/sled position sensor input pin0
3	PS1	I	Sled motor position sensor input pin1
4	TEST	I	Test pin (L: normal H: test)
5	COUT	O	Counter clock
6	FLKB	O	Focus servo lock signal output pin
7	TLKB	O	Tracking servo lock signal output pin
8	PSB	I	0: 1 Bit, 1: 8 Bit
9	RSTB	I	System reset signal input pin
10	CSB	I	MICOM chip select pin
11	DAB	I	MICOM data/addrs select pin
12	MWRB	I	MICOM write clock signal input pin
13	MRDB	I	MICOM read clock signal input pin
14	MDATA0	I/O	MICOM data pin0
15	MDATA1	I/O	MICOM data pin1
16	MDATA2	I/O	MICOM data pin2
17	MDATA3	I/O	MICOM data pin3
18	MDATA4	I/O	MICOM data pin4
19	MDATA5	I/O	MICOM data pin5
20	MDATA6	I/O	MICOM data pin6
21	MDATA7	I/O	MICOM data pin7
22	SENSE	O	Internal status monitor pin
23	DVDD	P	Servo logic & ROM VDD power supply pin
24	XI	I	System clock signal input pin
25	XO	O	System clock signal output pin
26	XOUT	O	Clock out (33.9688MHz) to DSP
27	DVSS	P	Servo logic & ROM VSS power supply pin
28	SQCK	O	Clock output pin for subcode data read
29	SQSI	I	Subcode data input pin
30	SCOR	I	Timing detection input pin for subcode data read
31	SMON	I	Motor ON signal input pin
32	LOCK	I	Lock signal input pin
33	DIRC	I	Direct jump control (for 1 track jump)
34	FOKB	I	Focus OK signal input pin
35	FDCTL	I	PLL frequency detect control input pin
36	LDONB	O	Laser diode ON signal output pin
37	DFCT	I	Defect detection signal input pin
38	MIRR	I	Mirror signal input pin
39	PLLHD	I	PLL hold signal from micom
40	INT0_224	O	Servo interrupt monitor pin

No	Name	I/O	Description
41	PVDD	P	PLL logic block VDD power supply pin
42	PLCK	O	PLCK
43	PLLLOCK	O	Frequency lock detect output (H: lock, L: unlock)
44	EFMRTD	O	Latched EFM output signal
45	PVSS	P	PLL logic block VSS power supply pin
46	RVCO	I	Resistor pin for VCO gain
47	RFD	I	Gain adjust resister for frequency detector
48	RPD	I	Gain adjust resister for phase detector
49	VCTL	I	control voltage for VCO
50	MAGIC0	I	Input for controlling hysteresis of the FD output (for testing)
51	EFMOA	I	EFM offset adjustment pin
52	TZCO	O	Tracking zero cross output pin
53	SVDD	P	Servo CPU VDD power supply pin
54	EQCTL	O	EQ control signal
55	EFMI	I	EFM signal for test
56	EFMO	O	EFM signal
57	LPFDVD	I	Asymmetric input signal for DVD
58	LPFCD	I	Asymmetric input signal for CD
59	RFI	I	Rf input signal
60	SVSS	P	Servo CPU VSS power supply pin
61	AVSS	P	Analog block VSS power supply pin
62	SME	I	Spindle error input pin
63	VREF	I	Reference voltage input pin
64	TE	I	Tracking error signal input pin
65	FE	I	Focus error signal input pin
66	ENV	I	RF envelope input pin
67	TILTI	I	TILT in (reserved)
68	AVDD	P	Analog block VDD power supply pin
69	TILTO	O	TILT out (reserved)
70	DVCTL	O	Depth variation control signal output pin
71	TBAL	O	Tracking balance signal output pin
72	FBAL	O	Focus balance signal output pin
73	SLD	O	Sled motor drive signal output pin
74	SPD	O	Spindle motor drive signal output pin
75	FOD	O	Focus actuator drive signal output pin
76	TRD	O	Tracking actuator drive signal output pin
77	TZCA	I	TE signal for tracking zero cross input pin
78	MDOUT0	O	Mode data0 out controlled by micom
79	MDOUT1	O	Mode data1 out controlled by micom
80	MDOUT2	O	Mode data2 out controlled by micom

2-1-10 SIC4 (KA3017 ; Motor & Actuator Driver)

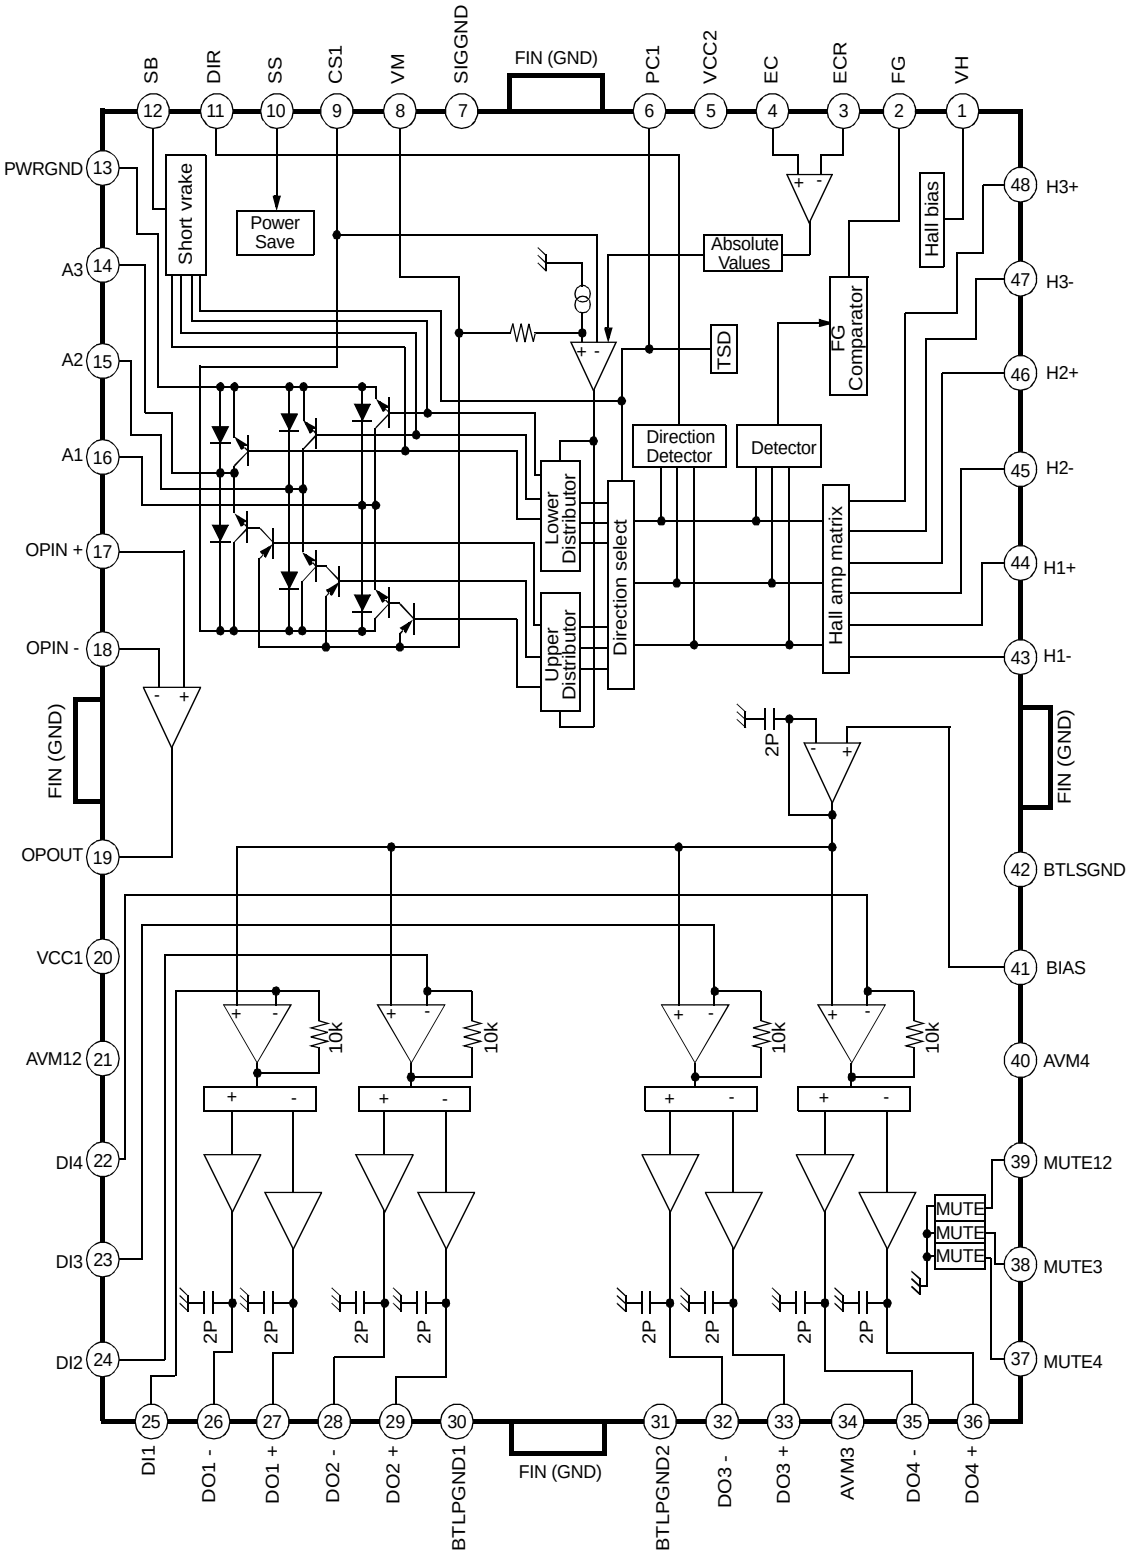

No.	Symbol	I/O	Description
1	VH	I	HALL BIAS
2	FG	O	FG SIGNAL OUTPUT
3	ECR	I	TORQUE CONTROL REFERENCE
4	EC	I	TORQUE CONTROL SIGNAL
5	VCC2	—	SUPPLY VOLTAGE
6	PC1	—	PHASE COMPENSATION CAPACITOR
7	SIGGND	—	SIGNAL GROUND
8	VM	—	MOTOR SUPPLY VOLTAGE
9	CS1	I	CURRENT SENSOR
10	S/S	I	START/STOP
11	DIR	O	3-PHASE ROTATIONAL DIRECTION OUTPUT
12	SB	I	SHORT BRAKE
13	PWRGND	—	POWER GROUND
14	A3	O	3-PHASE OUTPUT 3
15	A2	O	3-PHASE OUTPUT 2
16	A1	O	3-PHASE OUTPUT 1
17	OPIN+	I	OP AMP INPUT (+)
18	OPIN-	I	OP AMP INPUT (-)
19	OPOUT	O	OP AMP OUTPUT
20	VCC1	—	SUPPLY VOLTAGE
21	AVM12	—	BTL CH-1, 2 MOTOR SUPPLY VOLTAGE
22	DI4	I	BTL DRIVE INPUT 4
23	DI3	I	BTL DRIVE INPUT 3
24	DI2	I	BTL DRIVE INPUT 2
25	DI1	I	BTL DRIVE INPUT 1
26	DO1-	O	BTL DRIVE 1 OUTPUT (-)
27	DO1+	O	BTL DRIVE 1 OUTPUT (+)
28	DO2-	O	BTL DRIVE 2 OUTPUT (-)
29	DO2+	O	BTL DRIVE 2 OUTPUT (+)
30	BTLPGND1	—	BTL POWER GROUND 1
31	BTLPGND2	—	BTL POWER GROUND 2
32	DO3-	O	BTL DRIVE 3 OUTPUT (-)
33	DO3+	O	BTL DRIVE 3 OUTPUT (+)
34	AVM3	—	BTL CH3 MOTOR SUPPLY VOLTAGE
35	DO4-	O	BTL DRIVE 4 OUTPUT (-)
36	DO4+	O	BTL DRIVE 4 OUTPUT (+)
37	MUTE4	I	BTL DRIVE MUTE CH 4
38	MUTE3	I	BTL DRIVE MUTE CH 3
39	MUTE12	I	BTL DRIVE MUTE CH 1, 2
40	AVM4	—	BTL CH 4 MOTOR SUPPLY VOLTAGE
41	BIAS	—	BTL BIAS VOLTAGE
42	BTLSGND	—	BTL DRIVE SIGNAL GROUND
43	H1-	I	HALL1(-) INPUT
44	H1+	I	HALL1(+) INPUT
45	H2-	I	HALL2(-) INPUT
46	H2+	I	HALL2(+) INPUT
47	H3-	I	HALL3(-) INPUT
48	H3+	I	HALL3(+) INPUT

2-1-11 ZIC1 (ZIVA 4.1 ; A/V Decoder)

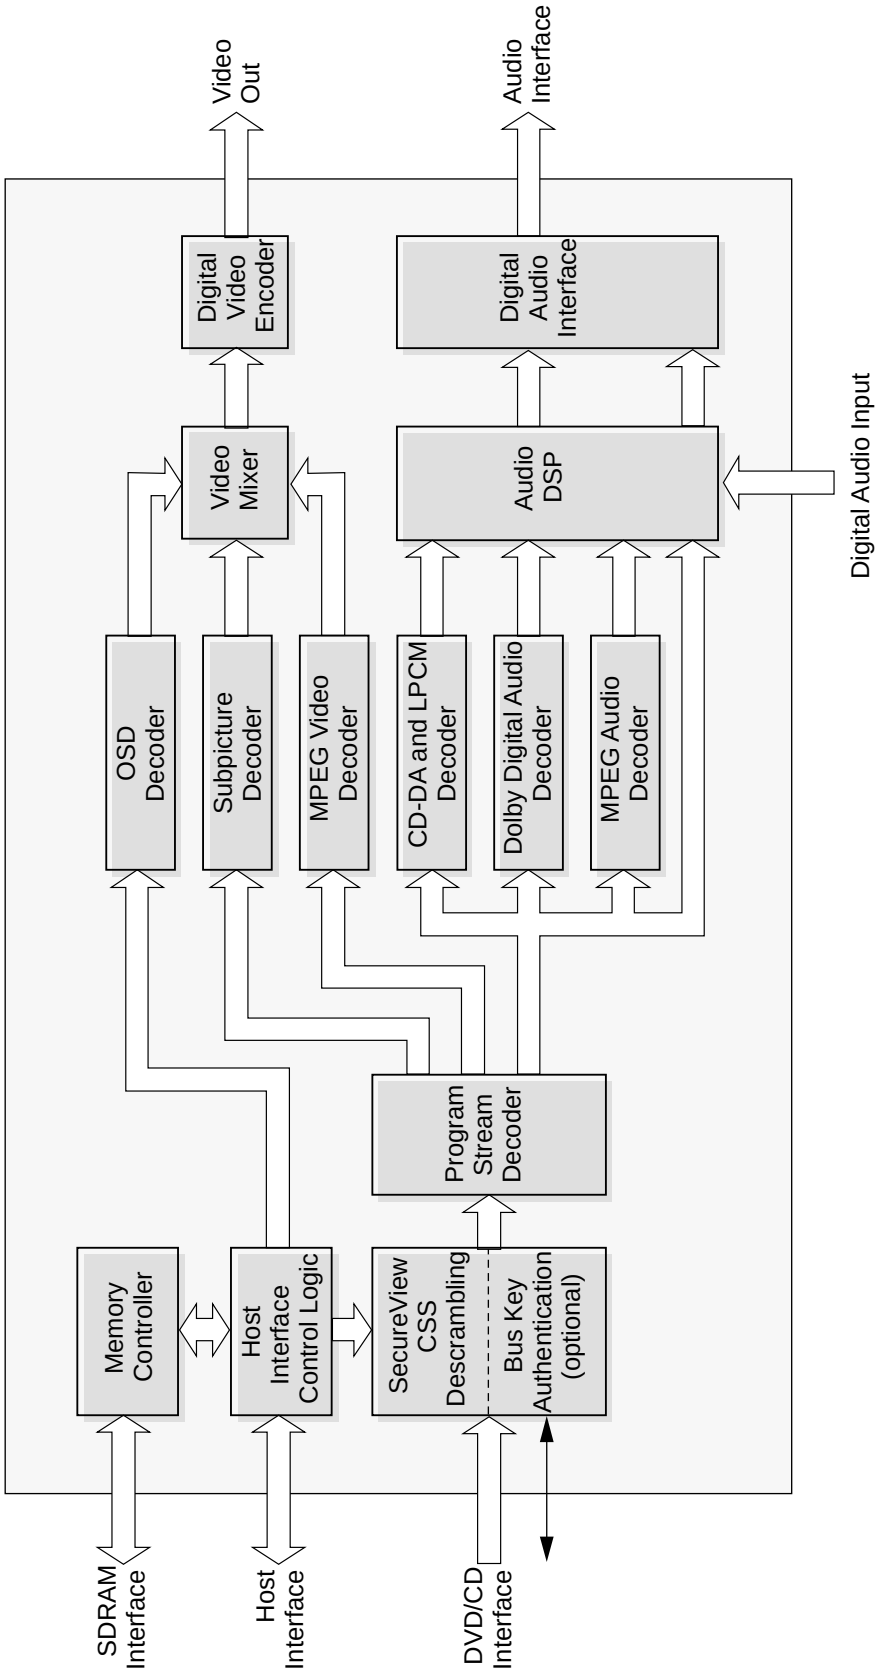

Pin No.	Pin Name	I/O Voltage	I/O Type
1	$\overline{RD}$	3.3V	I
2	R/$\overline{W}$	3.3V	I
3	VDD_3.3	3.3V	
4	$\overline{WAIT}$	3.3V	O, OD, PU
5	$\overline{RESET}$	3.3V	I
6	VSS	GROUND	
7	VDD_3.3	3.3V	
8	$\overline{INT}$	3.3V	O, OD, PU
9	NC	No Connect	O
10	NC	No Connect	O
11	NC	No Connect	O
12	NC	No Connect	O
13	VDD_2.5	2.5V	
14	VSS	GROUND	
15	NC	No Connect	O
16	NC	No Connect	O
17	NC	No Connect	O
18	NC	No Connect	O
19	VSS	GROUND	
20	VDD_3.3	3.3V	
21	VDATA0	3.3V	O
22	VDATA1	3.3V	O
23	VDATA2	3.3V	O
24	VDATA3	3.3V	O
25	VDATA4	3.3V	O
26	VDATA5	3.3V	O
27	VDATA6	3.3V	O
28	VDATA7	3.3V	O
29	$\overline{VSYNC}$	3.3V	I/O
30	$\overline{HSYNC}$	3.3V	I/O
31	VSS	GROUND	
32	VDD_3.3	3.3V	
33	RESERVED	3.3V	I
34	RESERVED	3.3V	I
35	RESERVED	3.3V	I
36	VDD_2.5	2.5V	
37	VSS	GROUND	
38	RESERVED	3.3V	I
39	RESERVED	3.3V	I
40	RESERVED	3.3V	I
41	RESERVED	3.3V	I
42	RESERVED	3.3V	I
43	PIO0	3.3V	I/O
44	VSS	GROUND	
45	VDD_3.3	3.3V	
46	PIO1	3.3V	I/O
47	PIO2	3.3V	I/O
48	PIO3	3.3V	I/O

Pin No.	Pin Name	I/O Voltage	I/O Type
49	PIO4	3.3V	I/O
50	PIO5	3.3V	I/O
51	PIO6	3.3V	I/O
52	PIO7	3.3V	I/O
53	MDATA0	3.3V	I/O
54	MDATA1	3.3V	I/O
55	VDD_3.3	3.3V	
56	VSS	GROUND	
57	MDATA2	3.3V	I/O
58	MDATA3	3.3V	I/O
59	MDATA4	3.3V	I/O
60	MDATA5	3.3V	I/O
61	MDATA6	3.3V	I/O
62	MDATA7	3.3V	I/O
63	MDATA15	3.3V	I/O
64	VDD_3.3	3.3V	I/O
65	VSS	GROUND	I/O
66	MDATA14	3.3V	I/O
67	VDD_2.5	2.5V	
68	VSS	GROUND	
69	MDATA13	3.3V	I/O
70	MDATA12	3.3V	I/O
71	MDATA11	3.3V	I/O
72	MDATA10	3.3V	I/O
73	MDATA9	3.3V	I/O
74	VDD_3.3	3.3V	
75	VSS	GROUND	
76	MDATA8	3.3V	I/O
77	LDQM	3.3V	O
78	SD-CLK	3.3V	O
79	CLKSEL	3.3V	I
80	MADDR9	3.3V	O
81	MADDR8	3.3V	O
82	VDD_3.3	3.3V	
83	VSS	GROUND	
84	MADDR7	3.3V	O
85	MADDR6	3.3V	O
86	MADDR5	3.3V	O
87	VDD_2.5	2.5V	
88	VSS	GROUND	
89	MADDR4	3.3V	O
90	$\overline{MWE}$	3.3V	O
91	$\overline{SD\text{-}CAS}$	3.3V	O
92	VDD_3.3	3.3V	
93	VSS	GROUND	
94	$\overline{SD\text{-}RAS}$	3.3V	O
95	$\overline{SD\text{-}CS0}$	3.3V	O
96	$\overline{SD\text{-}CS1}$/MADDR11	3.3V	O

Pin No.	Pin Name	I/O Voltage	I/O Type
97	$\overline{SD\text{-}BS}$	3.3V	O
98	MADDR10	3.3V	O
99	MADDR0	3.3V	O
100	VDD_3.3	3.3V	
101	VSS	GROUND	
102	MADDR1	3.3V	O
103	MADDR2	3.3V	O
104	MADDR3	3.3V	O
105	RESERVED	ANALOG GND	
106	NC	No connect	O
107	NC	No connect	O
108	RESERVED	3.3V	I
109	NC	No connect	O
110	RESERVED	3.3V	I
111	RESERVED	3.3V ANALOG	
112	RESERVED	3.3V	I
113	DAI-LRCK	3.3V	I/O
114	DAI-BCK	3.3V	I/O
115	VDD_3.3	3.3V	
116	VSS	GROUND	
117	DAI-DATA	3.3V	I/O
118	DA-DATA3	3.3V	O
119	DA-DATA2	3.3V	O
120	DA-DATA1	3.3V	O
121	DA-DATA0	3.3V	O
122	DA-LRCK	3.3V	O
123	VDD_3.3	3.3V	
124	VSS	GROUND	
125	DA-XCK	3.3V	I/O
126	DA-BCK	3.3V	O
127	DA-IEC	3.3V	O
128	VDD_2.5	2.5V	
129	VSS	GROUND	
130	NC	No Connect	O
131	VSS_DAC	ANALOG GND	
132	VSS_VIDEO	ANALOG GND	
133	CVBS + sync	3.3V ANALOG	O
134	VDD_DAC	3.3V ANALOG	O
135	VDD_VIDEO	3.3V ANALOG	
136	NC	No Connect	O
137	VSS_DAC	ANALOG GND	
138	VSS_VIDEO	ANALOG GND	
139	CVBS/G/Y	3.3V ANALOG	O
140	VDD_DAC	3.3V ANALOG	
141	VDD_VIDEO	3.3V ANALOG	
142	NC	No Connect	O
143	VSS_DAC	ANALOG GND	

Pin No.	Pin Name	I/O Voltage	I/O Type
144	VSS_VIDEO	ANALOG GND	
145	Y/B/U	3.3V ANALOG	O
146	VDD_DAC	3.3V ANALOG	
147	VDD_VIDEO	3.3V ANALOG	
148	NC	No Connect	O
149	VSS_DAC	ANALOG GND	
150	VSS_VIDEO	ANALOG GND	
151	C/R/V	3.3V ANALOG	O
152	VDD_DAC	3.3V ANALOG	
153	VDD_VIDEO	3.3V ANALOG	
154	VSS_RREF	ANALOG GND	
155	RREF	3.3V ANALOG	O
156	VDD_RREF	3.3V ANALOG	
157	A_VSS	GROUND	
158	SYSCLK	3.3V	I
159	VCLK	3.3V	I
160	A_VDD	3.3V ANALOG	
161	DVD-DATA0/CD-DATA	3.3V	I
162	DVD-DATA1/CD-LRCK	3.3V	I
163	DVD-DATA2/CD-BCK	3.3V	I
164	DVD-DATA3/CD-C2P0	3.3V	I
165	DVD-DATA4/CDG-SDATA	3.3V	I
166	VSS	GROUND	
167	VDD_3.3	3.3V	
168	DVD-DATA5/CDG-VFSY	3.3V	I
169	DVD-DATA6/CDG-S0S1	3.3V	I
170	DVD-DATA7/CDG-SCLK	3.3V	I
171	VDACK	3.3V	I
172	VREQUEST	3.3V	O
173	VSTROBE	3.3V	I
174	ERROR	3.3V	I
175	VDD_3.3	3.3V	
176	RESERVED	GROUND	
177	VDD_3.3	3.3V	
178	VSS	GROUND	
179	NC	No connect	O
180	NC	No connect	O
181	NC	No connect	O
182	HADDR0	3.3V	I
183	HADDR1	3.3V	I
184	HADDR2	3.3V	I
185	RESERVED	3.3V	I
186	RESERVED	3.3V	I
187	RESERVED	3.3V	I
188	VSS	GROUND	
189	VDD_2.5	2.5V	
190	RESERVED	3.3V	I

Pin No.	Pin Name	I/O Voltage	I/O Type
191	VSS	GROUND	
192	VDD_3.3	3.3V	
193	RESERVED	3.3V	I
194	RESERVED	3.3V	I
195	RESERVED	3.3V	I
196	RESERVED	3.3V	I
197	HDATA7	3.3V	I/O
198	VSS	GROUND	

Pin No.	Pin Name	I/O Voltage	I/O Type
199	HDATA6	3.3V	I/O
200	HDATA5	3.3V	I/O
201	HDATA4	3.3V	I/O
202	HDATA3	3.3V	I/O
203	HDATA2	3.3V	I/O
204	VDD_3.3	3.3V	
205	VSS	3.3V	
206	HDATA1	3.3V	I/O
207	HDATA0	3.3V	I/O
208	$\overline{CS}$	3.3V	I

2-1-12 ZIC2/ZIC3 (KM416S1120D ; CMOS 16M SDRAM)

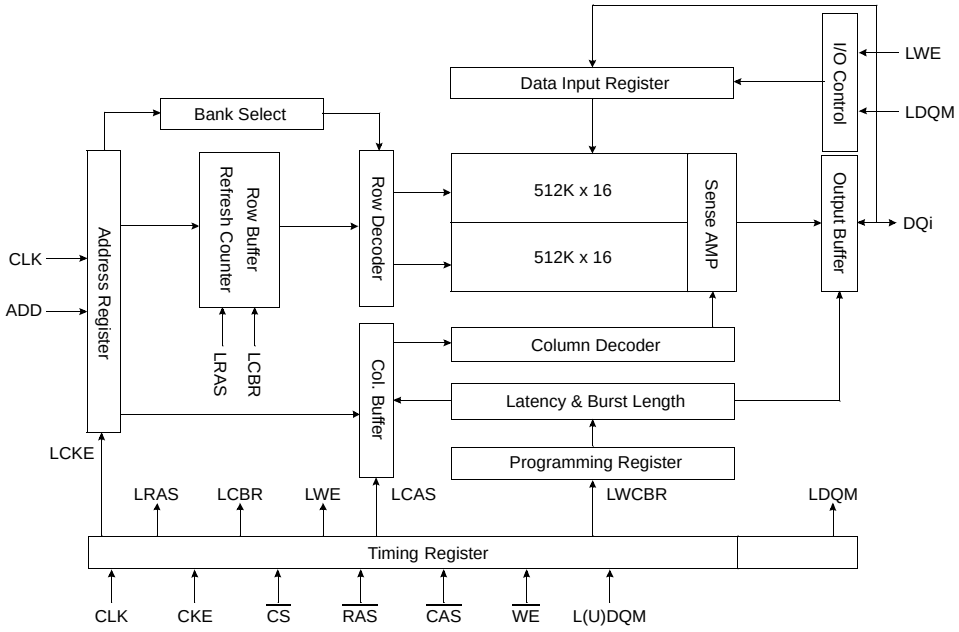

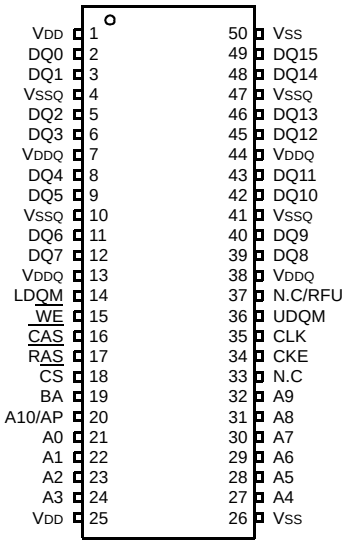

Pin	Name	InputFunction
CLK	System Clock	Active on the positive going edge to sample all inputs.
$\overline{CS}$	Chip Select	Disables or enables device operation by masking or enabling all inputs except CLK, CKE and L(U)DQM
CKE	Clock Enable	Masks system clock to freeze operation from the next clock cycle. CKE should be enabled at least one cycle prior to new command. Disable input buffers for power down in standby.
A_0 ~ A_{10}/AP	Address	Row / column addresses are multiplexed on the same pins. Row address : RA_0 ~ RA_{10}, column address : CA_0 ~ CA_7
BA	Bank Select Address	Selects bank to be activated during row address latch time. Selects bank for read/write during column address latch time.
$\overline{RAS}$	Row Address Strobe	Latches row addresses on the positive going edge of the CLK with $\overline{RAS}$ low. Enables row access & precharge.
$\overline{CAS}$	Column Address Strobe	Latches column addresses on the positive going edge of the CLK with $\overline{CAS}$ low. Enables column access.
$\overline{WE}$	Write Enable	Enables write operation and row precharge. Latches data in starting from CAS, WE active.
L(U)DQM	Data Input/Output Mask	Makes data output Hi-Z, t_{SHZ} after the clock and masks the output. Blocks data input when L(U)DQM active.
$DQ_{0 \sim 15}$	Data Input/Output	Data inputs/outputs are multiplexed on the same pins.
V_{DD}/V_{SS}	Power Supply/Ground	Power and ground for the input buffers and the core logic.
V_{DDQ}/V_{SSQ}	Data Output Power/Ground	Isolated power supply and ground for the output buffers to provide improved noise immunity.
N.C/RFU	No Connection/ Reserved for Future Use	This pin is recommended to be left No Connection on the device.

MEMO

3. Product Specifications

GENERAL	Power Requirements	AC 110 - 240V, 50/60Hz
	Power Consumption	17W
	Weight	3.1kg
	Dimensions	W 430mm X D 280mm X 89mm
	Operating Temperature Range	+5°C ~ +35°C
	Operating Humidity Range	10% to 75%
DISC	DVD (Digital Versatile Disc)	Reading Speed : 3.49 m/sec
		Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 12Cm (Compact Disc)	Reading Speed : 1.2 to 1.4 m/sec
		Maximum Play Time : 74min.
	CD : 8Cm (Compact Disc)	Reading Speed : 1.2to 1.4 m/sec.
		Maximum Play Time : 20min.
	VCD : 12Cm	Reading Speed : 1.2 to 1.4 m/sec.
		Maximum Play Time : 74min. (Video + Audio)
Video Output	Composite Video	2 channel : 1.0Vp-p (75ohm load)
	Scart Jack	R(Red) : 0.714 Vp-p (75ohm load)
		G(Green) : 0.714 Vp-p (75ohm load)
		B(Blue) : 0.714 Vp-p (75ohm load)
		Composite Video : 0.714 Vp-p (75ohm load)
		Color Signal : 0.286 Vp-p (75ohm load)
	S-Video	Luminance Signal : 1Vp-p (75ohm load)
		Color Signal : 0.286Vp-p (75ohm load)
Audio Output	Scart Jack	2 Channel : L(1.L), R(2/R)
	2 Channel	L (1/L), R (2/R)
	* Frequency Response	48KHz Sampling : 4Hz to 22 KHz
		96KHz Sampling : 4Hz to 44KHz
	* S/N Ratio	115dB
	* Dynamic Range	105dB
	* Total Harmonic Distortion	0.003%

* : Nominal specification

MEMO

4. Disassembly and Reassembly

4-1 Cabinet and PCB

Note : Reassembly in reverse order.

4-1-1 Top Cabinet Removal

1) Remove 3 Screws ❶ on the back Top Cabinet.
2) Remove 2 Screws ❷, ❸ on the left and right side.
3) Lift up the Top Cabinet in direction of arrow.

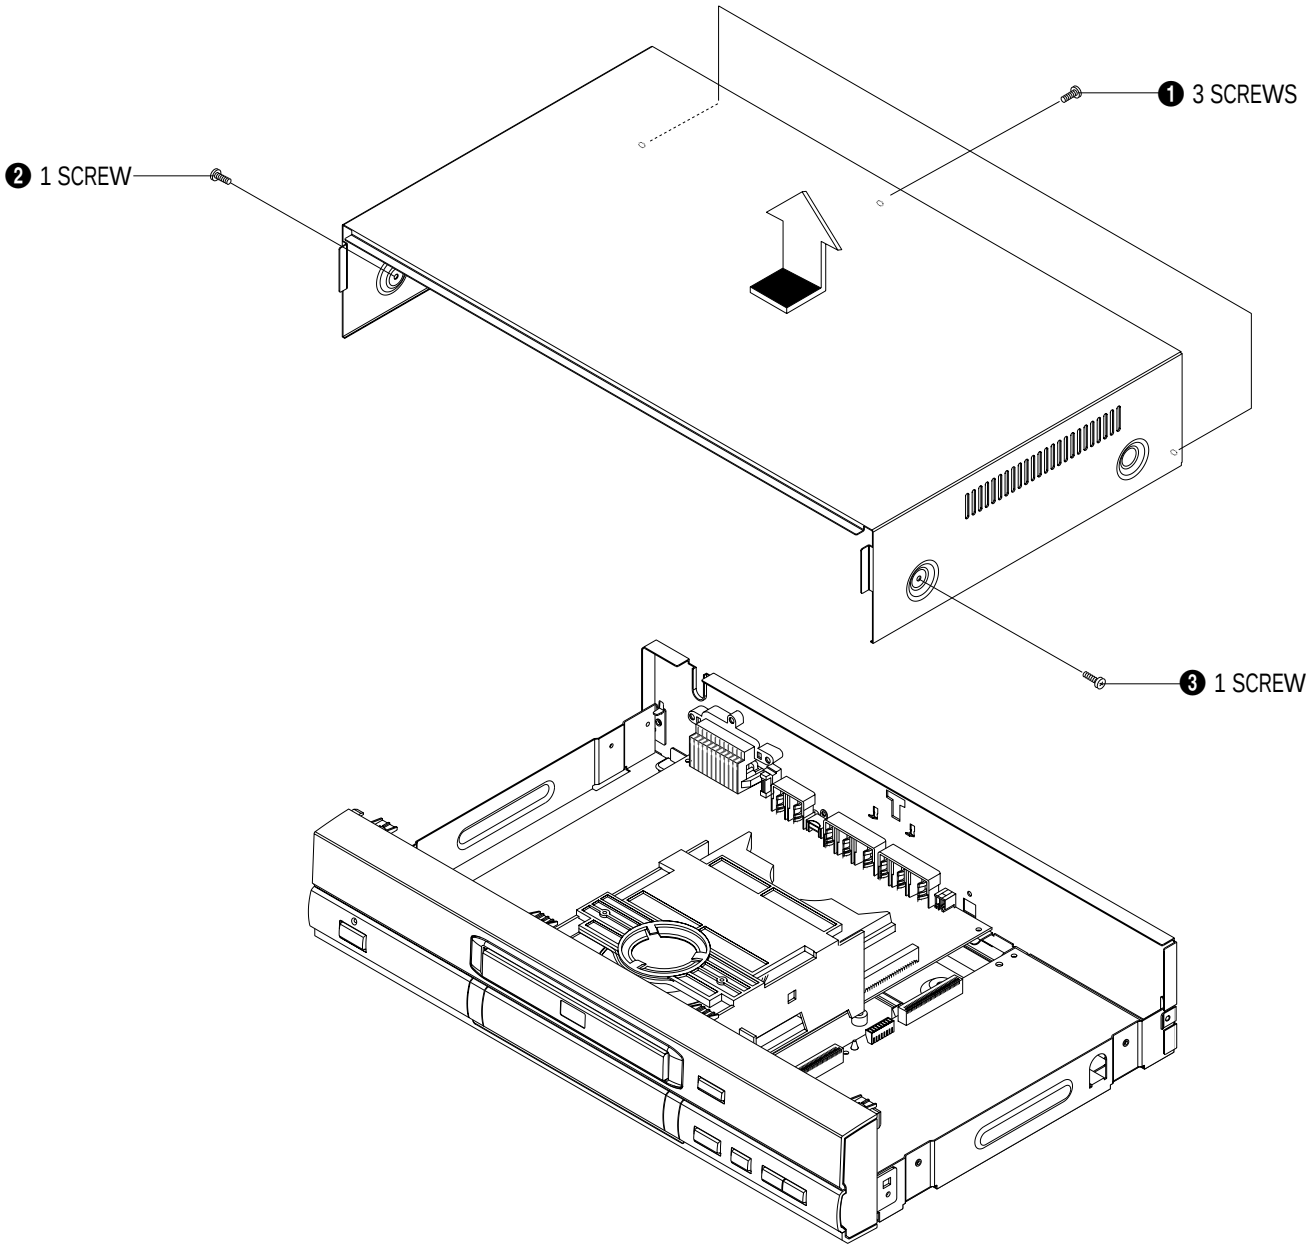

Fig. 4-1 Top Cabinet Removal

4-1-2 Door-Tray Removal

1) Supply power and open Tray ❶.
2) Disassemble the Door-Tray ❷ in direction of arrow “A”.
3) Close Tray ❶ and power off.

Note : If Tray ❶ doesn’t open, insert a Screw driver ❹ into the Emergency hole ❸ (as shown in detailed drawing) and then push it in the direction of arrow “B”. Open Tray manually.

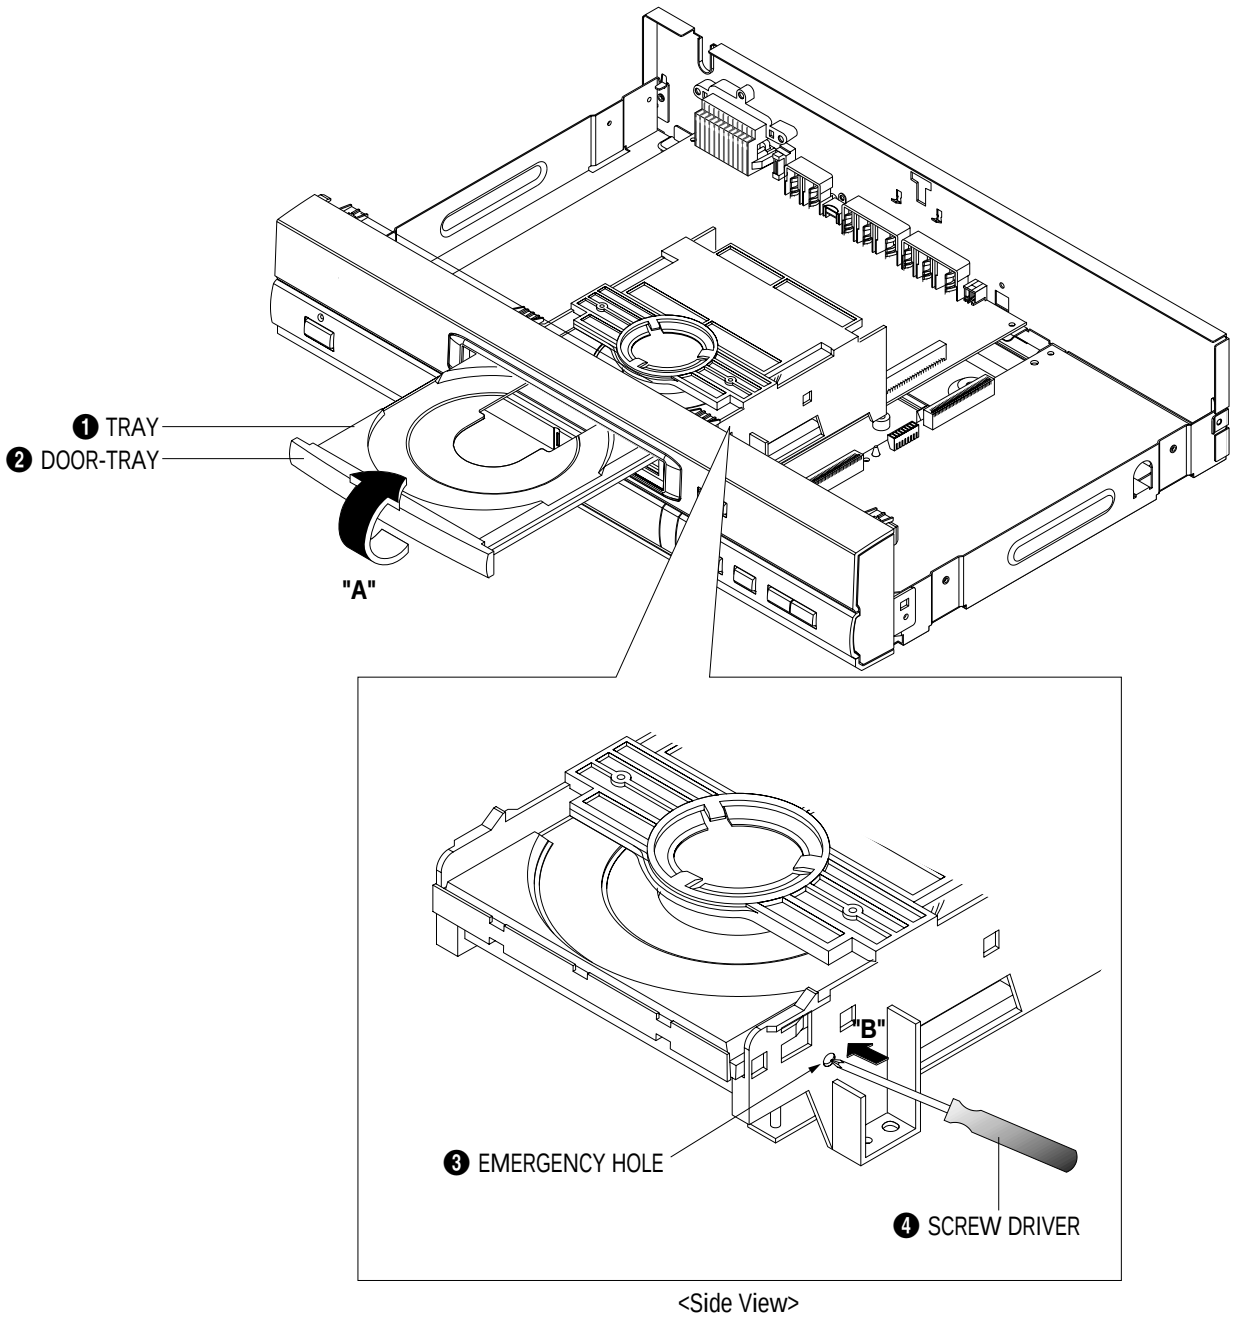

<Side View>

Fig. 4-2 Door-Tray Removal

4-1-3 Ass'y Front-Panel, Key PCB Removal

1) Remove Ass'y Front-Panel ❶.
2) Remove 5 Screws ❷ and Key PCB ❸.

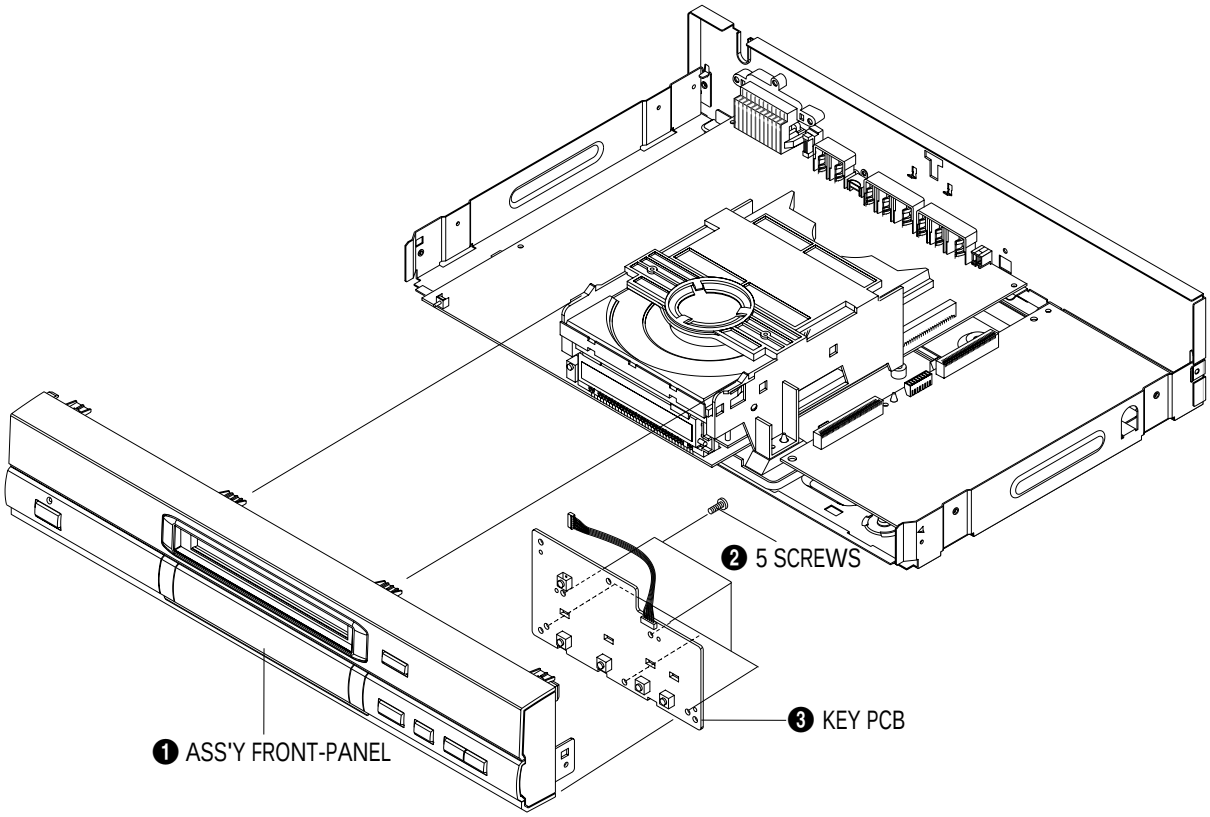

Fig. 4-3 Ass'y Front-Panel, Key PCB Removal

4-1-4 Ass'y Deck Removal

1) Remove 4 Screws ❶ from the Ass'y Deck and lift it up.

CAUTIONS ;
(1) When disassembling, switch the SW3 to "OFF" on the Deck PCB and remove the FPC connected to DCN1 on Main PCB.
(2) When assembling, insert the FPC into the DCN1 on Main PCB and switch SW3 to "ON" on the Deck PCB.

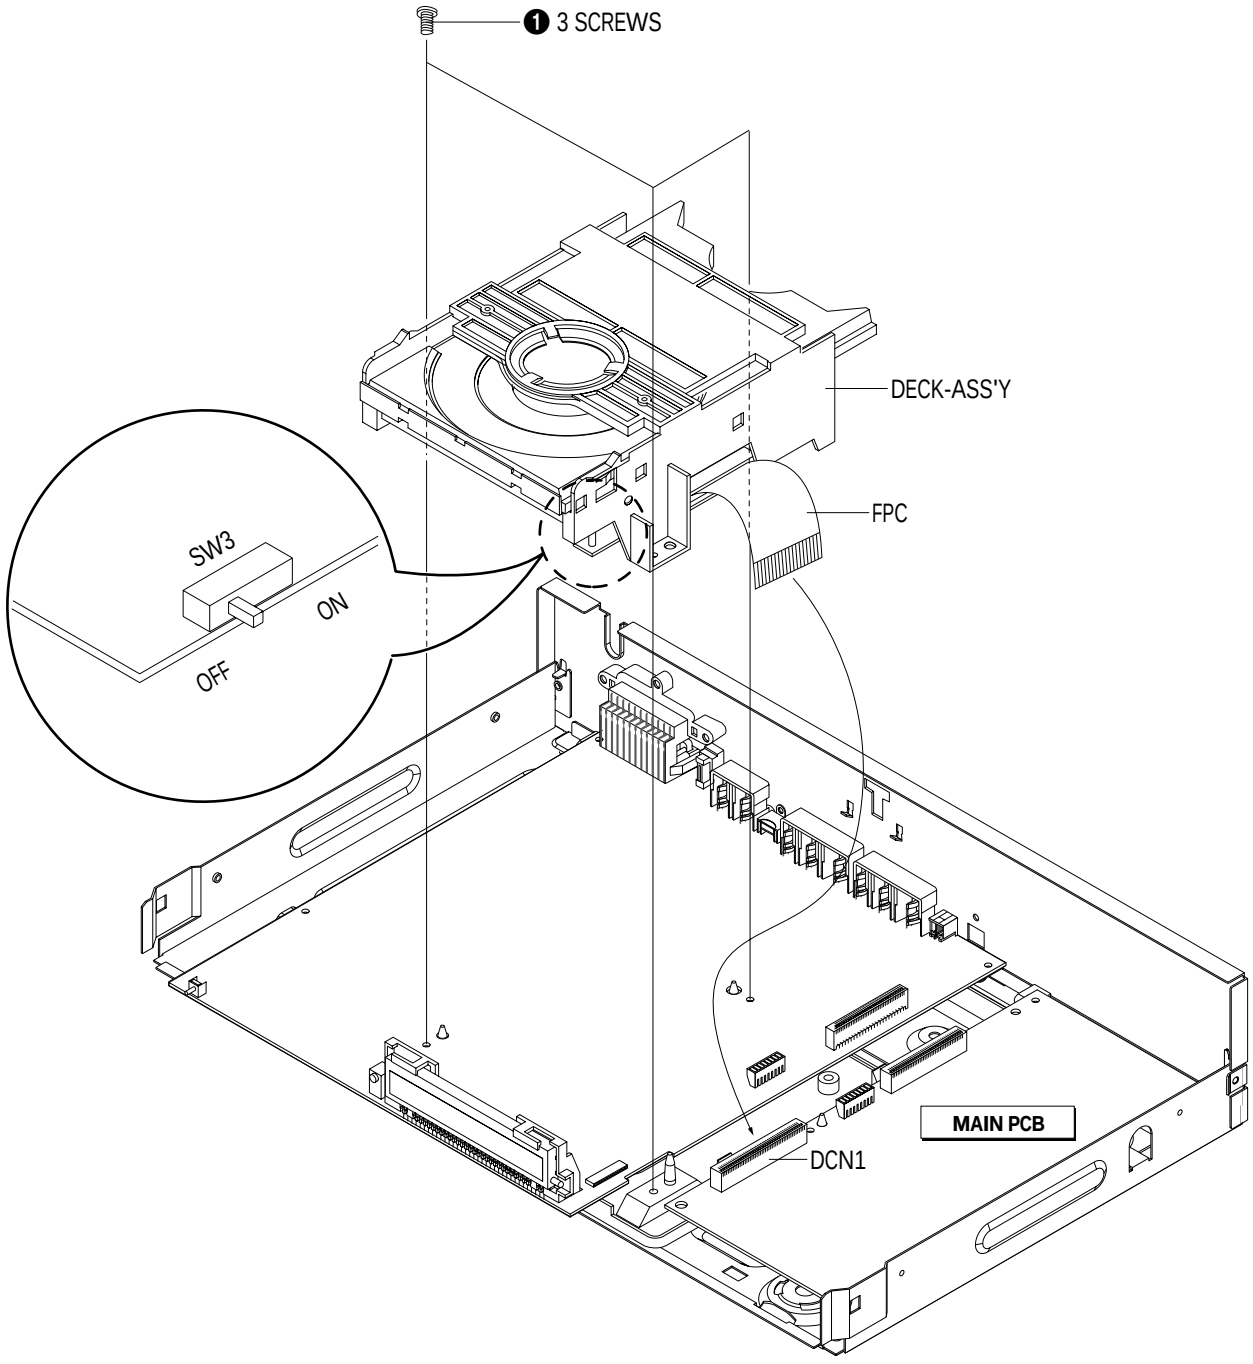

Fig. 4-4 Ass'y Deck Removal

4-1-5 Main PCB, Jack PCB Removal

1) Remove 1 Screw ❶.
2) Remove 2 Screws ❷ and lift up the Jack PCB ❸.
3) Remove 3 Screws ❹ and lift up the Main PCB ❺.

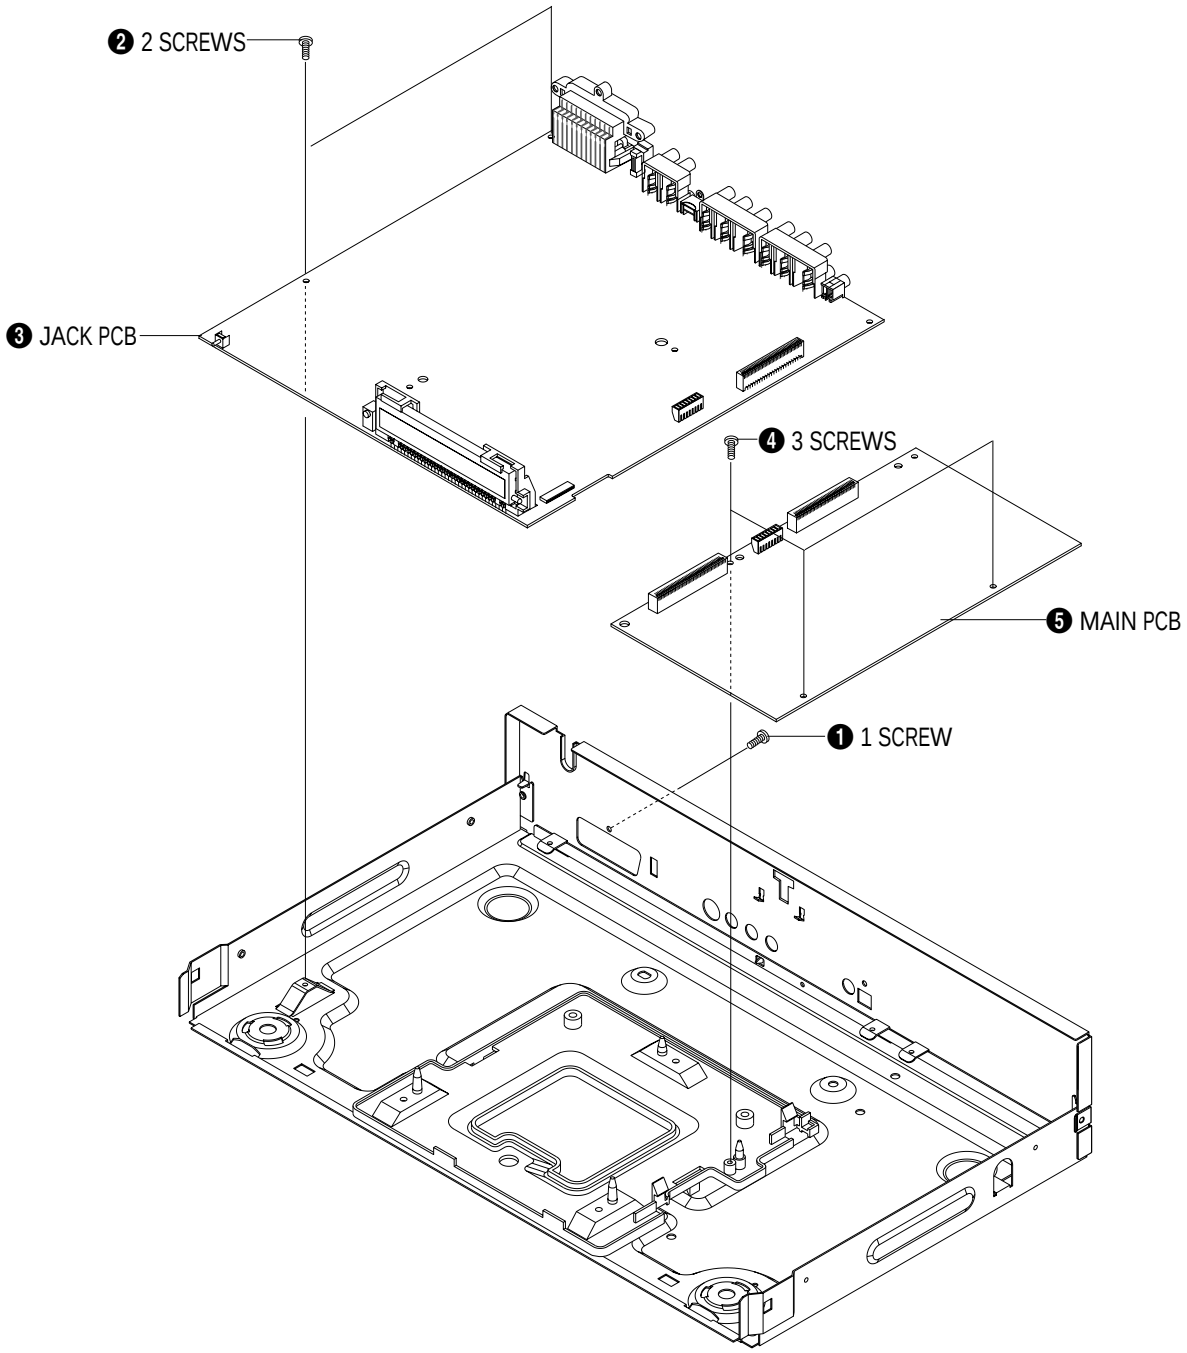

Fig. 4-5 Main PCB, Jack PCB Removal

4-2 PCB Location

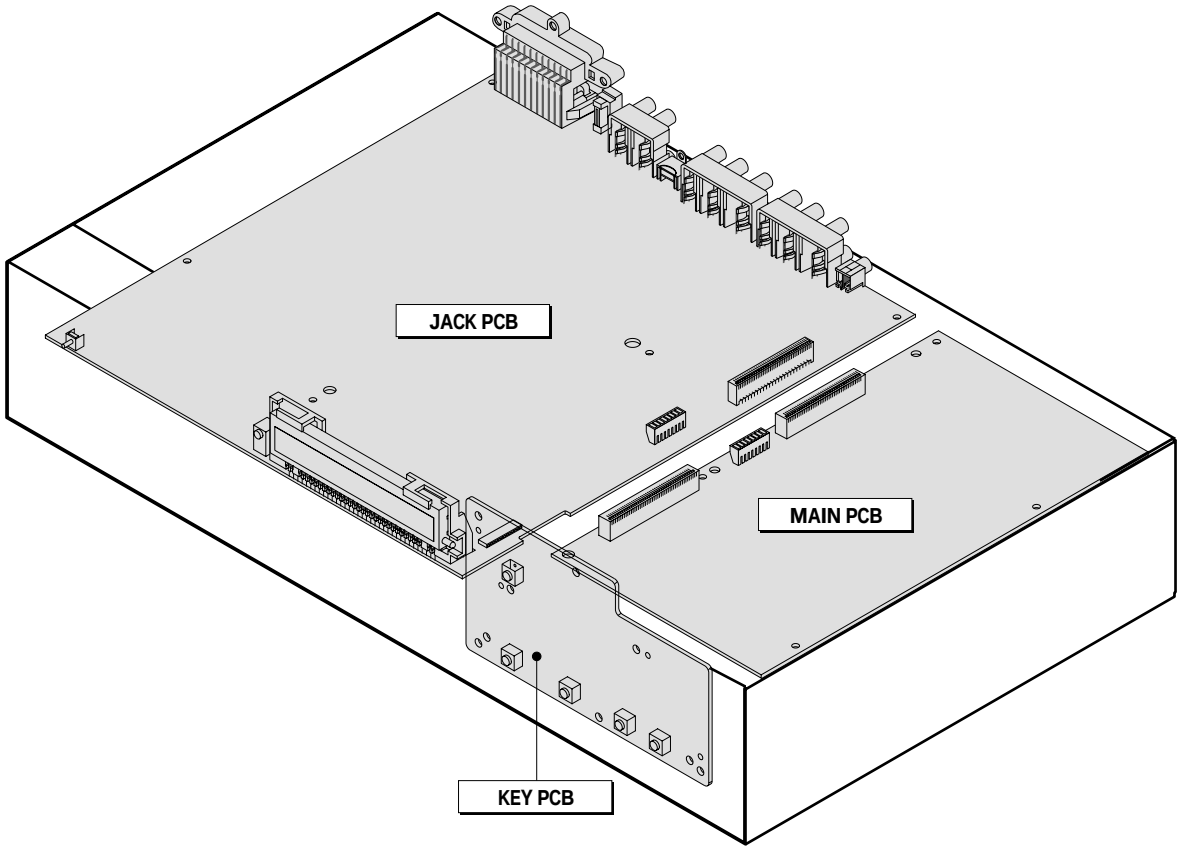

Fig. 4-6 PCB Location

4-3 Connector Diagram

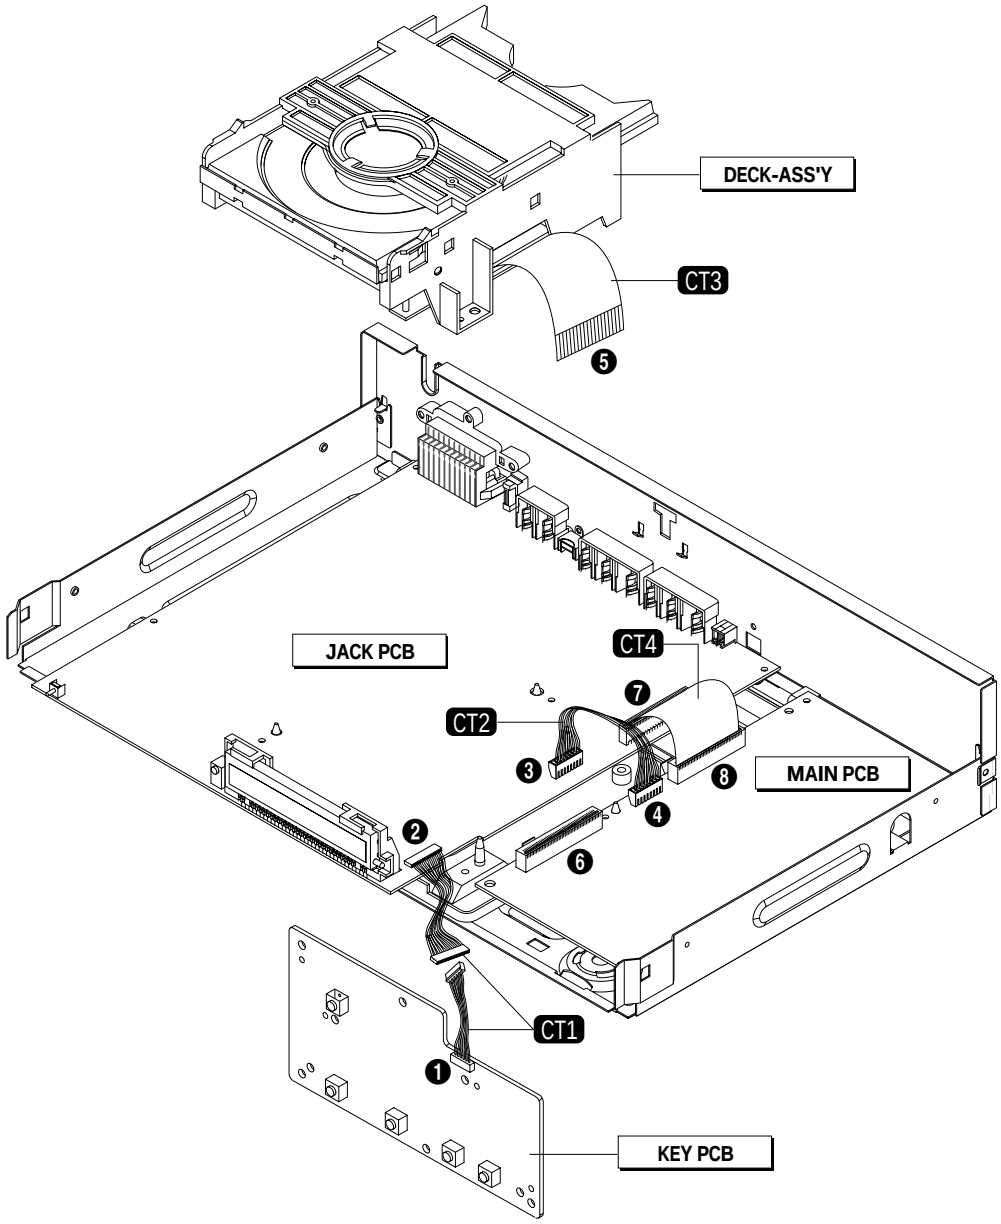

NO.	CONNECTOR NO.	DIRECTION	CONNECTOR NO.	NO.
❶	CON21	KEY PCB ◄ CT1 ► JACK PCB	CN2	❷
❸	PCNS1	JACK PCB ◄ CT2 ► MAIN PCB	PCN1	❹
❺	FPC	DECK-ASS'Y ◄ CT3 ► MAIN PCB	DCN1	❻
❼	CN1	JACK PCB ◄ CT4 ► MAIN PCB	CN8	❽

Fig. 4-7 Connector Diagram

4-4 Deck

4-4-1 PCB Deck Ass'y and Ass'y P/U Deck Removal

1) Remove the soldering of SLED+, SLED- ❶ and TM+, TM- ❷.
2) Disconnect CN3 ❸, CN2 ❹.
3) Remove 1 Screw ❺ and lift up the PCB Deck ❻.
4) Remove 1 Screw ❼.
5) Push the Hook ❽ in the direction of arrow "A" and lift up the Ass'y P/U Deck ❾ in direction of arrow "B".

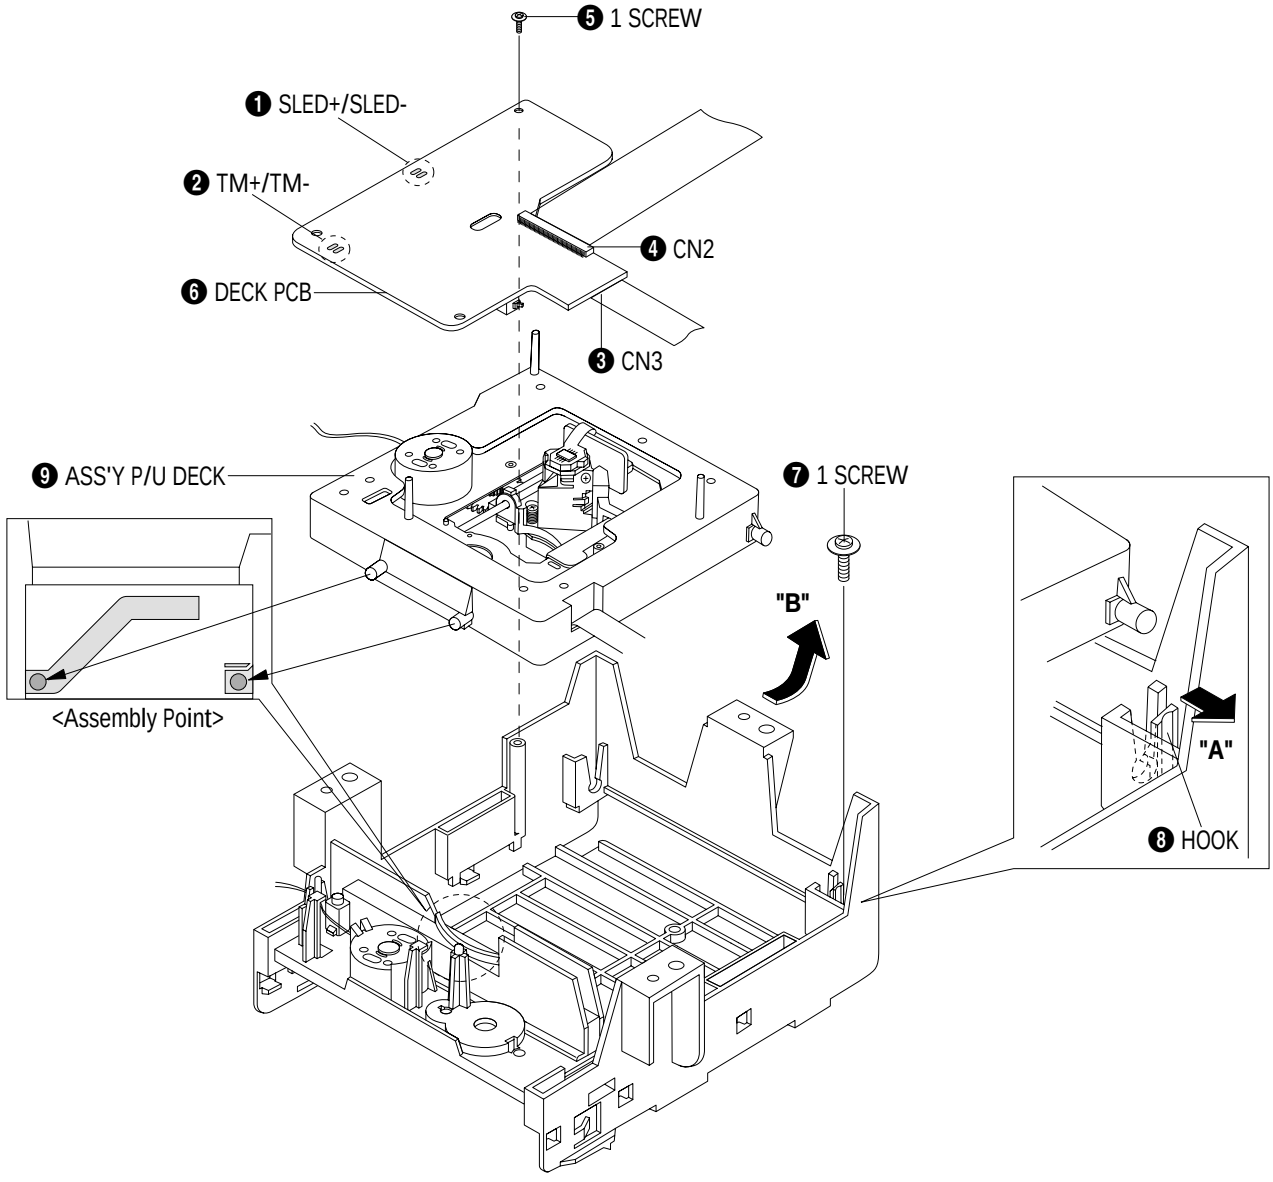

Fig. 4-8 PCB Deck Ass'y and Ass'y P/U Deck Removal

4-4-2 Tray Disc Removal

1) Insert a Screw Driver ❶ into Emergency Hole ❷ and push the Sider Housing ❸ in the direction arrow “A”.
2) When the Tray Disc ❹ comes out little, pull it in the direction arrow “B” by hand.
3) Pull the Tray Disc ❹ to disassemble , while simultaneously pushing 2 Stoppers ❺ (left, right) in the direction arrow “C”, “D”.

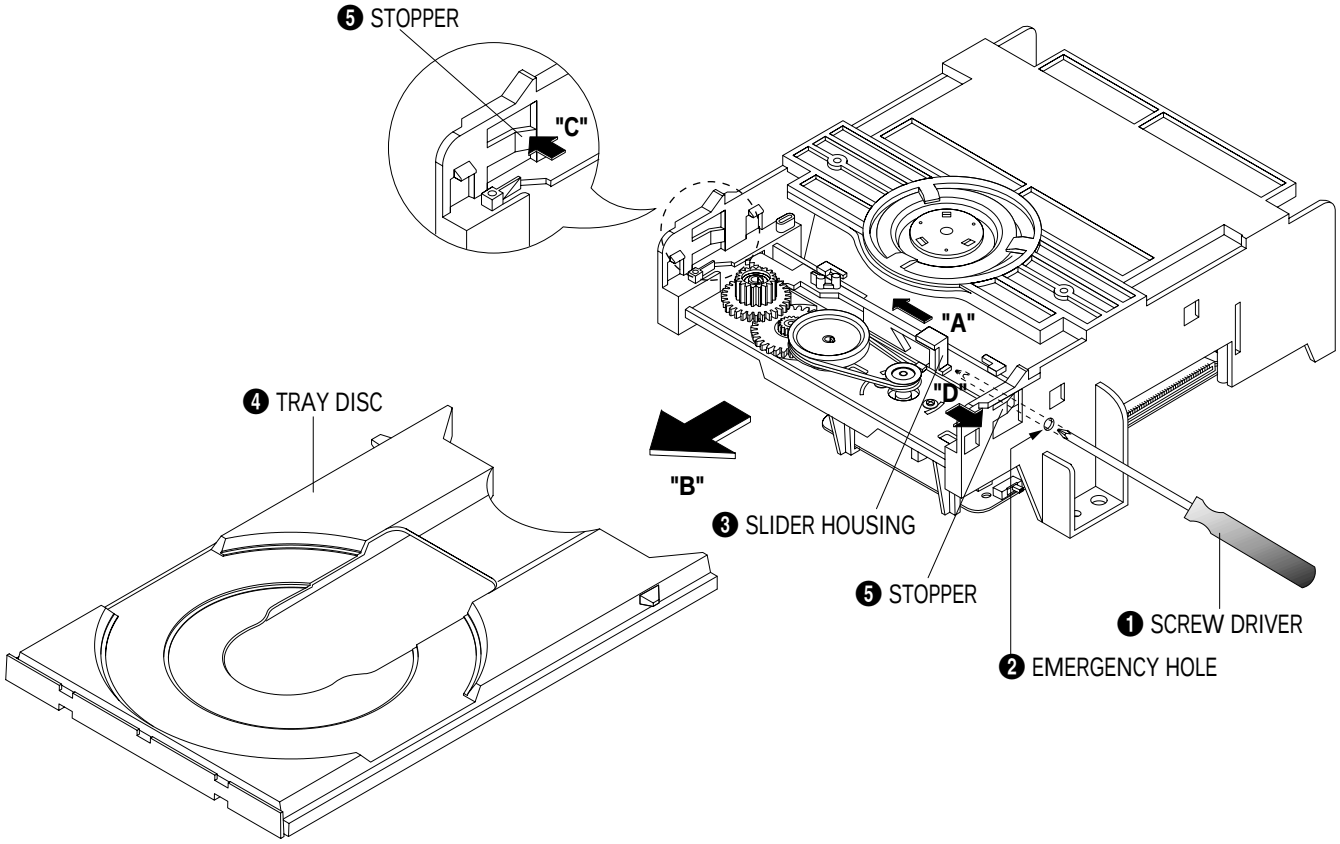

Fig. 4-9 Tray Disc Removal

4-4-3 Slider Housing Removal

1) Push the Slider Housing ❶ in the direction arrow “A”.
2) Lift up the Slider Housing ❶.

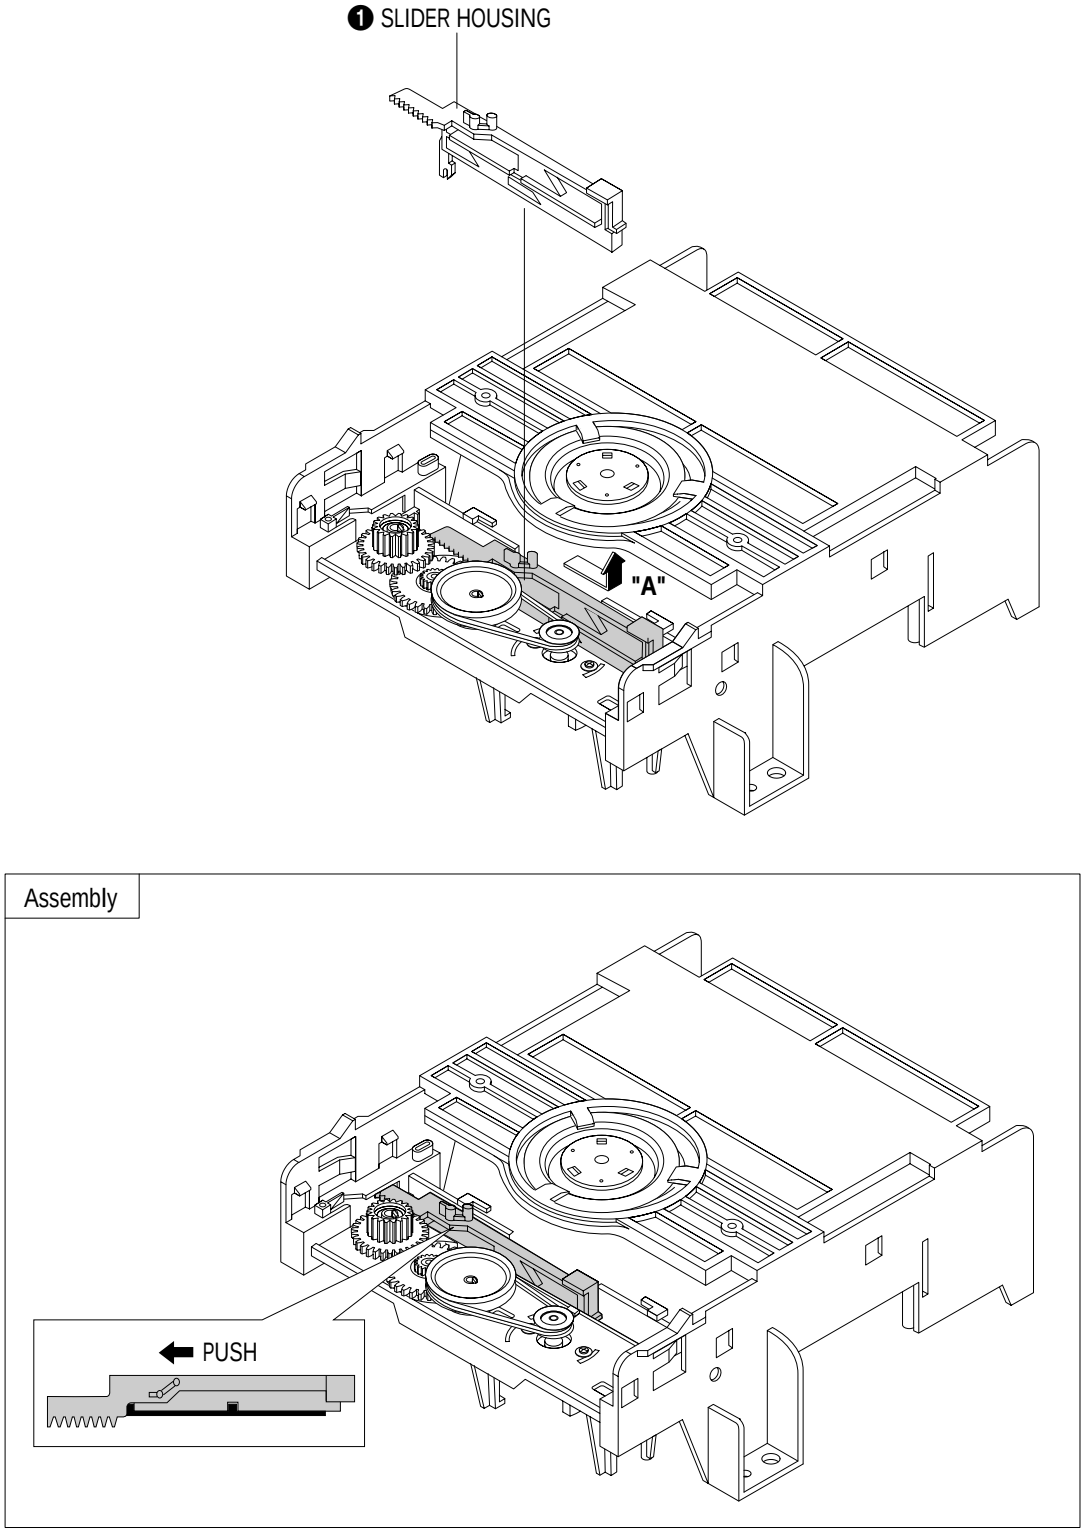

Fig. 4-10 Slider Housing Removal

4-4-4 Housing Ass'y Removal

1) Remove Belt ❶ and 1 Screw ❷.
2) Remove 1 Screw ❸ and lift up the Pulley Gear ❹.
3) Push the Hook ❺ in the direction arrow "A" and lift up Gear Tray ❻, Gear Housing ❼.
4) Push the 4 Hooks ❽ bottom side in the direction arrow "B" and lift up the Motor Load Ass'y ❾.
5) Remove Clamper Ass'y ❿.

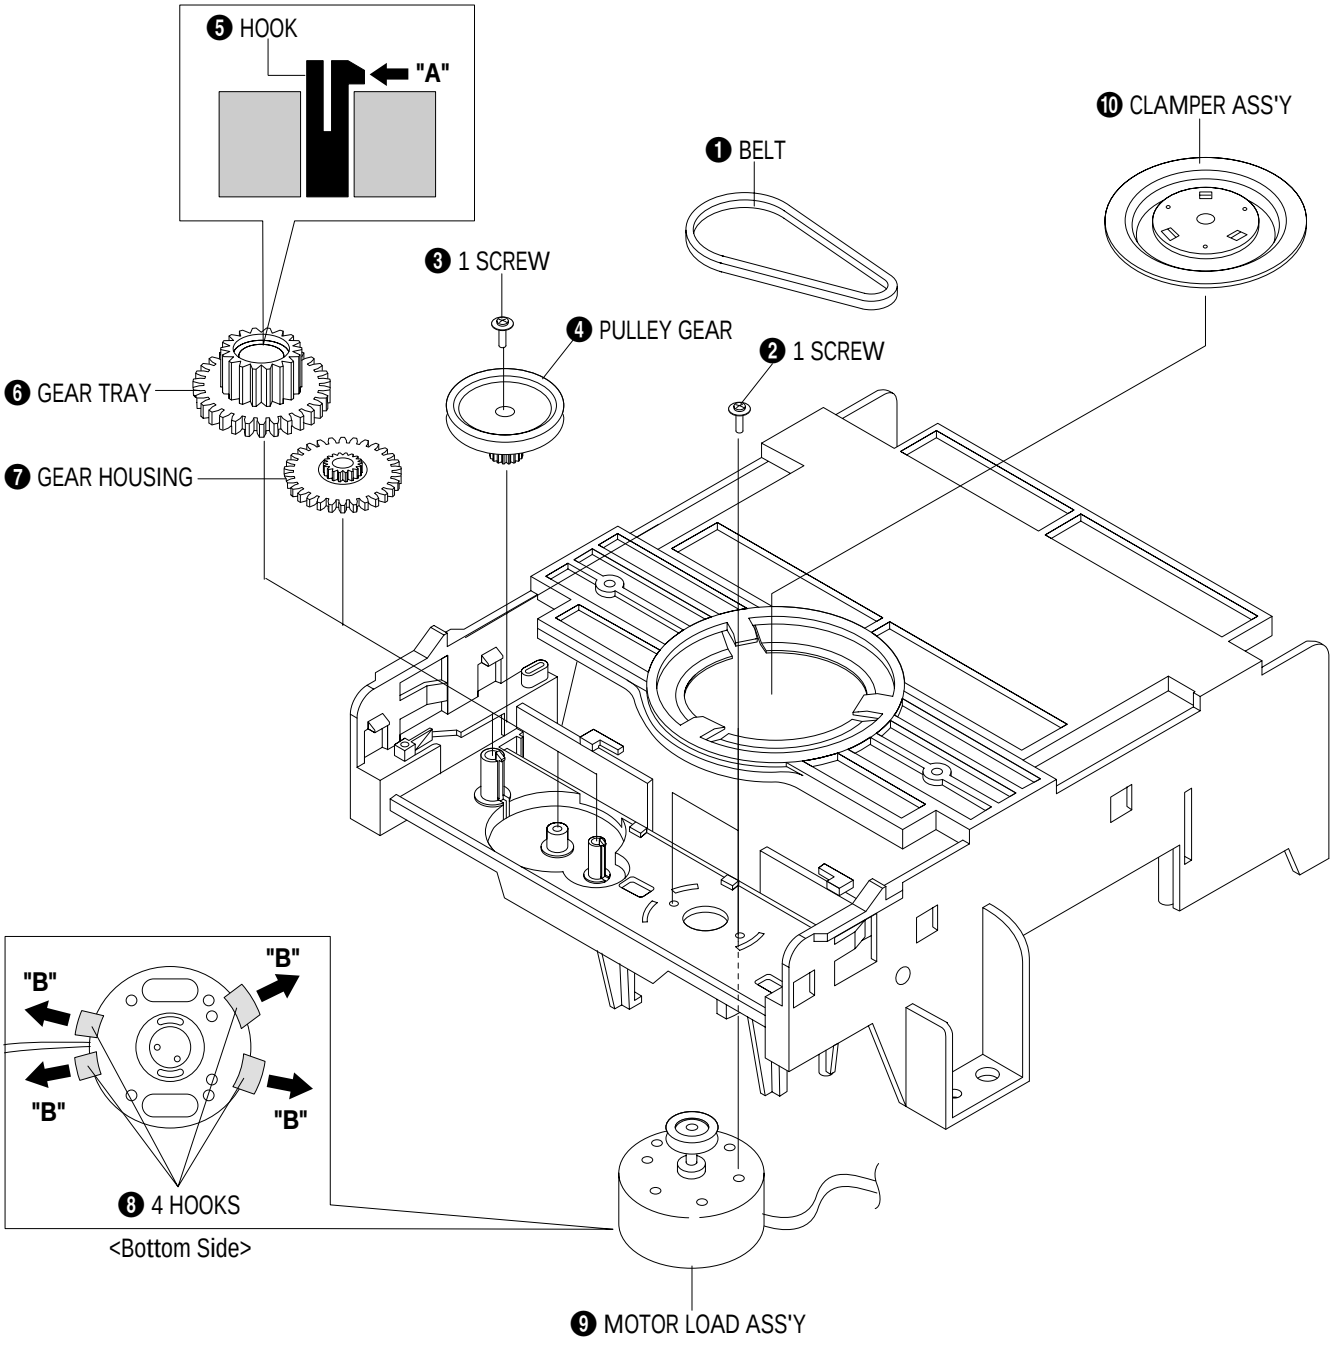

Fig. 4-11 Housing Ass'y Removal

4-4-5 Sub Chassis Removal

1) Remove the 4 Screws ❶.
2) Lift up the Ass'y Brkt Deck ❷.

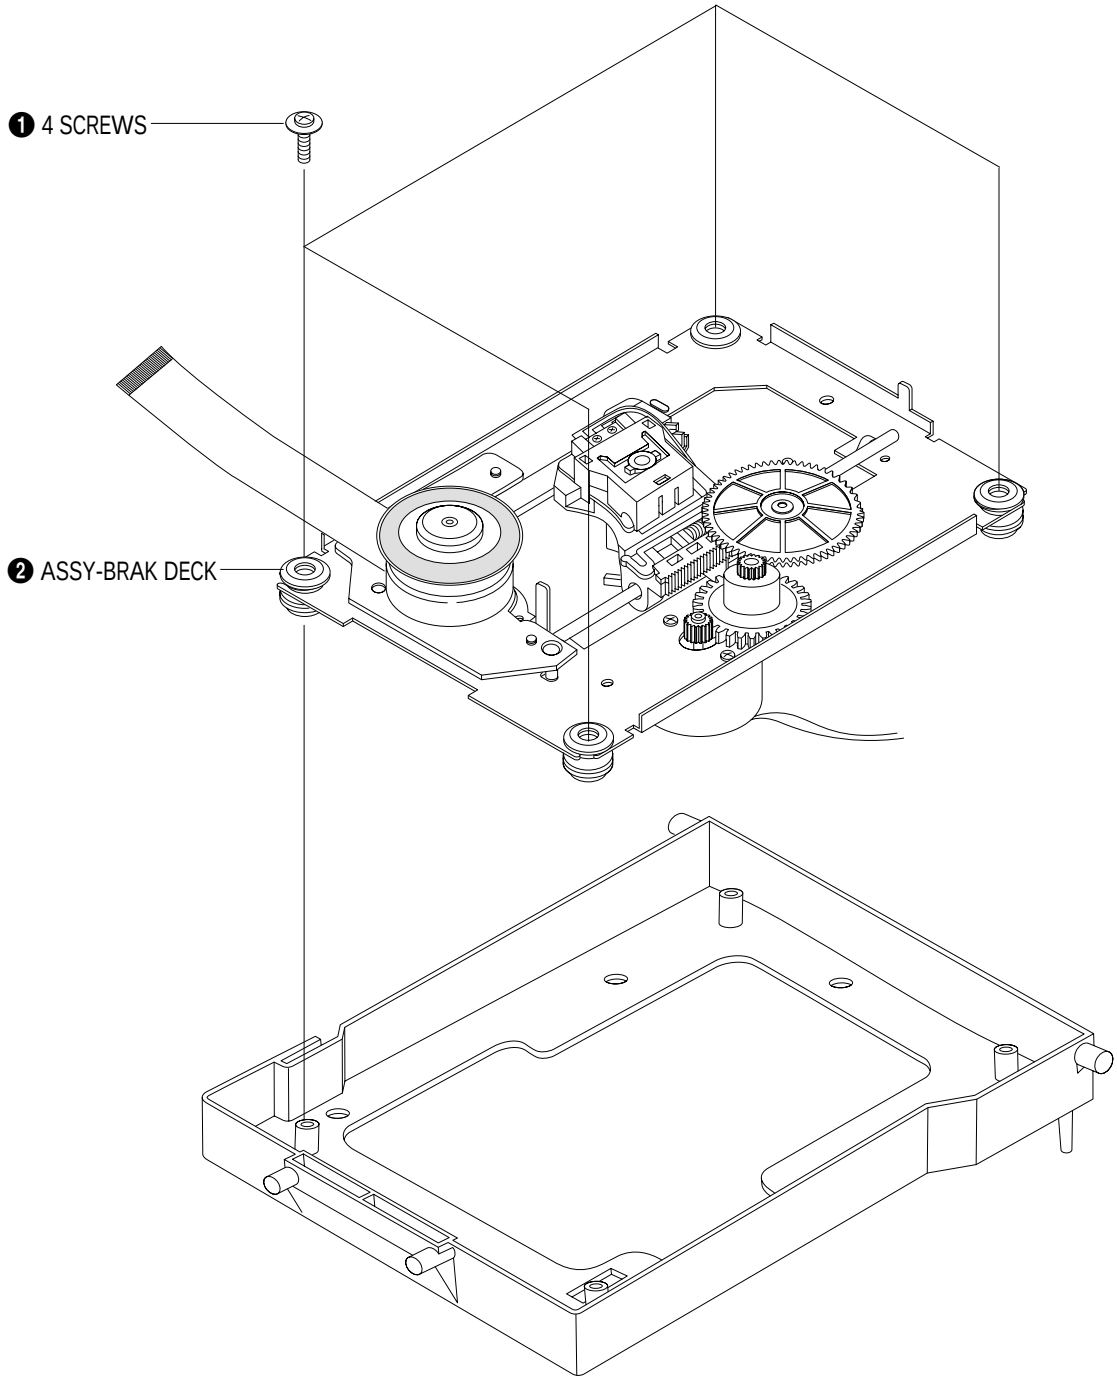

Fig. 4-12 Sub Chassis Removal

4-4-6 Ass'y Brkt Deck Removal

1) Remove Washer ❶.
2) Remove Gear Feed B ❷ , Gear Feed A ❸.
3) Remove 2 Screws ❹.
4) Remove Shaft Pick-Up ❺ and Pick-Up Assy ❻.
5) Remove 1 Screw ❼.
6) Remove 2 Screws ❽.
7) Remove 3 Spring Spindle ❾ and Motor Spindle Ass'y ❿.

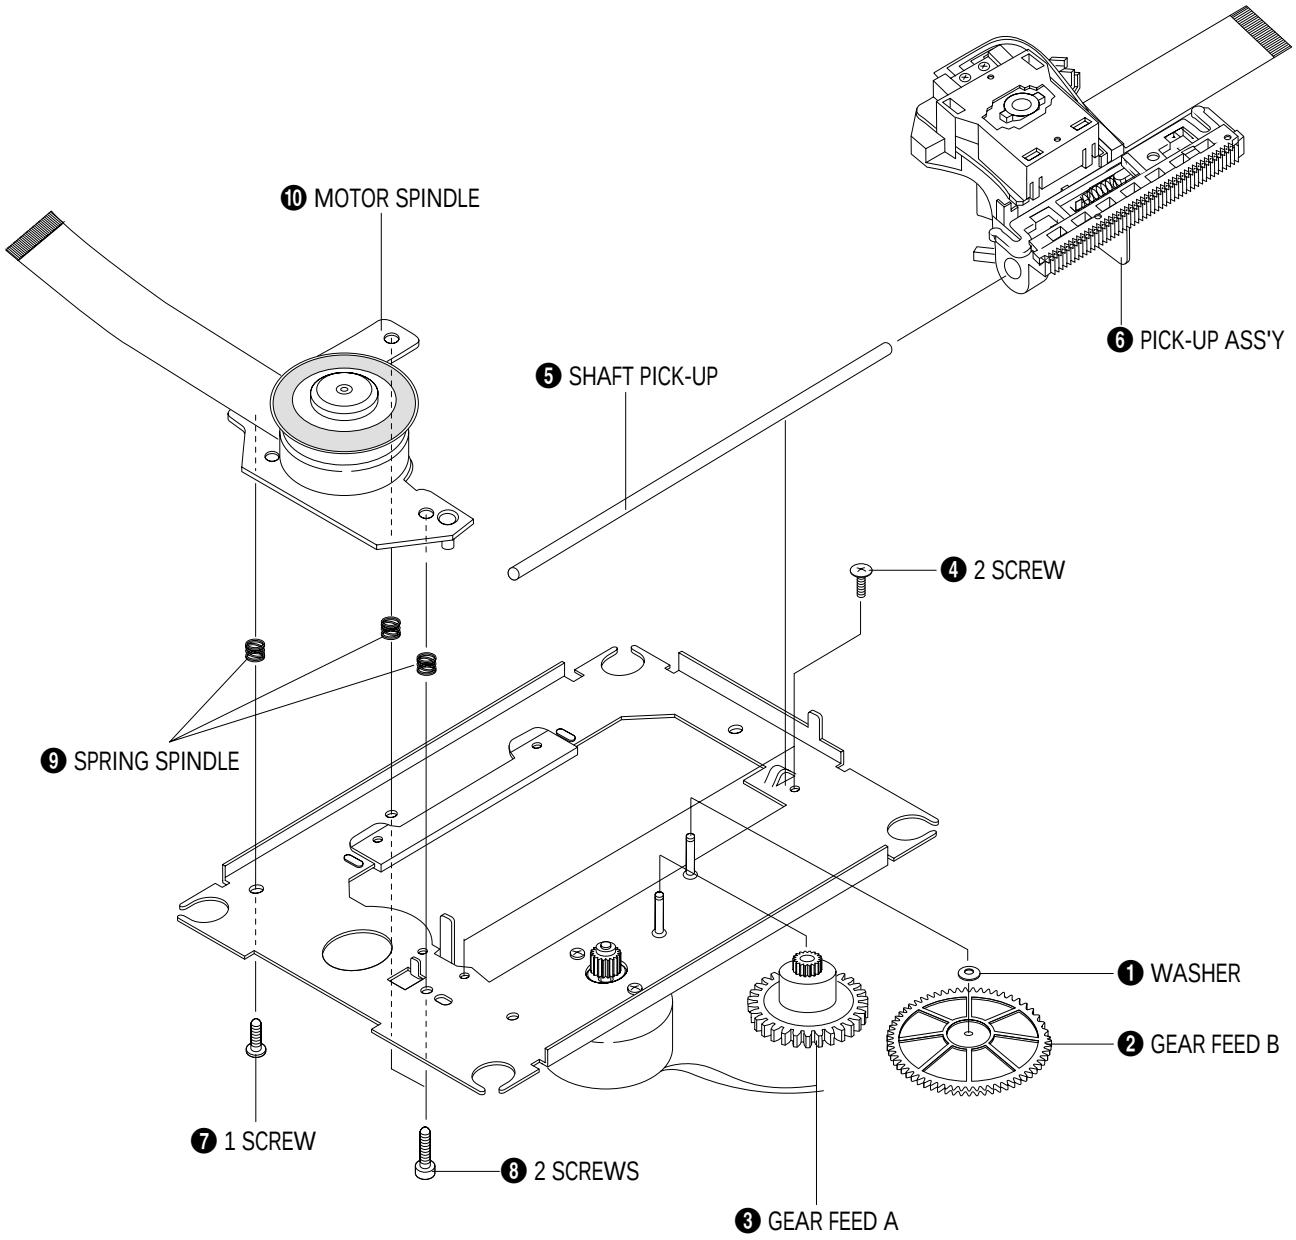

Fig. 4-13 Ass'y Brkt Deck Removal

MEMO

5. Circuit Descriptions

5-1 S.M.P.S.

5-1-1 Comparsion between Linear Power Supply and S.M.P.S.

5-1-1 (a) Linear

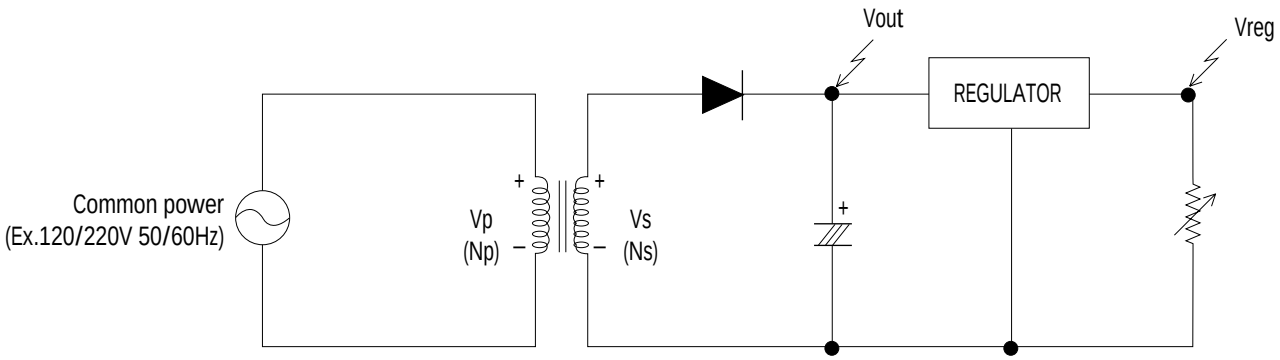

Fig. 5-1 Linear Power Supply

◆ Waveform/Description

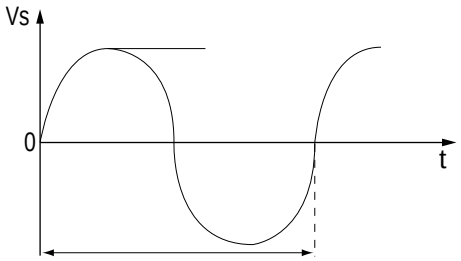

Fig. 5-2

Input : Common power to transformer (Vp).

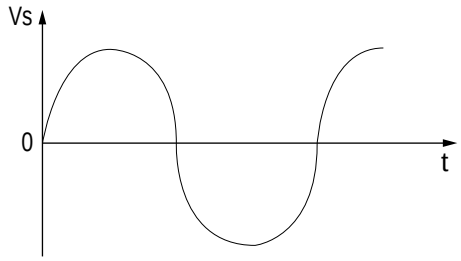

Fig. 5-3

The output Vs of transformer is determined by the ratio of 1st Np and 2nd Ns.
Vs = (Ns / Np) x Vp

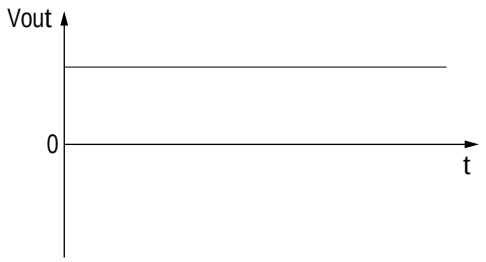

Fig. 5-4

Vout is output (DC) by diode and condensor.

◆ Advantages and disadvantages of linear power supply

1) Advantages : Little noise because the output waveform of transformer is sine wave.

2) Disadvantages :

❶ Additional margin is required because Vs is changed (depending on power source). (The regulator loss is caused by margin design).

❷ Greater core size and condensor capacity are needed, because the transformer works on a single power frequency.

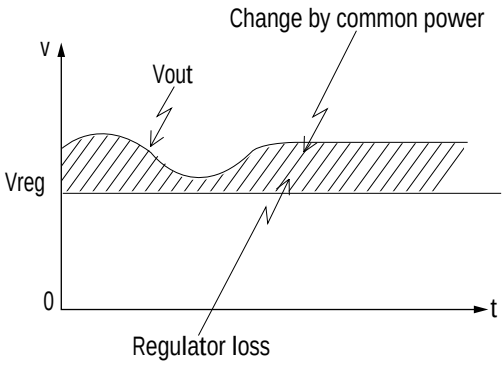

Fig. 5-5

5-1-1 (b) S.M.P.S. (Pulse width modulation method)

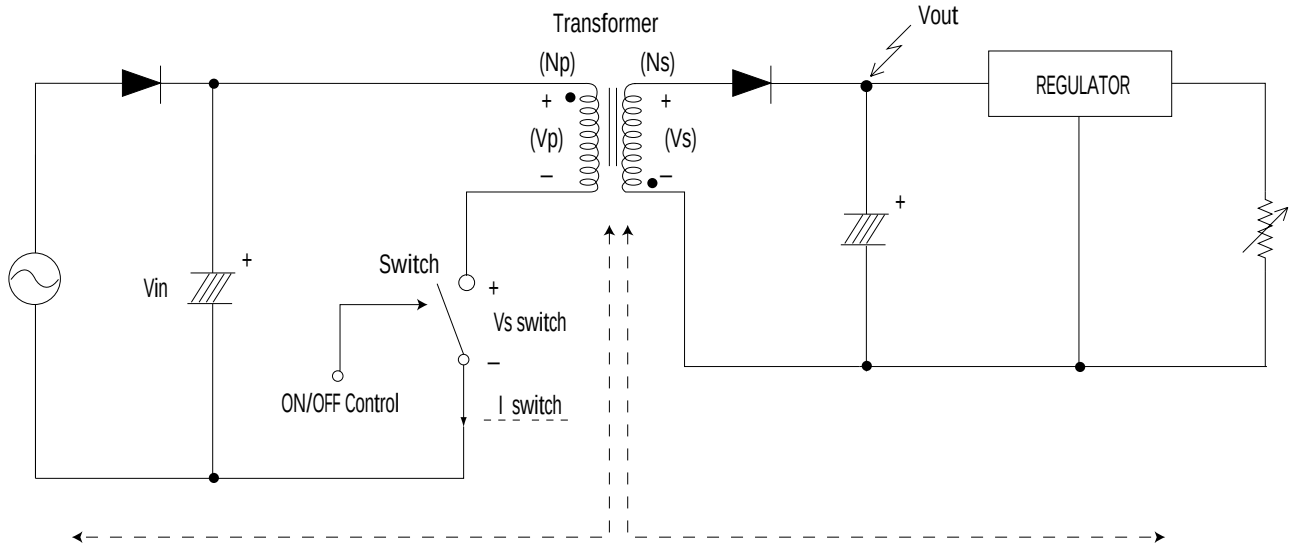

Fig. 5-6

◆ Terms

1) 1st : Common power input to 1st winding.
2) 2nd : Circuit followings output winding of transformer.
3) f (Frequency) : Switching frequency (T : Switching cycle)
4) Duty : (Ton / T) x 100

5-1-2 Circuit description (FLY-Back PWM (Plise Width Modulation) Control)

5-1-2 (a) AC Power Rectification/Smoothing Terminal

1) PDS01,PDS02,PDS03,PDS04 : Convert AC power to DC(Wave rectification)
2) PEF10 : Smooth the voltage converted to DC(Refer to VIN of Fig. 5-7)
3) PLF01, PLS01, PCF01, PCF02, PCD01, PCD03, PCS03 : Noise removal at power input/output
4) PVA1 : SMPS protection at power surge input (PVA1 pattern open is to remove noise)
5) PR10 : Rush current limit resistance at the moment of power cord insertion.
   ❶ Rush current = (AC input voltage x 1.414 - Diode drop voltage) / Pattern resistance + PLF01, PLS01 resistance + PCD01 resistance + PRF10) (AC230V based : approx. 26A)
   ❷ Without PRF10, the bridge diode might be damaged as the rush current increases.

5-1-2 (b) SNUBBER Circuit : PRS11, PRS12, PRD12, PCD12, PDS11, PCF11

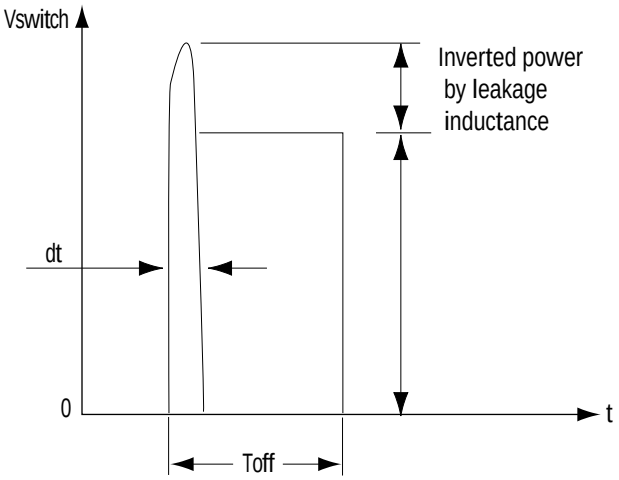

Fig. 5-7

1) Prevent residual high voltage at the terminals of switch during switch off/Suppress noise.
   High inverted power occurs at switch off, because of the 1st winding of transformer :
   (V= LI xdi/dt. LI : Leakage Induction)
   A very high residual voltage exists on both terminals of PICF1 because dt is a very short.

2) SNUBBER circuit protects PICF1 from damage through leakage voltage suppression by RC, (Charges the leakage voltage to PDS11 and PCF11, and discharges to PRS11 and PRS12).

3) PCD12, PRD12 : For noise removal

5-1-2 (c) PICF1 Vcc circuit

1) PCD11, PCF12, PCF13, PCF14 : PICF1 driving resistance
   (PICF1 works through driving resistance at power cord in)
2) PICF1 Vcc : PDF13, PRF16, PEF12
   ❶ Use the output of transformer as Vcc, because the current starts to flow into transformer while PICF1 is active.
   ❷ Rectify to PDF13 and smooth to PEF12.
   ❸ Use the output of transformer as PICF1 Vcc : The loads are different before and after PICF1 driving.
   (Vcc of PICF1 decreases below OFF voltage, using only the resistance due to load increase after PICF1 driving.)

5-1-2 (d) Feedback Control Circuit

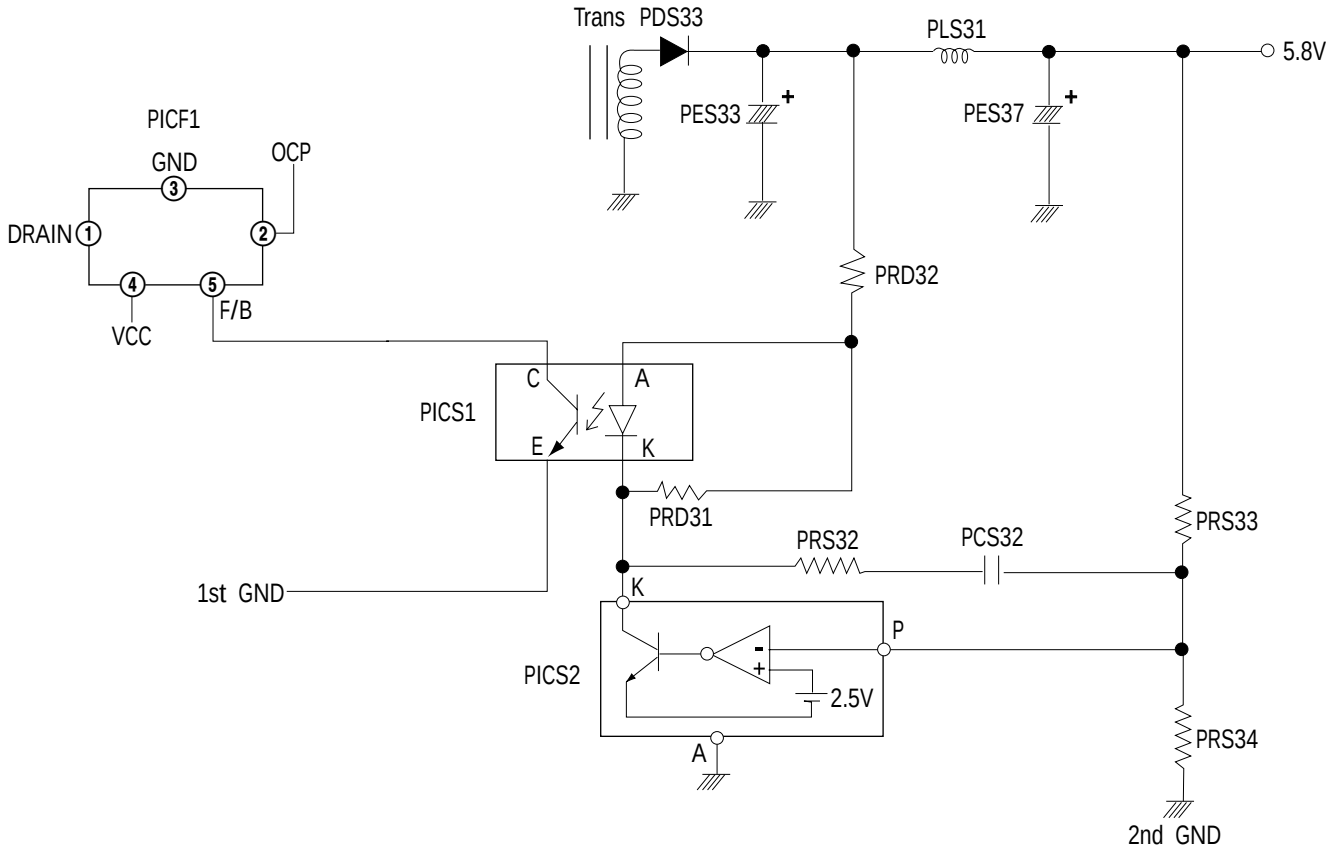

Fig. 5-8

1) F/B terminal of PICF1 determines output duty cycle.
2) C-E(Collector-Emitter) of PICS1 and F/B potential of PICF1 are same.

Operation descriptions

1) Internal OP-Amp '+' base potential of PICS2 is 2.5V and external "-" input potential is connected with PRS33 and PRS34 to maintain Vout of 5.8V. (Vout = ((PRS38 x PRS34) / PRS34) x 2.5V)
2) If load of 5.8 V terminal increases(or AC input voltage decreases) and Vout decreases below 5.8V, then : PICS2 "P" potential down below 2.5V --> PICS2 A-K of base current down --> PICS2 of A-K current down --> PICS1 Diode current down --> PICS1 C-E current down --> PICS1 C-E voltage up --> PICF1 F/B voltage up --> Out Duty up --> Transformer 1st current up --> Transformer 1st power up --> Vout up --> Maintain Vout 5.8V
3) If load of 5.8 V terminal decreases(or AC input voltage rises) and Vout rises above 5.8V, then : Reverse sequence of the above description --> Duty down --> Vout down --> Maintain 5.8V (i.e., the feedback to maintains 5.8V).
   ❶ PRD31, PRD32 : Reduce 5.8V overshoot
   ❷ PRS32, PCS32 : Prevent PICS2 oscillation(for phase correction)

5-1-3 Internal Block Diagram

5-1-3 (a) Internal Block Diagram of S.M.P.S. Circuit

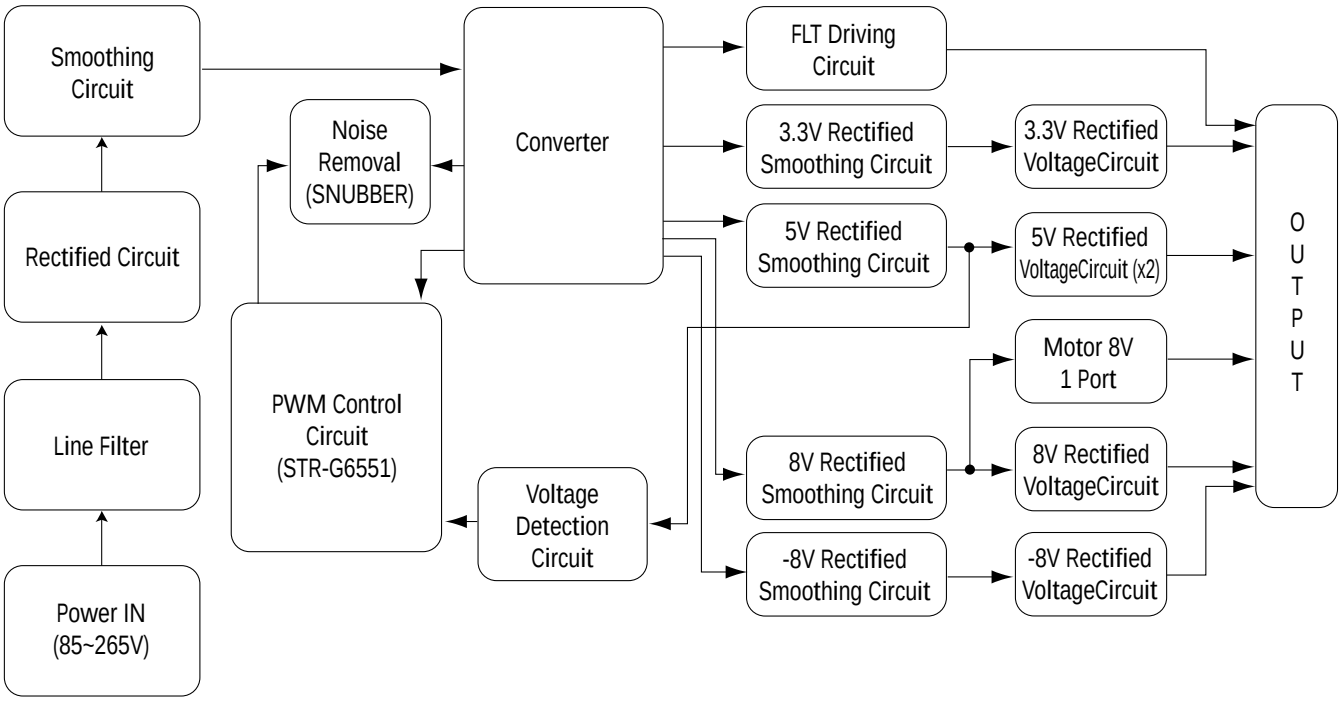

Fig. 5-9

5-1-3 (b) PICF1 (STR-G6551) Internal Block Diagram

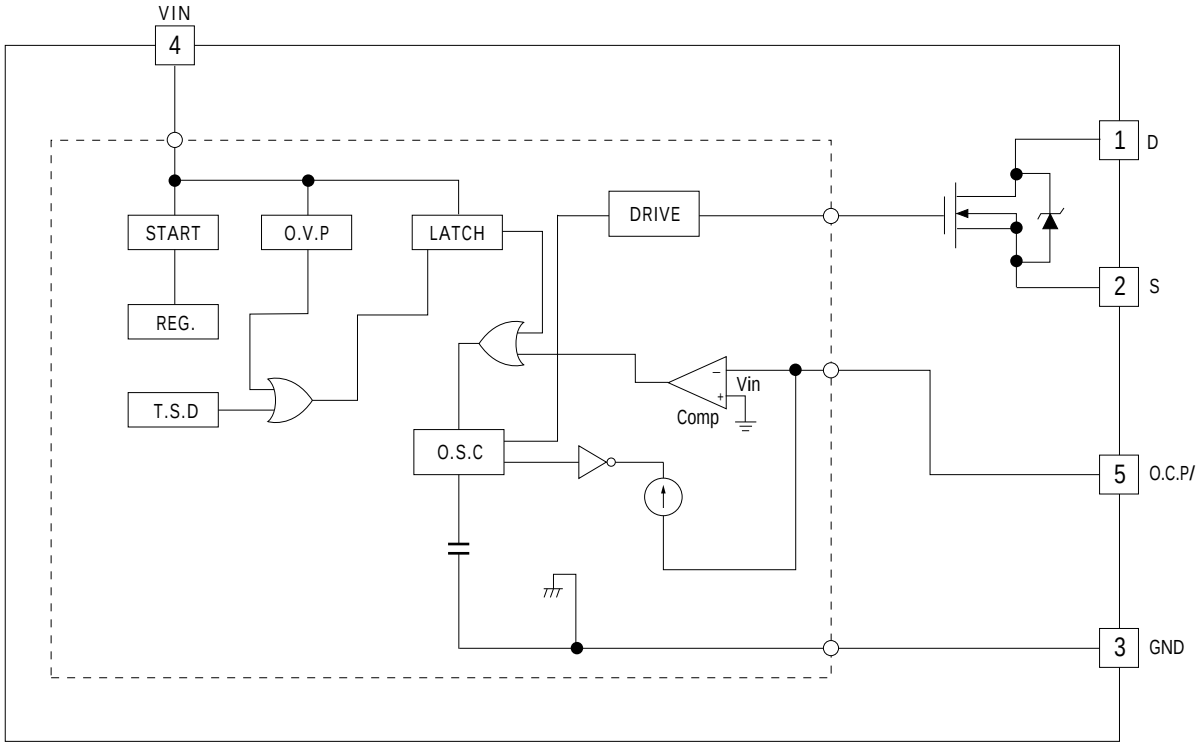

Fig. 5-10

5-2 RF

5-2-1 RIC1 (KS1461)

KS1461 is combined with KS1452 and KS1453 as bipolar IC developed for DVD SERVO system.
Main features include DVD waveform equalizing, CD waveform equalizing, focus error signal generation, 3-beam tracking error signal generation, DPD 1-beam tracking error, defect, envelope, MIRR output, etc. after receiving the pick-up output converted into I/V.

5-2-1 (a) Basic Potentiometer

KS1461 uses a single power method and each circuit is based on V of 2.5V.
V (Pin 12, 20, 24, 67) terminal is needed for IC, which uses the peripheral V.

5-2-1(b) RF signal

Fig. 5-11 shows the flow of signal generated by the pick-up.
A, B, C, D signals detected from pick-up are converted in to RF signal(A+B+C+D) via RF summing AMP.

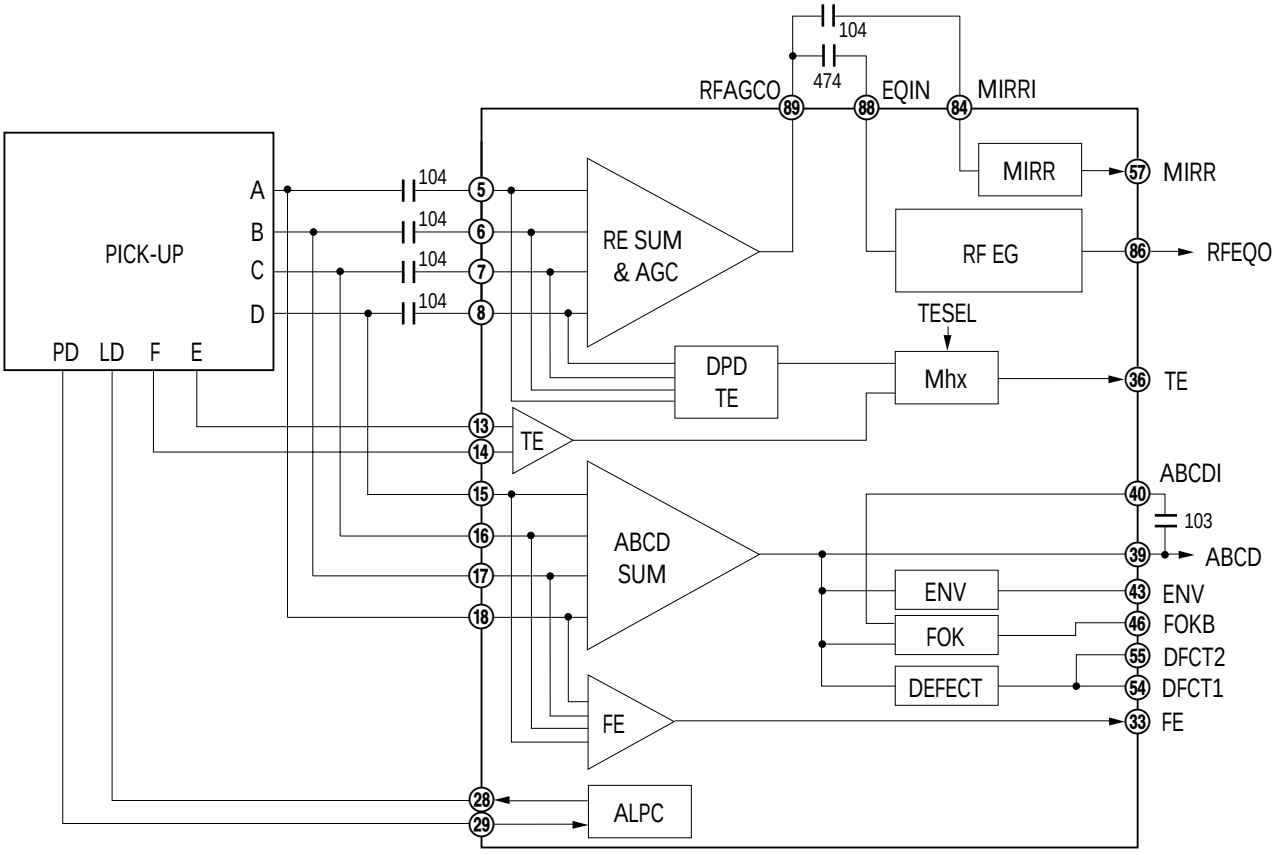

Fig. 5-11

Fig. 5-12 shows the waveform-equalizing block diagram for the RF signal.
It outputs to EQout (Pin 86) terminal by initially changing switching AMP gain of DVD and CD, and then adjusting the level in RF SUM & AGC. It controls RF SUM & AGC gain by means of Pin 89-95 and interfaces with PWM signal, (output from PWM terminal of KS1453, via low-pass filter to adjust boost gain and peak frequency.

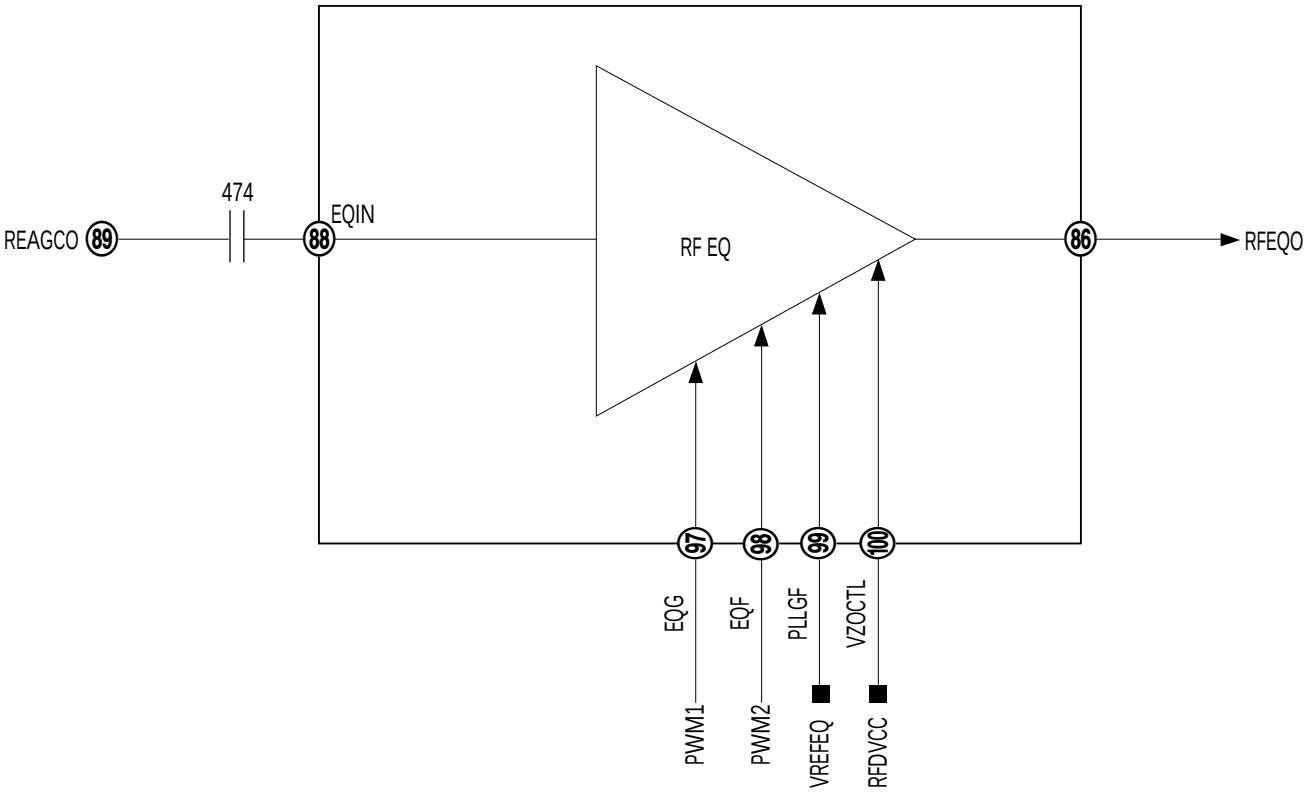

Fig. 5-12

The control parameters of DVD EQ and CD EQ are as follows.

1) DVD CD EQ control parameter

❶ EQG (Pin 97) : Changes the gain of peak frequency with EQ frequency characteristic. Convert PWM signal, output from KS1453, into DC via low-pass filter.

❷ EQF (Pin 98) : Changes the peak frequency with EQ frequency characteristic. Convert PWM signal, output from KS1453, into DVD via low-pass filter.

5-3 System Control

5-3-1 Outline

The main micom peripheral circuit is composed of 16bit Micom (MIC1 ; TMP95C265), 8M EPROM (MIC2 ; M27C801) for Microcode and data save, 256 byte EE-PROM (MIC4 ; KS24C020) for permanent storage of data needed at power off.
The Micom (MIC1 ; TMP95C265) mounted in main board analizes the key commands of front panel or instructions of remote control through communication with Micom (FIC1 ; LC86P6232) of front and controls the devices on board to execute the corresponding commands after initializing the devices connected with micom on board at power on.

5-3-2 Block Diagram

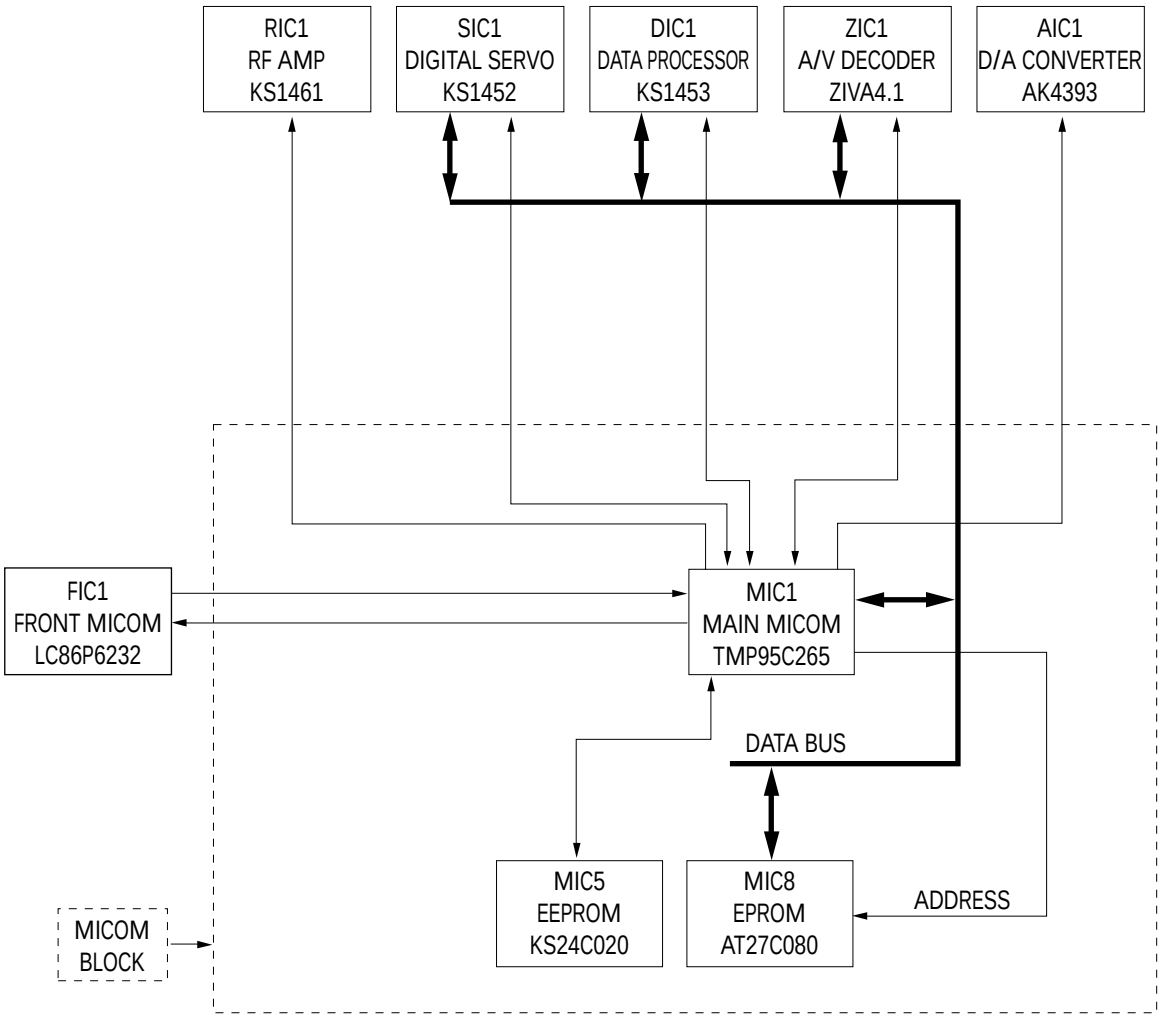

Fig. 5-13

5-3-3 Waveform Description

When micom accesses each device sharing bus, it falls the chip select signal of corresponding chip to (/CS1:MIC3-22, /CS2:MIC2-22, /DSPCS:DIC1-2, /DVD1CS:ZIC1-208, CSB:SIC1-10) 0 (Low) before trial.
So to speak, the bus is used by time-division as shown in Fig 5-14, 5-15, 5-16.
Two and more devices can't be accessed simultaneously.

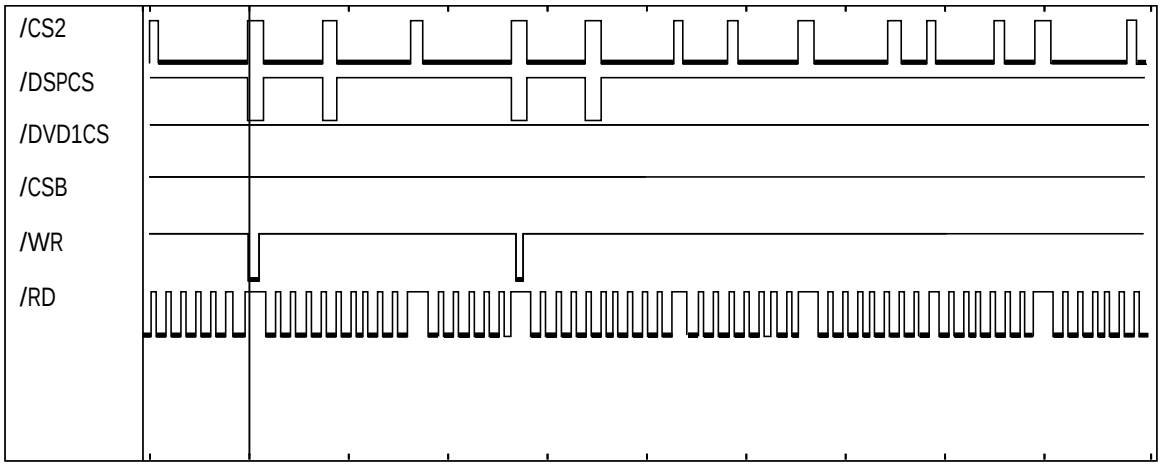

Fig. 5-14

- CH1 : CS2 (MIC2-22, EPROM CHIP SELECT)
- CH2 : DSPCS (DIC1-2, DATA PROCESSOR CHIP SELECT)
- CH3 : DVD1CS (ZIC1-208, A/V DECODER CHIP SELECT)
- CH4 : SRVCS (SIC1-10, DIGITAL SERVO CHIP SELECT)
- CH5 : WR (MIC1-89, MICOM OUTPUT WRITE SIGNAL)
- CH6 : RD (MIC1-88, MICOM OUTPUT READ SIGNAL)

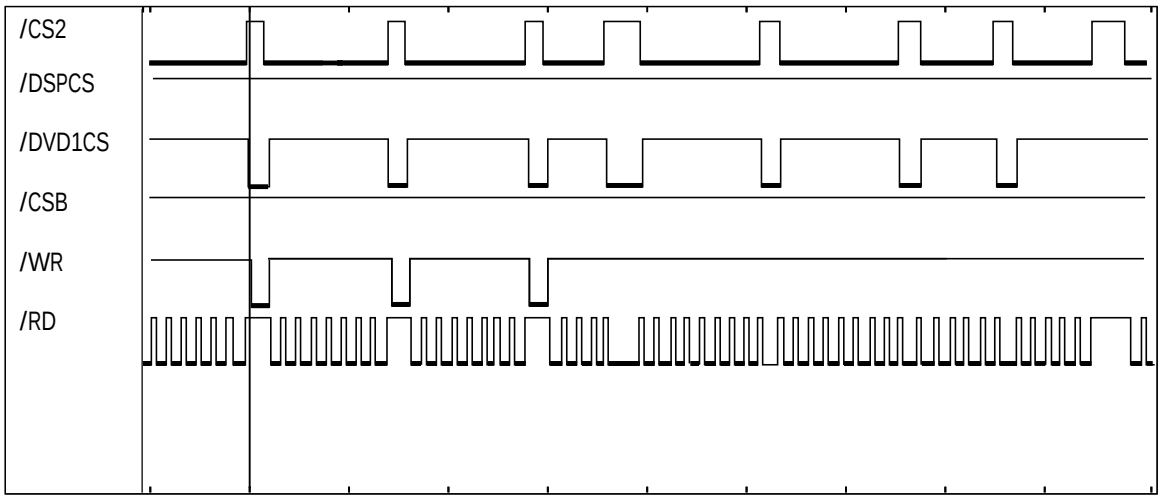

Fig. 5-15 DSP Access

- CH1 : CS2 (MIC2-22, EPROM CHIP SELECT)
- CH2 : DSPCS (DIC1-2, DATA PROCESSOR CHIP SELECT)
- CH3 : DVD1CS (ZIC1-208, A/V DECODER CHIP SELECT)
- CH4 : SRVCS (SIC1-10, DIGITAL SERVO CHIP SELECT)
- CH5 : WR (MIC1-89, MICOM OUTPUT WRITE SIGNAL)
- CH6 : RD (MIC1-88, MICOM OUTPUT READ SIGNAL)

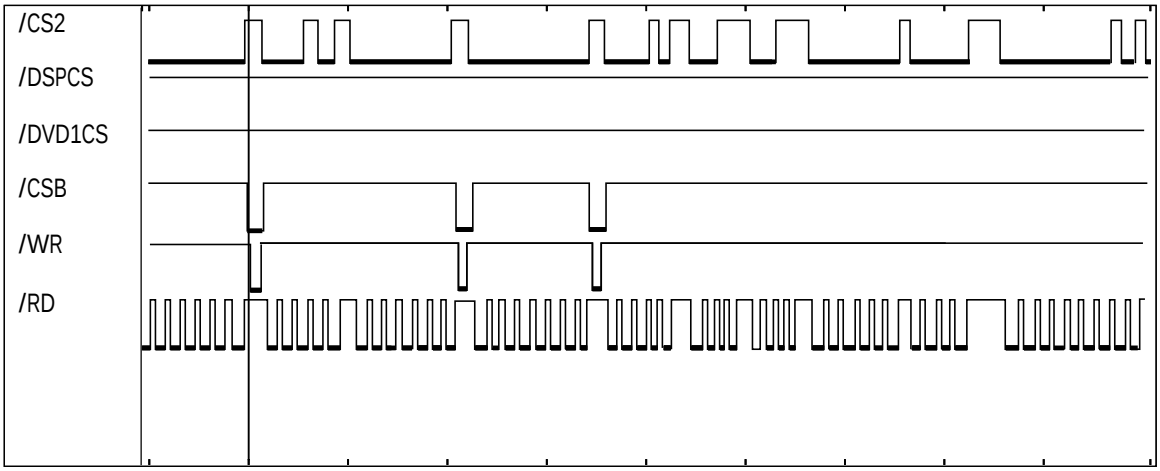

Fig. 5-16 Servo Access

- CH1 : CS2 (MIC2-22, EPROM CHIP SELECT)
- CH2 : DSPCS (DIC1-2, DATA PROCESSOR CHIP SELECT)
- CH3 : DVD1CS (ZIC1-208, A/V DECODER CHIP SELECT)
- CH4 : SRVCS (SIC1-10, DIGITAL SERVO CHIP SELECT)
- CH5 : WR (MIC1-89, MICOM OUTPUT WRITE SIGNAL)
- CH6 : RD (MIC1-88, MICOM OUTPUT READ SIGNAL)

5-4 Servo

5-4-1 Outline

SERVO system of DVD is divided into Focusing SERVO, Tracking SERVO, SLED Linked SERVO and CLV SERVO (DISC Motor Control SERVO).

1) Focusing SERVO
   Focuses the optical spot output from object lens onto the disc surface. Maintains a uniform distance between object lens of Pick-up and disc (for surface vibration of disc).

2) Tracking SERVO
   Make the object lens follow the disc track in use of tracking error signal (created from Pick-up).

3) SLED Linked SERVO
   When the tracking actuator inclines outwardly as the object lens follows the track during play, the SLED motor moves slightly (and counteracts the incline).

4) CLV SERVO (DISC Motor Control SERVO)
   Controls the disc motor to maintain a constant linear velocity (necessary for RF signal).

5-4-2 Block Diagram

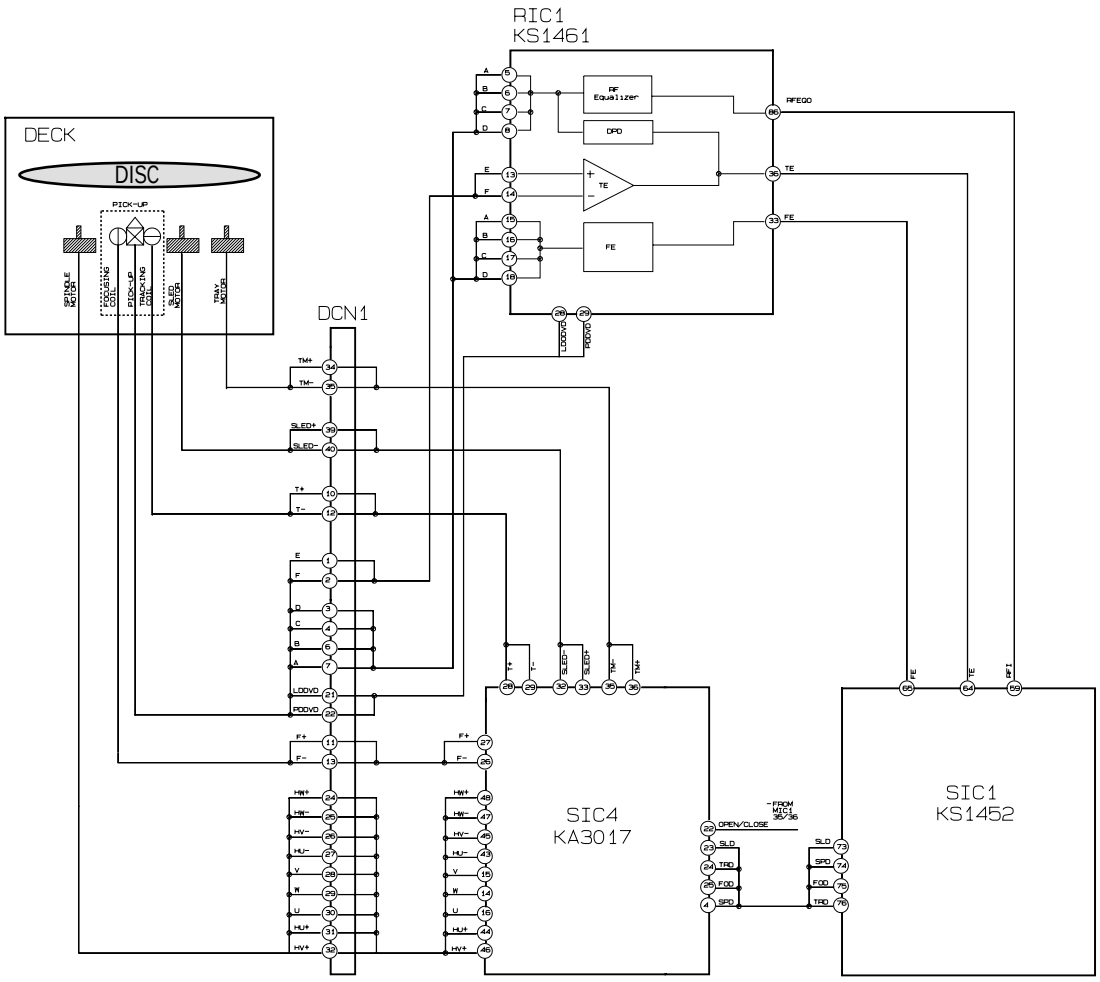

Fig. 5-17

5-4-3 Operation

1) FOCUSING SERVO

(1) FOCUS INPUT

The focus loop is changed from open loop to closed loop, and the triangular waveform moves the object lens up and down (at pin 75 of SIC1 during Focus SERVO ON.) At that time, S curve is input to pin 65 of SIC1.

ABAD (pin 39 of RIC1) signal, summing signal of PD A, B, C, D, is generated, and zero cross(2.5V) point occurs when S curve is focused and ABAD signal exceeds a preset,constant value. The focus loop is changed to closed loop, and the object lens follows the disc movement, maintaining a constant distance from the disc. (these operations are same in CD and DVD).

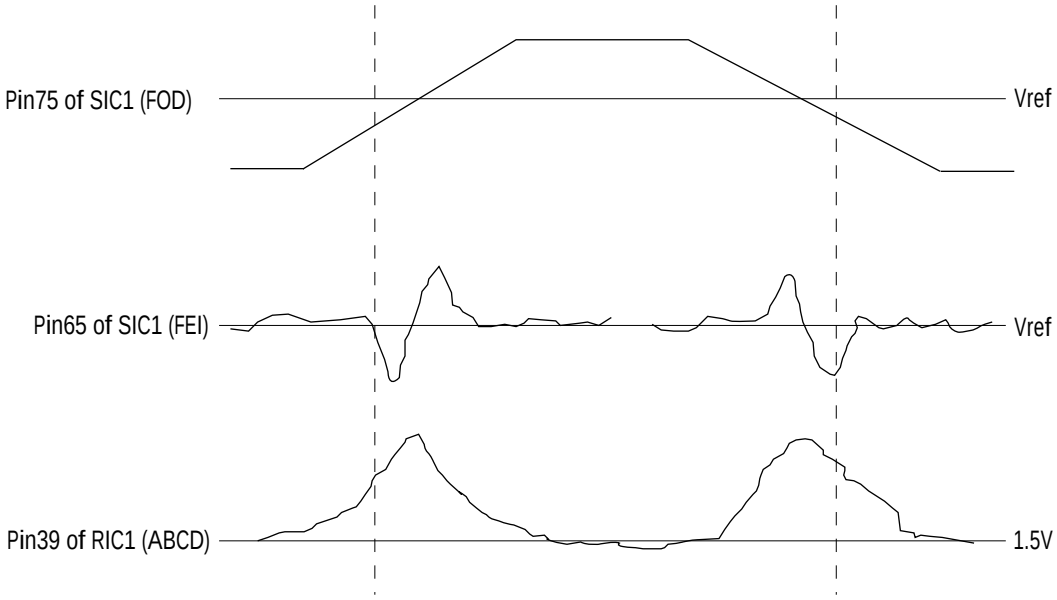

Fig. 5-18

(2) PLAY

When focus loop closes the loop during focus servo on, both pin 65 and pin 75 of SIC1 are controlled by VREF voltage (approx. 2.5V), and pin 26, 27 of SIC4 are approximately 4.5V.

2) TRACKING SERVO

(1) NORMAL PLAY MODE

❶ For DVD

Composite : The signal output from PD A, B, C, D of Pick-up, the tracking error signal (pin36 of RIC1) uses the phase difference of A+C and B+D in RIC1, and inputs to terminal 64 of SIC1. Then, it is output to SIC1 pin 76 via digital equalizer, and applied to the tracking actuator through SIC4.

Pins 76 of SIC1 is controlled by VREF(approx. 2.5V) during normal play.

Meanwhile, DVD repeats the track jump from 1 to 4 in inner direction at normal play (because data- read speed from disc is faster than data output speed on screen).

❷ For CD, VCD

Receive the signal output through E, F of Pick-up, from RIC1. The tracking error signal is similar to DVD.

(2) SEARCH Mode :

Search mode : Fine seek,(Moving the tracking actuator slightly little below 255 track) and coarse search, moving much in use of sled motor. The coarse search will be described in sled linked servo and now, the fine seek is explained shortly.
If the object lens is located near target, cut off the tracking loop and give the control signal as many as desired count to move the tracking actuator via SIC1 pin 76 terminal(TRD).

3) SLED LINKED SERVO

- Normal play mode
  Move SLED motor slightly by means of PWM signal in SIC1 pin 73, as the tracking actuator moves along with track during play. Control to move the entire Pick-up as the tracking actuator moves.

- Coarse serach mode
  In case of long-distance search (such as chapter serach), SIC1 uses MIRR and TZC signal of SIC1-38, 52.
  Then, read ID and compute the existing track count after input of next
  track. If the existing track count is within fine seek range, tracking begins using fine seek.

4) CLV SERVO(DISC MOTOR CONTROL SERVO)

Input RF signal (from Pick-up) to SIC1 pin 59. Detect SYNC signal from RF in SIC1, and output PWM signal to SIC1 pin 55 for constant linear velocity.

5-5 DVD Data Processor

5-5-1 Outline

DIC1(KS1453) performs Sync detection, EFM demodulation and error correction and Spindle motor control (CLV control) after inputting sliced EFM signal of RF signal at disc playback and EFM read clock (PLCK) signal generated from PLL. Outputs data which converted to the last audio and video from A/V decoder (ZIC1). KS1453 uses external memory(4M DRAM) as buffer as well as for error correction and carries out Variable Bit Rate transfer function. VBR function uses the external buffer as buffer to absorb the difference of transfer rate occurring because the transfer rate of disc playback is faster than data transfer rate demanded by A/V decoder(Video/Audio Signal Process Chip).
In case of general disc refresh, the memory is almost filled up periodically. It is because Write rate to memory after disc playback and signal process is faster than Read of A/V decoder. When the memory is filled, this status is reported by interrupt to main micom, which controls the servo to kick back the pick-up to the previous track after memorizing the last data read from disc until now. It takes some times to jump to the previous track and return to the original(jump location) again. The memory will have an empty space because A/V decoder reads out data of memory.
When the memory has an empty space, where data can be processed and written and the pick-up correctly gets to the original location(before kick back location) again, it reads data again avoids the interrupt of data read previously. The basic operation repeats to perform as described above.

5-5-2 Block Diagram

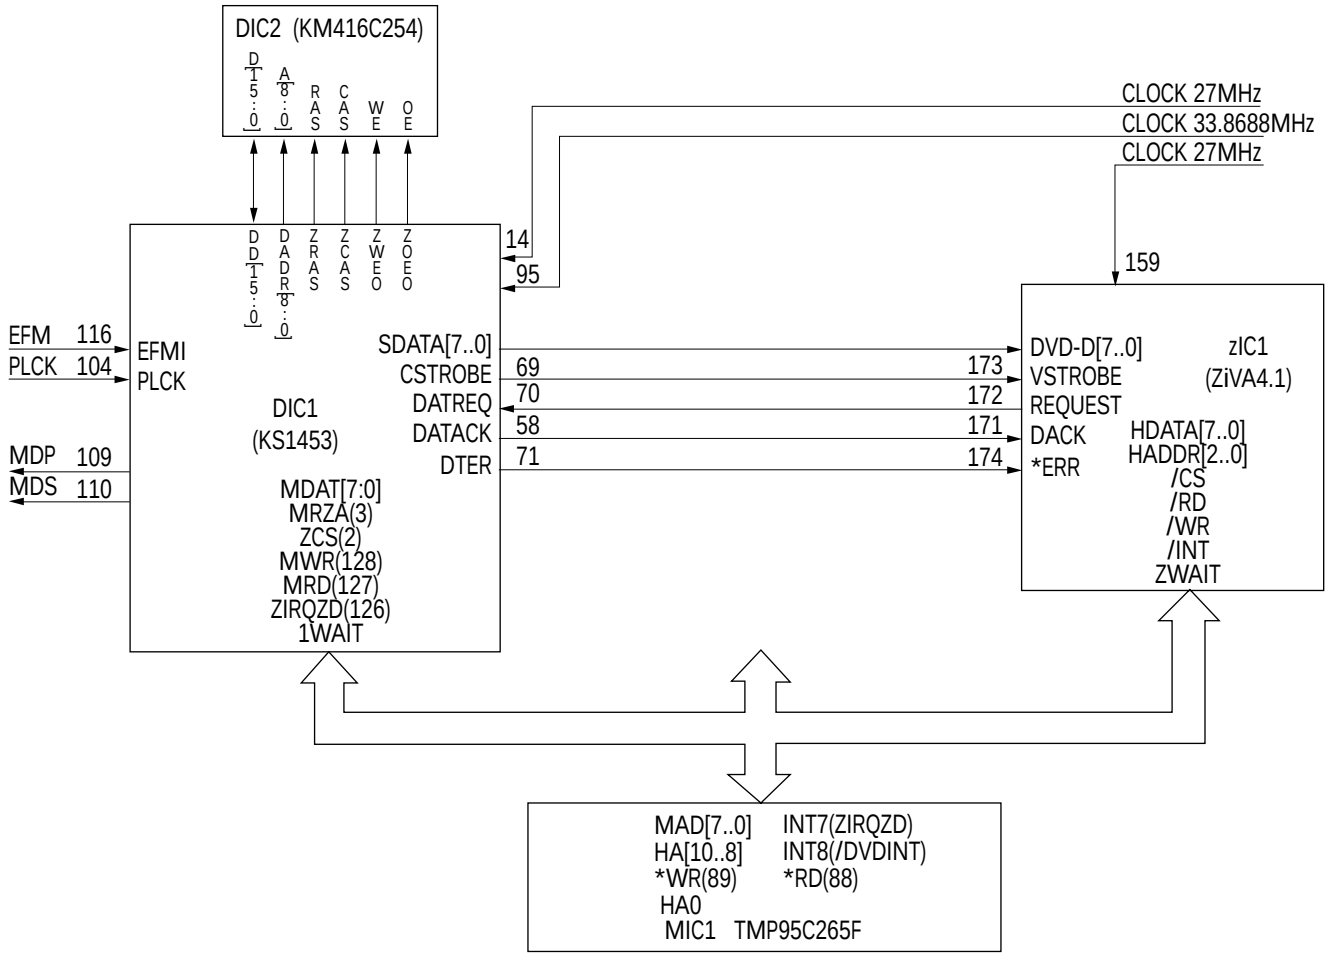

Fig. 5-19

5-5-3 Waveform Description

It measures the timing that data processed in DIC1 at DVD playback.

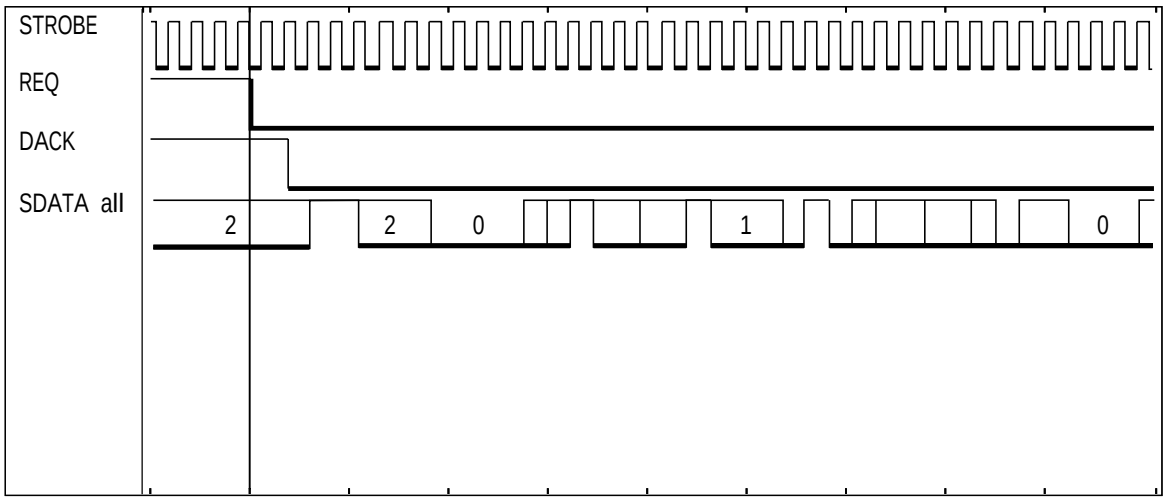

Fig. 5-20

- CH1 : STROBE (DIC1-69, CLOCK)
- CH2 : REQ (DIC1-70, DATA REQUEST)
- CH3 : DACK (DIC1-58, DATA ACKNOWLEDGE)
- CH4 : SDATA (DIC1-60~67, DATA)

5-6 Video

5-6-1 Outline

ZIC1(A/V decoder with video encoder) diverges from the 27MHz crystal, then generates VHSYNC and HSYNC. ZIC1(A/V decoder with video encoder) does RGB encoding,copy guard processing and D/A conversion of 8bit video data internally inputted from video decoder block by MIC1 (Micom).
Video signal converted into analog signal is outputted via amplifier of analog part.

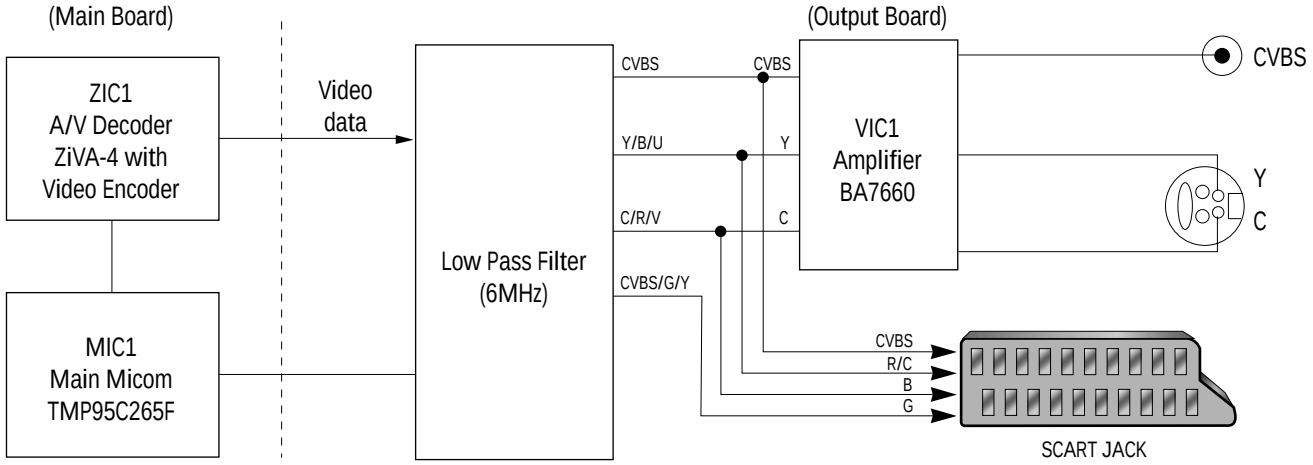

Fig. 6-21 Video Output Block Diagram

5-6-2 NTSC/PAL Digital Encoder (ZIVA-4.1 ; Buit in video encode)

ZIC1 inputted from pin 159 with 27MHz generates HSYNC and VSYNC which are based on video signal.
ZIC1 is synchronous signals with decoded video signal and control the output timing of 8bit video signal of ITU-R601 format.
The inputted 8bit data which decoded from video decoder block is demuxed with each 8bit of R, G, B.
The separate signal is encoded to NTSC/PAL by control of MIC1.
The above signals, which are CVBS(Composite Video Burst Synchronized)/G(GREEN)/Y[PIN139], Y(S_VIDEO)/B(BRUE)/Pb[PIN145] and C(S_VIDEO)/R(RED)/Pr[PIN151], are selectively outputted CVBS +S_VIDEO, R, G, B by the rear switch.
In Course of encoding,8bit data can extend to 10bit or more. To convert the extended data to quantization noise as possible,ZIC1 adopts 10bit D/A converter. ZIC1 perform video en-coding as well as copy protection.

5-6-3 Amplifier (VIC1, VIC2 : BA7660)

VIC1 and VIC2 are 6dB amplifier. Based on CVBS signal, the final output level must be 2Vpp without 75ohm terminal resitance. Because the level of video encoder output is only 1.1Vpp, the level is adjusted with the special amplifier. When mute of pin 1 is high active, if the pin is floating and connecte to power, the output isgnal is never outputted. CVBS, Y, C, R, G, B outputted from video encoder are inputted to VIC1 (Pin 7,Pin2,Pin4), and VIC2 (Pin 7,Pin 4,Pin 2) respectively and outputted from VIC1(Pin15,Pin13,Pin10) and VIC2 (Pin 15,Pin 13,Pin 10). Pin 9, Pin 12, Pin 14 of VIC1, VIC2 are feedback pin to SAG compensation (DC characteristic compensation of siganl).
The signal to which gain is adjusted by amplifier is outputted from jack via 75ohm Resistance (VR10~VR13, VR22~24).

5-6-4 Scart Jack Output

The SCJ1 of scart jacks is used for connecting a TV.
When the DVD player is turned on, the RGB, CVBS, or S-VIDEO is outputted to SCJ1.
Switching of power on / off is controlled by SCIC3.
The control signal (Pin 9,10,11) of SCIC3 is outputted from Pin 100 and pin 92 of FIC1 and the oin 9, 10 of SCIC3 is inverted again by SCQ8.
According to the characteristics that SCART Jack is supplied same pins for the output of CVBS signal and Y signal and for the R signal and C signal, SCIC3 lets the user select two signals in setup menu.
The signal selected by switch is amplified by SIC4 and SIC6 and outputted through the SCART jack.
The scart jack has the function select signal (Pin 8 of SCJ1) that the TV can select automatically RF and the external video signal.
SCQ3, SCQ7, SCQ18 and SCD4 are the circuit to point, FIC1 (Pin100, pin 94) controls. When the TV aspect ratio is 16:9 or 4:3, it is outputted 4.5 ~ 7V or 9.5 ~ 12V each. But, when the DVD video source is 16:9 and 16:9 wide is selected in setup menu, 4.5 ~ 7V is outputted. Otherwise, 9.5 ~ 12V is outputted.
RGB control signal (Pin 16 of SCJ1) is outputted that the TV can select between RGB and CVBS.
SCQ15, SCQ16 are for RGB control and controlled by FIC1 (Pin 91).

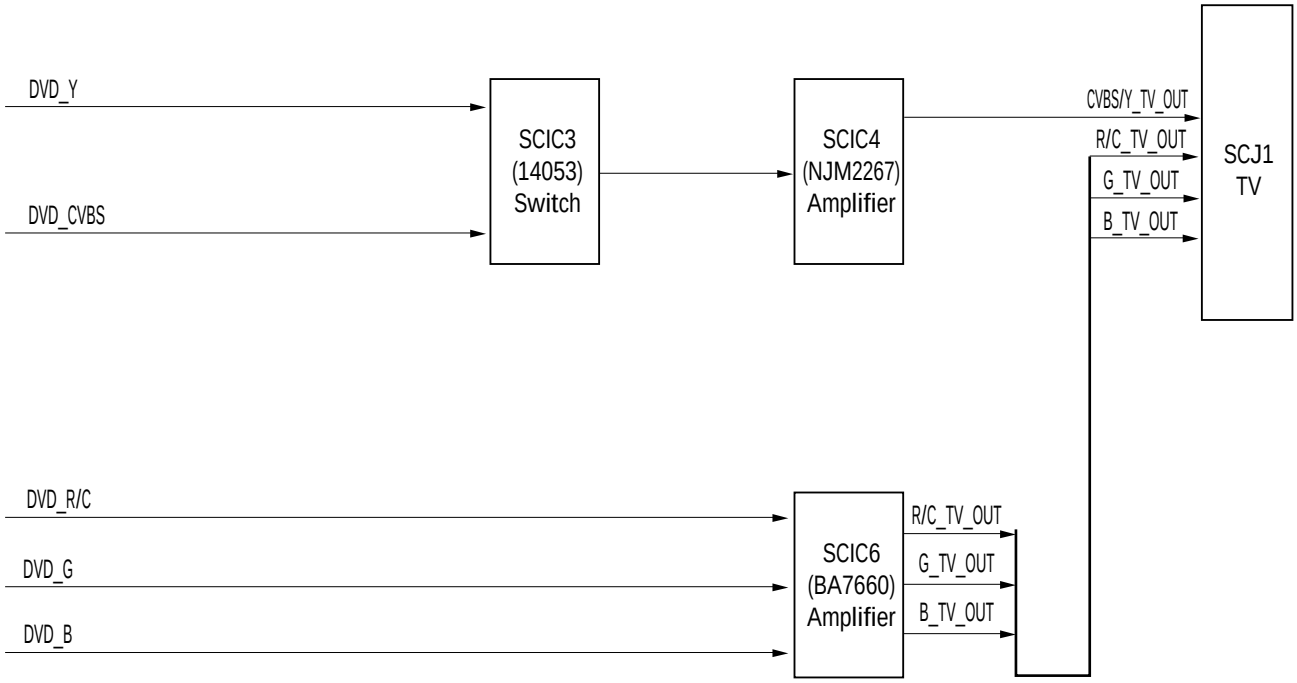

Fig. 5-22 1 Scart Output Block Diagrsm

5-7 Audio

5-7-1 Outline

The four data (Data 0~3) outputted from A/V decoder (ZIC1 ; ZiVA4.1) are supplied to DATA 0 for 2-channel mixed audio output and to DATA 1~3 for Analog audio output (5.1-channel).
The audio data (0~3) transmitted from A/V decoder (ZIC1 ; ZiVA4.1) are converted into analog signal via audio D/A converter and outputted via post filter and amplifier.
CD and VCD are outputted with only 2 channels audio data and transmit them to Data 0 and Data 1.
Front L/R channel is outputted in mixed audio output (L/R output) and analog audio output and surround L/R, center and subwoofer aren't outputted.
If DVD of 2 channels source disc is used, it is outputted by the same way with CD and VCD.
If 5.1-channel source disc, front L/R channel is outputted in Data 1, Surround L/R in Data 2 and Center/Sub-woofer in Data 3. At that time, 5.1 channel can be downmixed in 2 channel in Data 0.

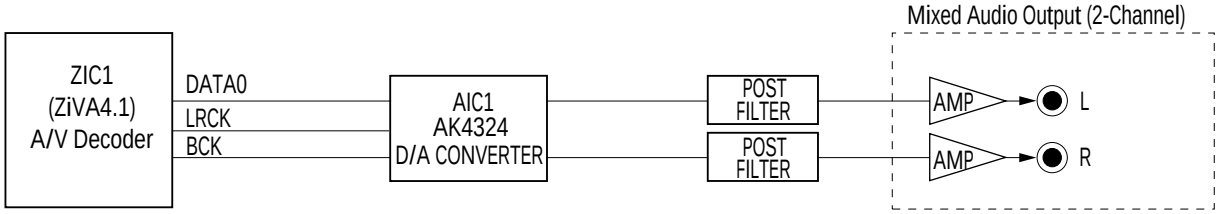

Fig. 5-23 Audio Output Block Diagram

5-7-2 DVD Audio Output

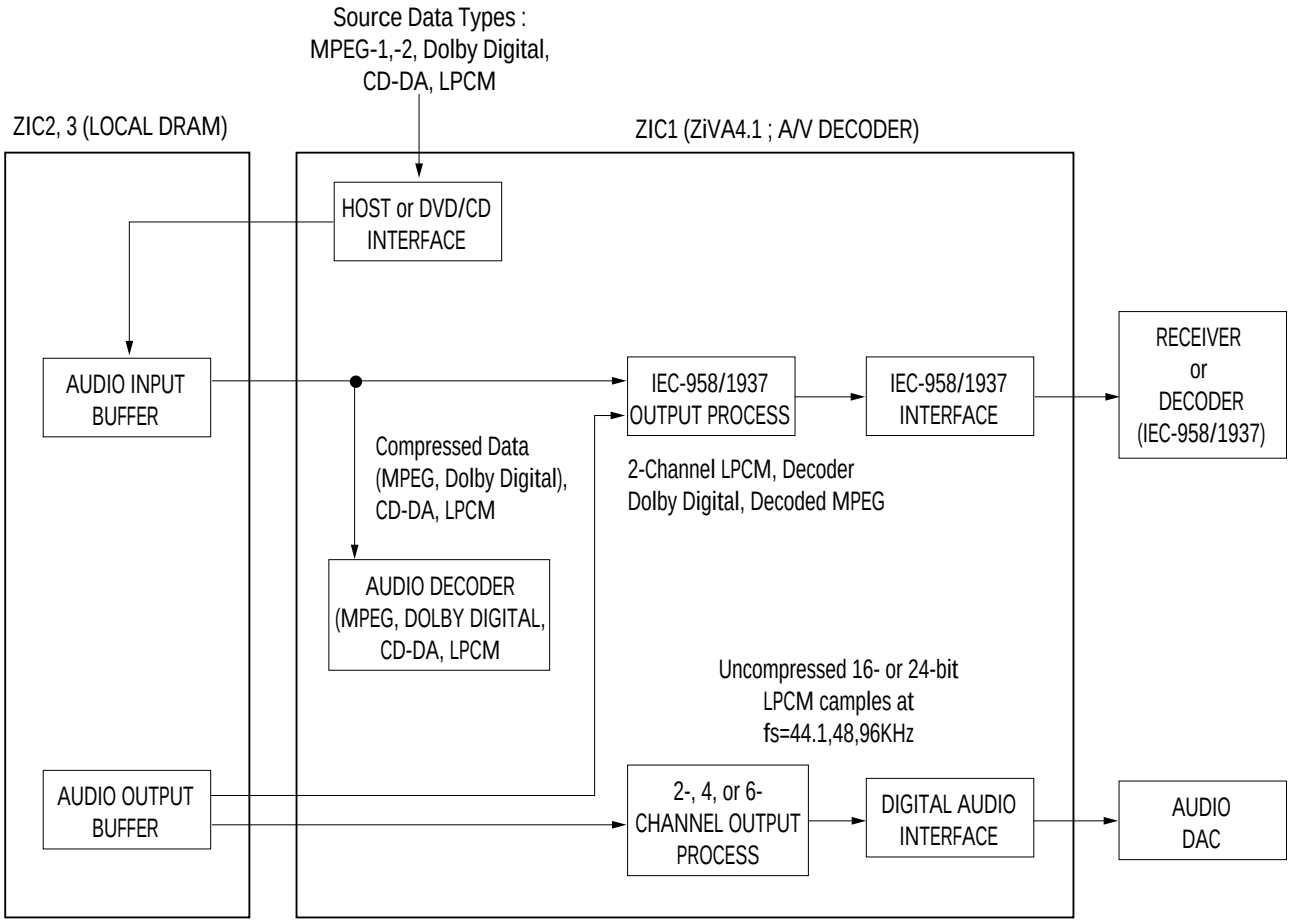

Fig. 5-24 Audio Decoder and Output Interface Datapath

1) Compressed Data

The audio data inputted to ZIC1 (ZiVA4.1) A/V decoder is divided into compressed data and uncompressed data. It is compressed data that is compressed with multi-channel audio data such as Dolby digital, MPEG, DTS, etc. The compressed data inputted to ZIC1 (ZiVA4.1) is converted into the uncompressed data of 2, 4, and 6 channels through ZiVA4.1 built-in audio decoder and is outputted to Data 0, 1, 2, and 3 through digital audio interface. The compressed data is transmitted to external AC-3 amplifier or MPEG/DTS amplifier as IEC-958/1937 transmission data format compressed by ZiVA4.1 built-in IEC-958 output process.

2) Uncompressed Data

The uncompressed data is that data isn't compressed, so it is called CD-DA, LPCM data.
The 2 channels data is converted through audio decoder 2-channel data and Data 0 and Data 1 are outputted in digital audio interface.Via IEC-958 output process, they is transmitted to digital amplifier or AC-3/MPEG/DTS amplifier built in the external digital input source with IEC-958/1937 transmission format.

MEMO

6. Troubleshooting

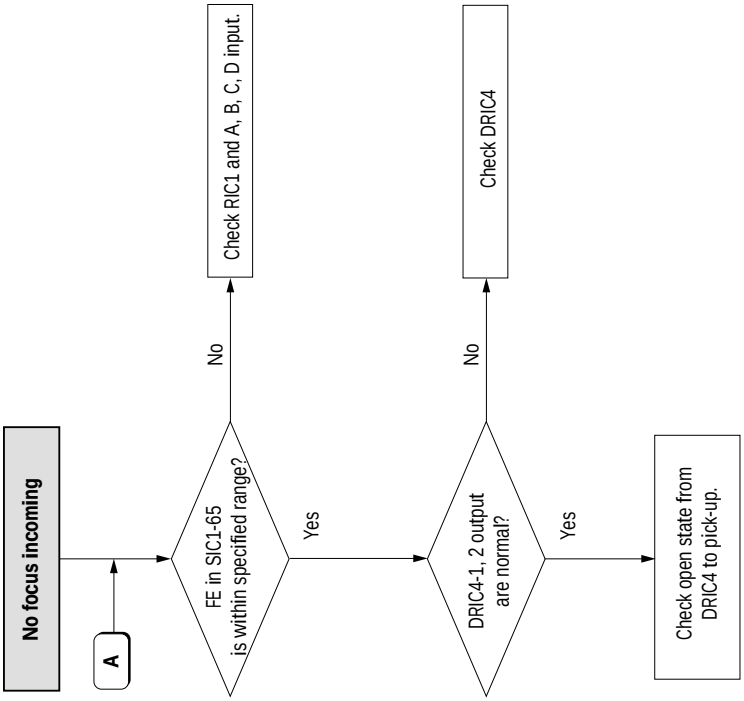

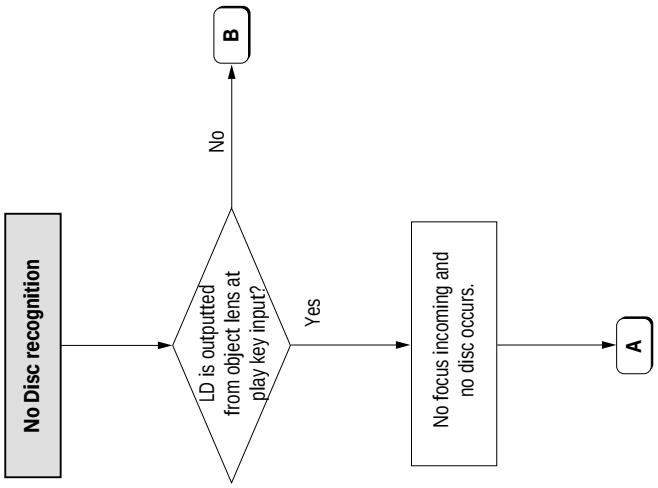

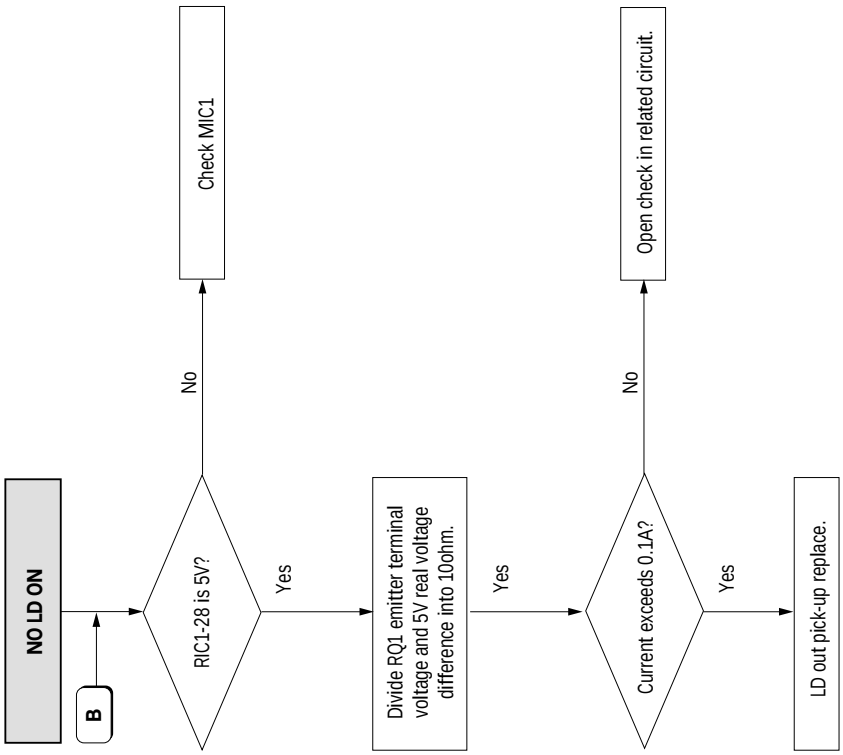
NO LD ON
B
RIC1-28 is 5V?
No
Check MIC1
Yes
Divide RQ1 emitter terminal voltage and 5V real voltage difference into 10ohm.
Yes
Current exceeds 0.1A?
No
Open check in related circuit.
Yes
LD out pick-up replace.

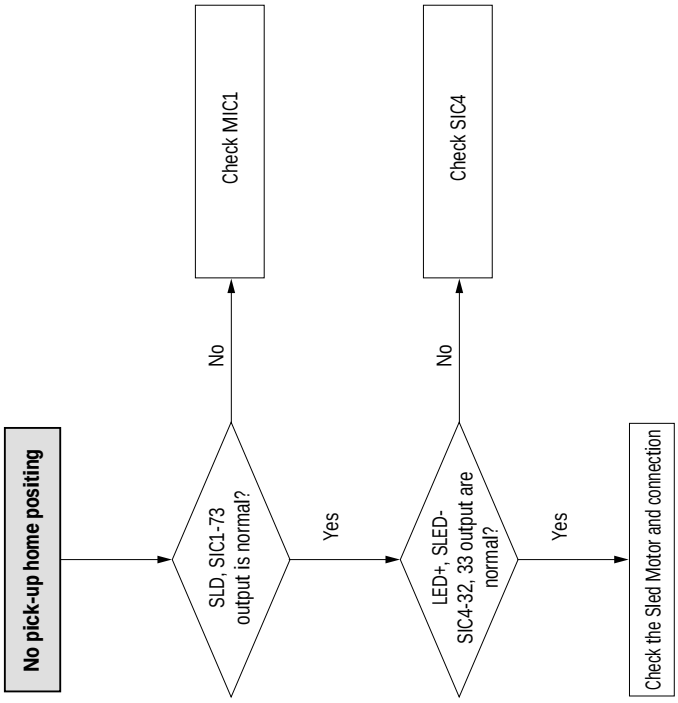
No pick-up home positing
SLD, SIC1-73 output is normal?
No
Check MIC1
Yes
LED+, SLED- SIC4-32, 33 output are normal?
No
Check SIC4
Yes
Check the Sled Motor and connection

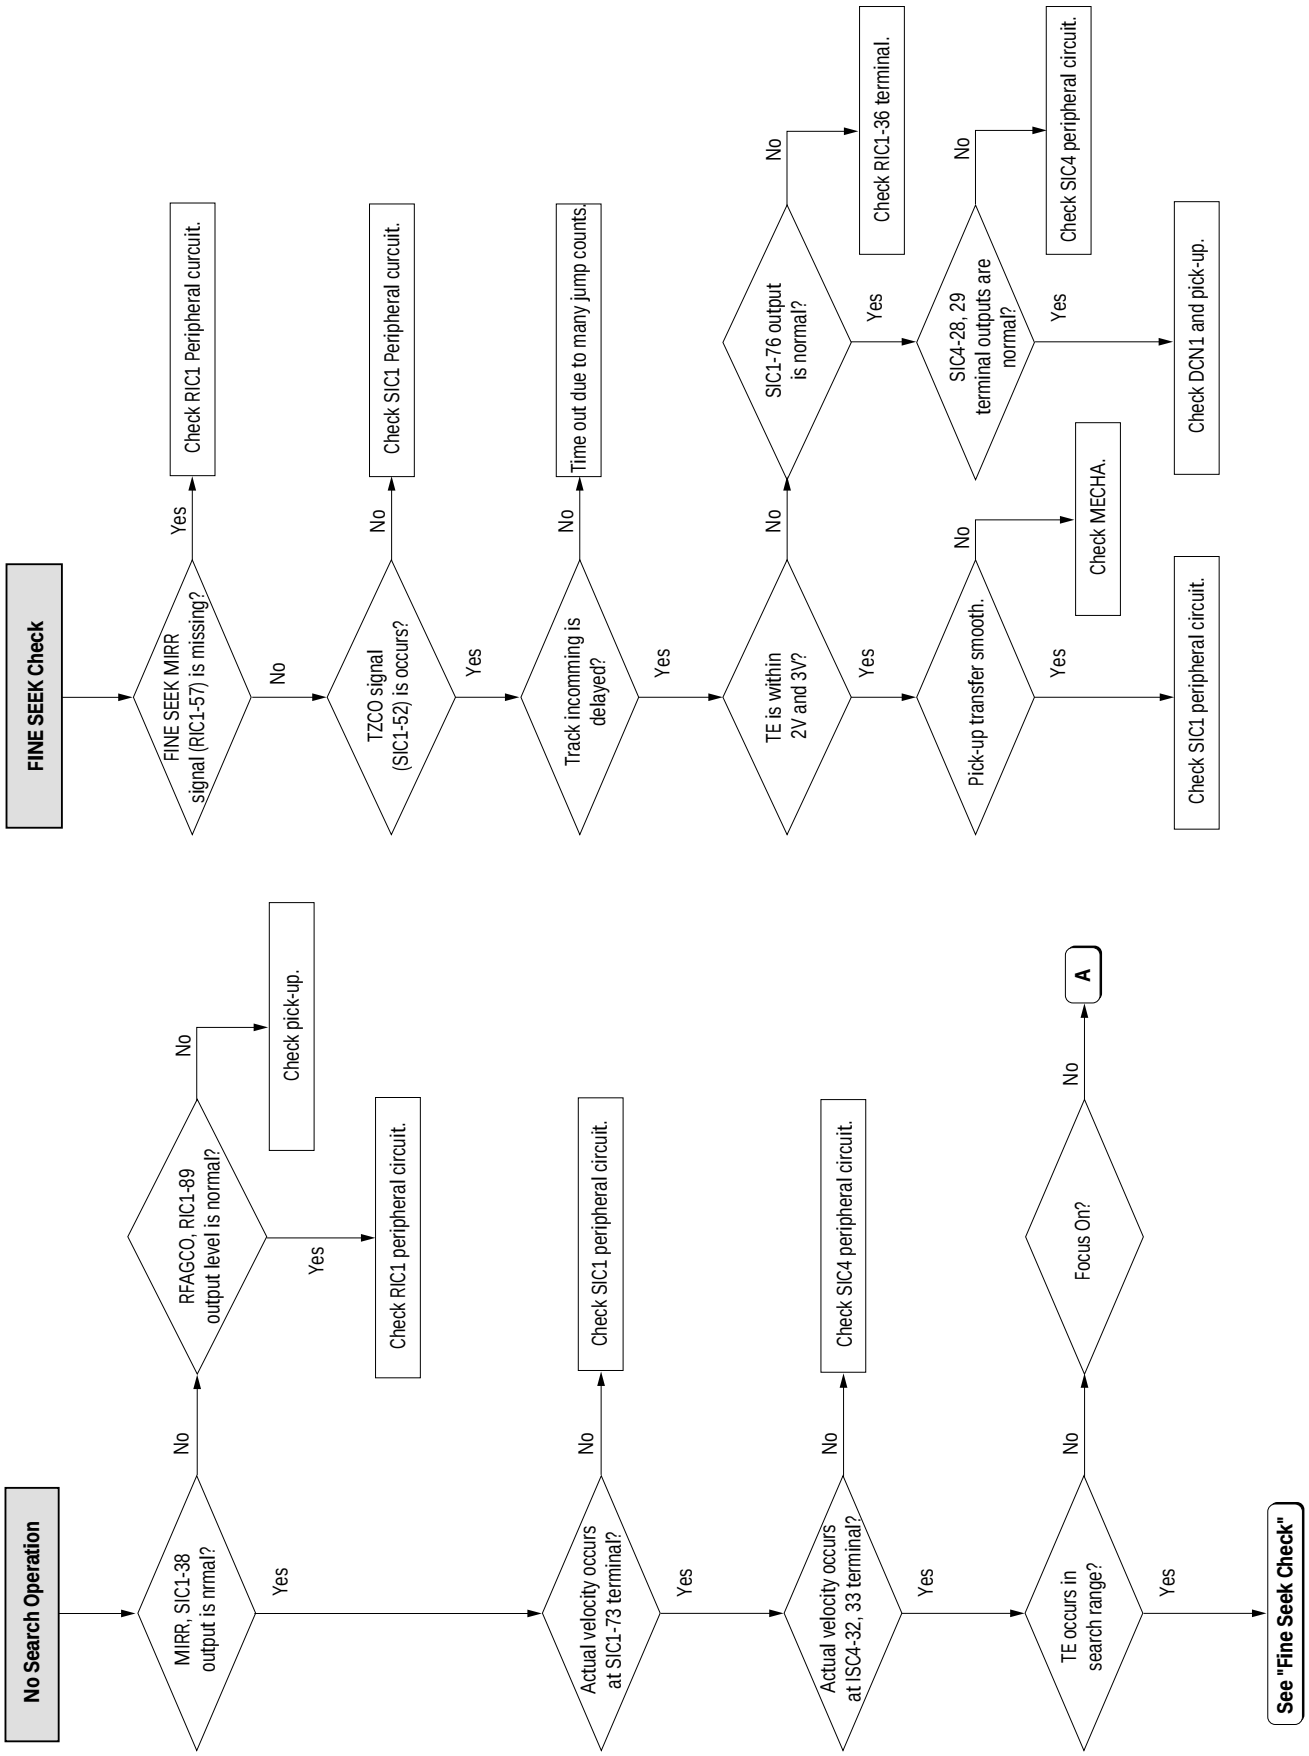
No Search Operation
MIRR, SIC1-38 output is nrmal?
No
Yes
RFAGCO, RIC1-89 output level is normal?
No
Check pick-up.
Yes
Check RIC1 peripheral circuit.
Actual velocity occurs at SIC1-73 terminal?
No
Yes
Check SIC1 peripheral circuit.
Actual velocity occurs at ISC4-32, 33 terminal?
No
Yes
Check SIC4 peripheral circuit.
TE occurs in search range?
No
Yes
Focus On?
No
A
See "Fine Seek Check"
FINE SEEK Check
FINE SEEK MIRR signal (RIC1-57) is missing?
Yes
Check RIC1 Peripheral curcuit.
No
TZCO signal (SIC1-52) is occurs?
No
Check SIC1 Peripheral curcuit.
Yes
Track incomming is delayed?
No
Time out due to many jump counts.
Yes
TE is within 2V and 3V?
No
SIC1-76 output is normal?
No
Check RIC1-36 terminal.
Yes
Pick-up transfer smooth.
No
Check MECHA.
Yes
Check SIC1 peripheral circuit.
SIC4-28, 29 terminal outputs are normal?
No
Check SIC4 peripheral circuit.
Yes
Check DCN1 and pick-up.

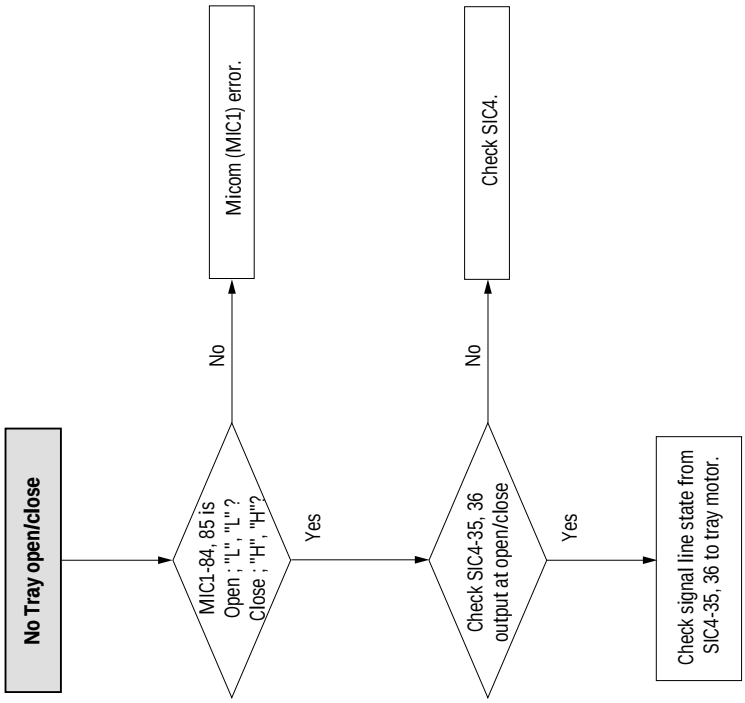
No Tray open/close
MIC1-84, 85 is
Open : "L", "L" ?
Close : "H", "H"?
No
Micom (MIC1) error.
Yes
Check SIC4-35, 36
output at open/close
No
Check SIC4.
Yes
Check signal line state from
SIC4-35, 36 to tray motor.

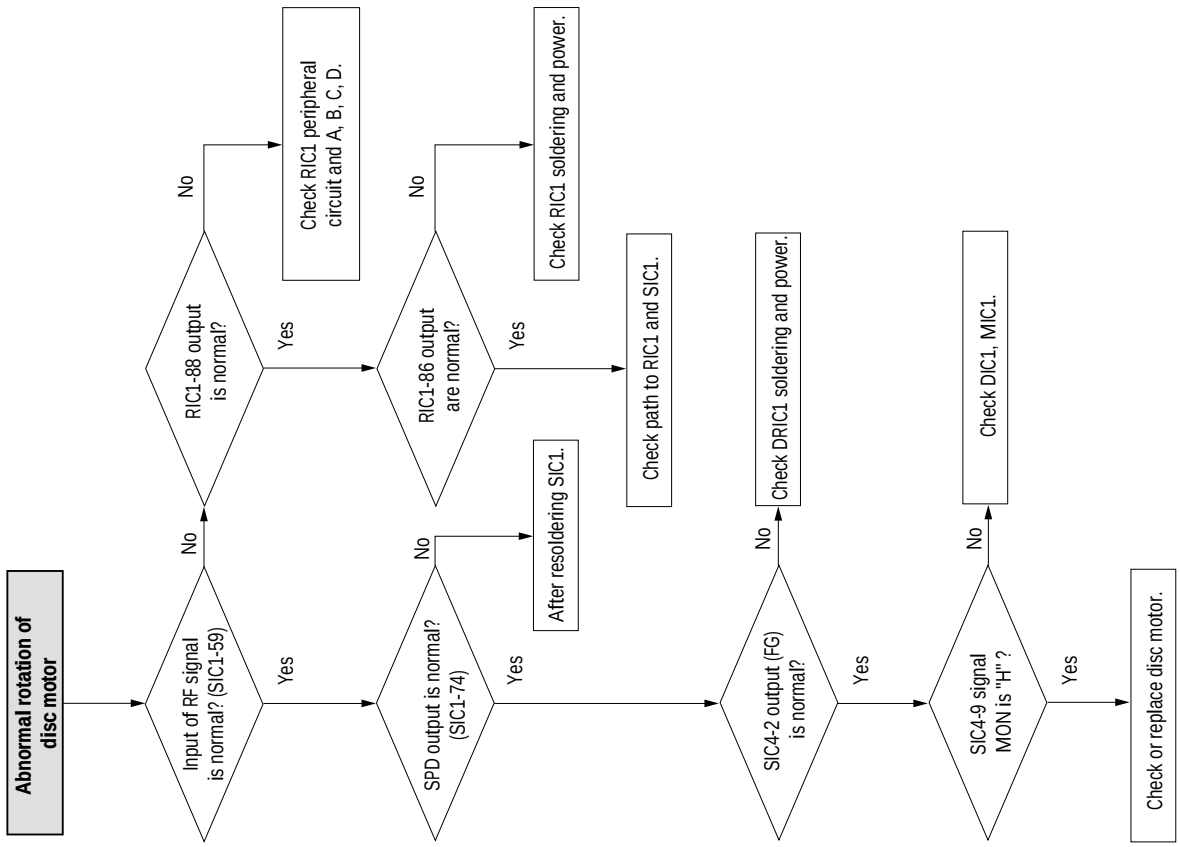
Abnormal rotation of
disc motor
Input of RF signal
is normal? (SIC1-59)
No
Check RIC1 peripheral
circuit and A, B, C, D.
Yes
RIC1-88 output
is normal?
No
Check RIC1 soldering and power.
Yes
RIC1-86 output
are normal?
Check path to RIC1 and SIC1.
No
After resoldering SIC1.
Yes
SPD output is normal?
(SIC1-74)
No
Check DRIC1 soldering and power.
Yes
SIC4-2 output (FG)
is normal?
No
Check DIC1, MIC1.
Yes
SIC4-9 signal
MON is "H" ?
Check or replace disc motor.

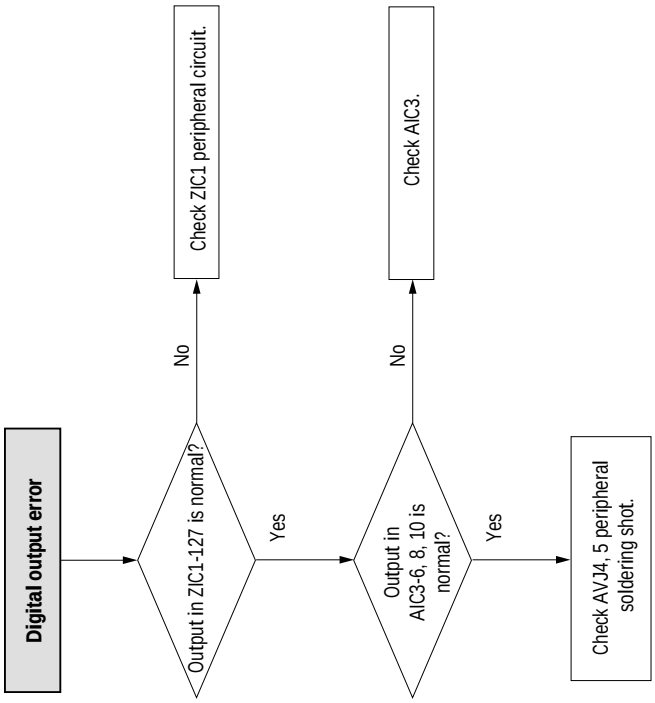
Digital output error
Output in ZIC1-127 is normal?
No
Check ZIC1 peripheral circuit.
Yes
Output in AIC3-6, 8, 10 is normal?
No
Check AIC3.
Yes
Check AVJ4, 5 peripheral soldering shot.

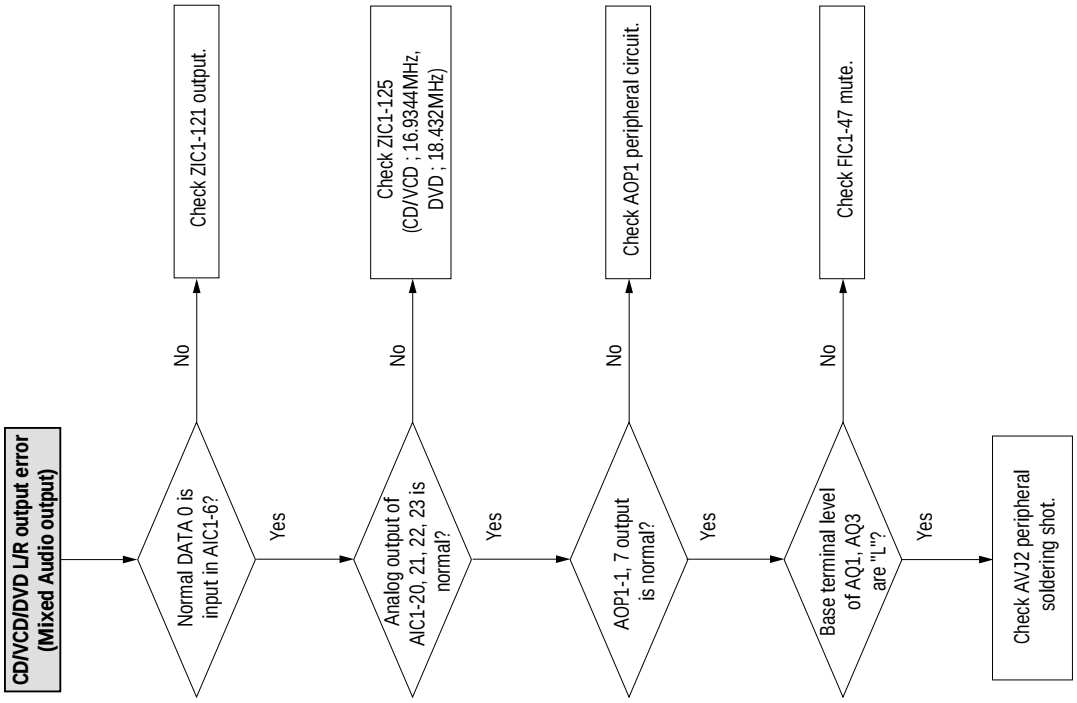
CD/VCD/DVD L/R output error (Mixed Audio output)
Normal DATA 0 is input in AIC1-6?
No
Check ZIC1-121 output.
Yes
Analog output of AIC1-20, 21, 22, 23 is normal?
No
Check ZIC1-125 (CD/VCD : 16.9344MHz, DVD : 18.432MHz)
Yes
AOP1-1, 7 output is normal?
No
Check AOP1 peripheral circuit.
Yes
Base terminal level of AQ1, AQ3 are "L"?
No
Check FIC1-47 mute.
Yes
Check AVJ2 peripheral soldering shot.

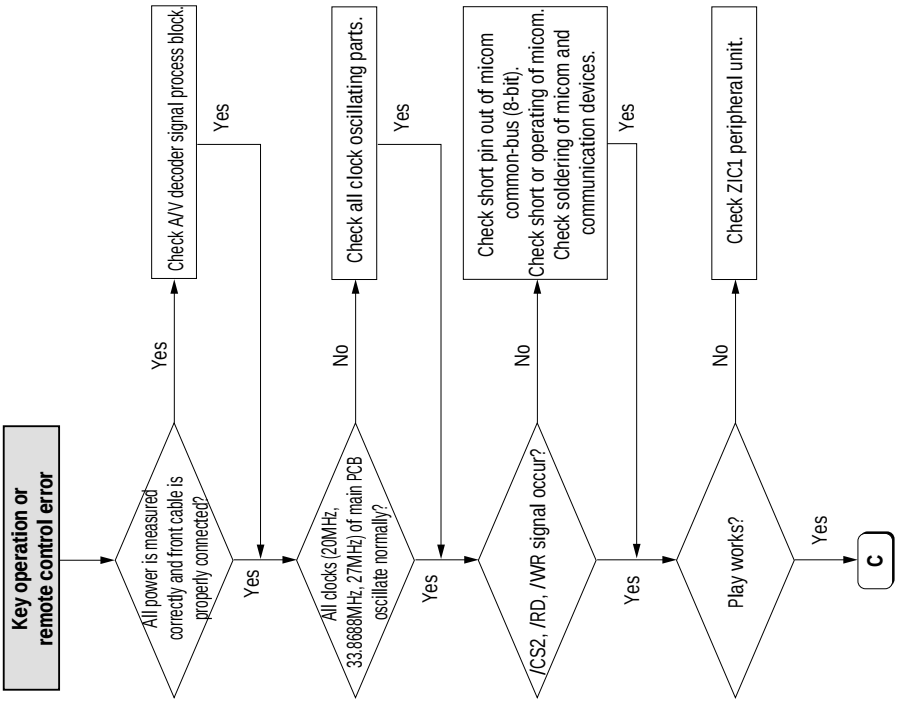
Key operation or remote control error
All power is measured correctly and front cable is properly connected?
Yes
Check A/V decoder signal process block.
Yes
All clocks (20MHz, 33.8688MHz, 27MHz) of main PCB oscillate normally?
No
Check all clock oscillating parts.
Yes
/CS2, /RD, /WR signal occur?
No
Check short pin out of micom common-bus (8-bit).
Check short or operating of micom.
Check soldering of micom and communication devices.
Yes
Play works?
No
Check ZIC1 peripheral unit.
Yes
C

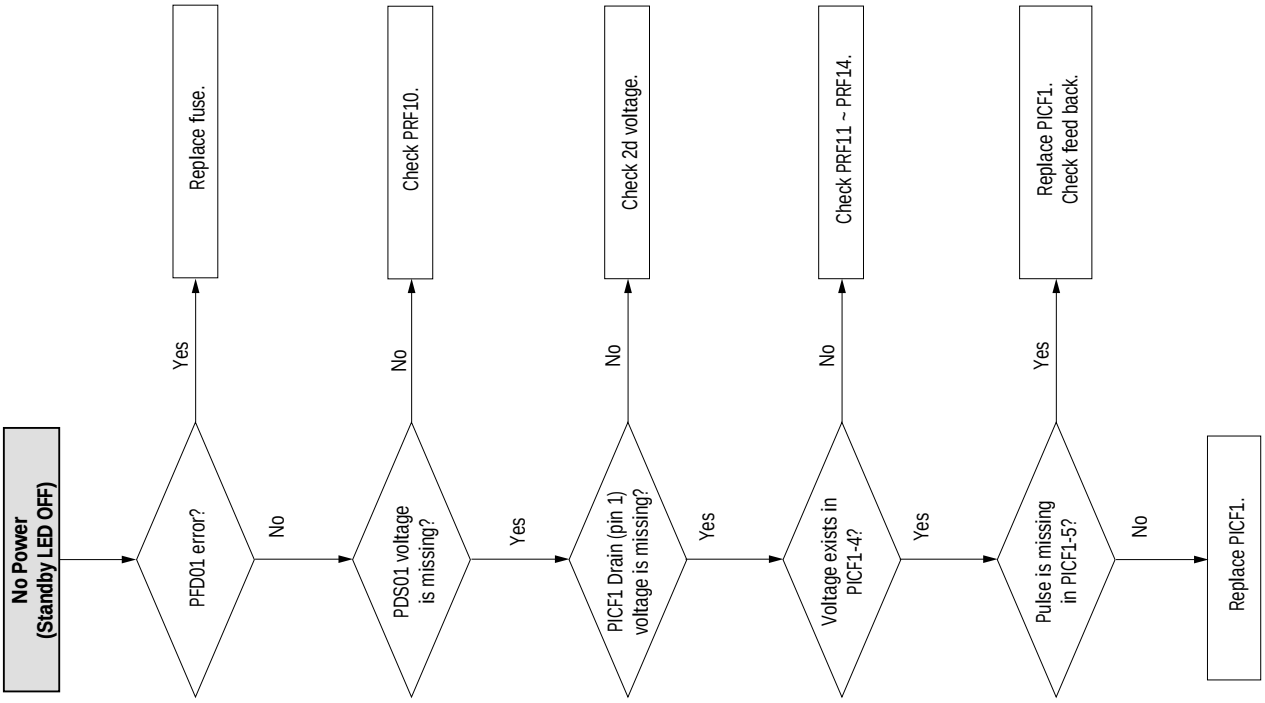
No Power (Standby LED OFF)
PFD01 error?
Yes
Replace fuse.
No
PDS01 voltage is missing?
No
Check PRF10.
Yes
PICF1 Drain (pin 1) voltage is missing?
No
Check 2d voltage.
Yes
Voltage exists in PICF1-4?
No
Check PRF11 ~ PRF14.
Yes
Pulse is missing in PICF1-5?
Yes
Replace PICF1. Check feed back.
No
Replace PICF1.

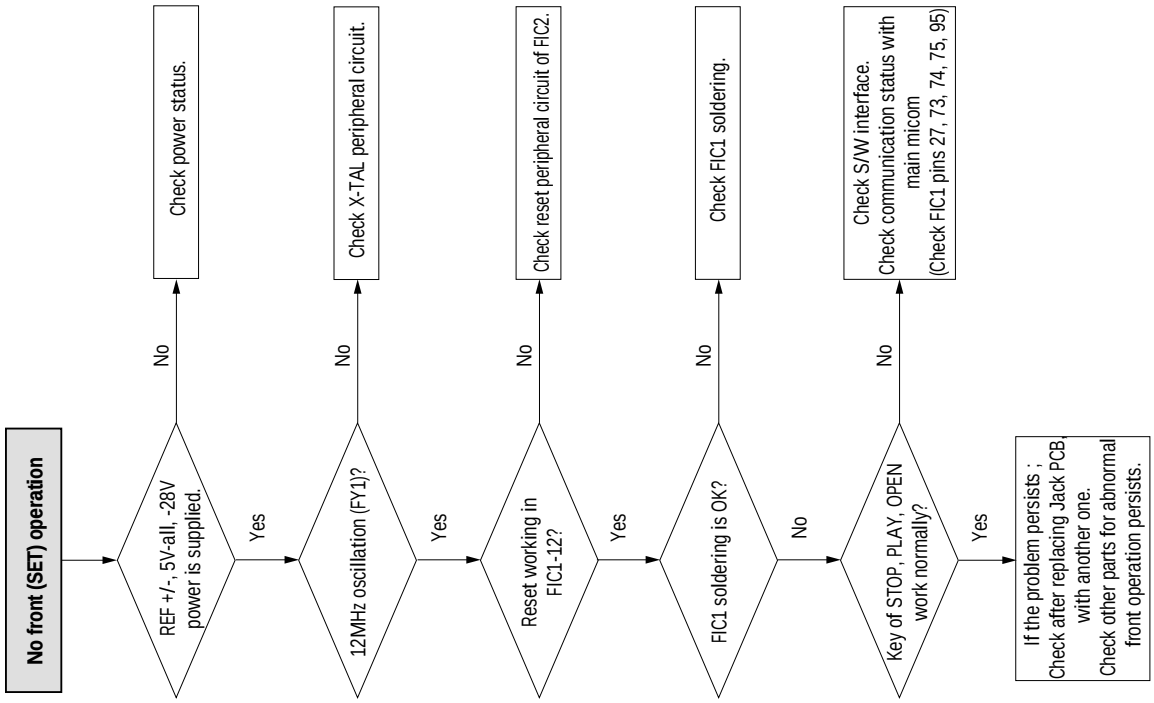
No front (SET) operation
REF +/-, 5V-all, -28V power is supplied.
No
Check power status.
Yes
12MHz oscillation (FY1)?
No
Check X-TAL peripheral circuit.
Yes
Reset working in FIC1-12?
No
Check reset peripheral circuit of FIC2.
Yes
FIC1 soldering is OK?
No
Check FIC1 soldering.
Yes
Key of STOP, PLAY, OPEN work normally?
No
Check S/W interface.
Check communication status with main micom
(Check FIC1 pins 27, 73, 74, 75, 95)
Yes
If the problem persists ;
Check after replacing Jack PCB, with another one.
Check other parts for abnormal front operation persists.

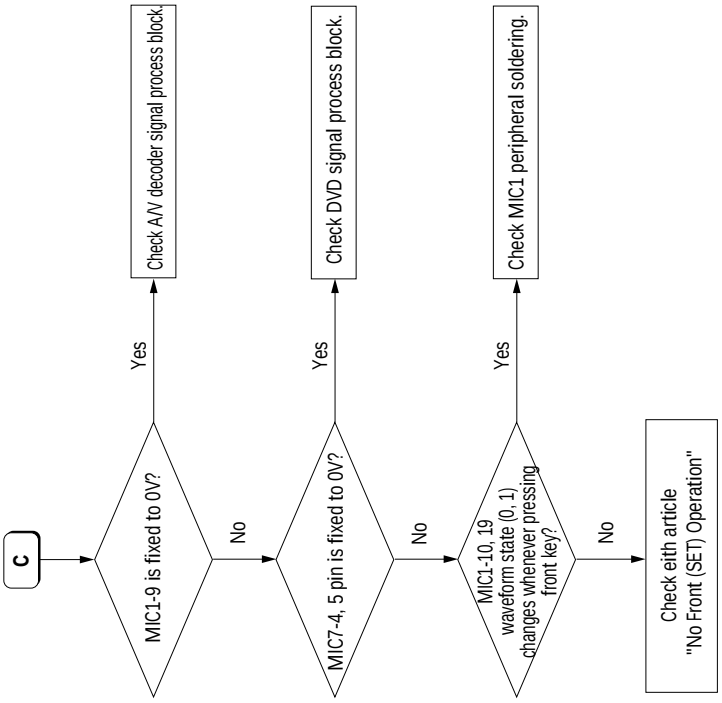
C
MIC1-9 is fixed to 0V?
Yes
Check A/V decoder signal process block.
No
MIC7-4, 5 pin is fixed to 0V?
Yes
Check DVD signal process block.
No
MIC1-10, 19 waveform state (0, 1) changes whenever pressing front key?
Yes
Check MIC1 peripheral soldering.
No
Check eith article "No Front (SET) Operation"

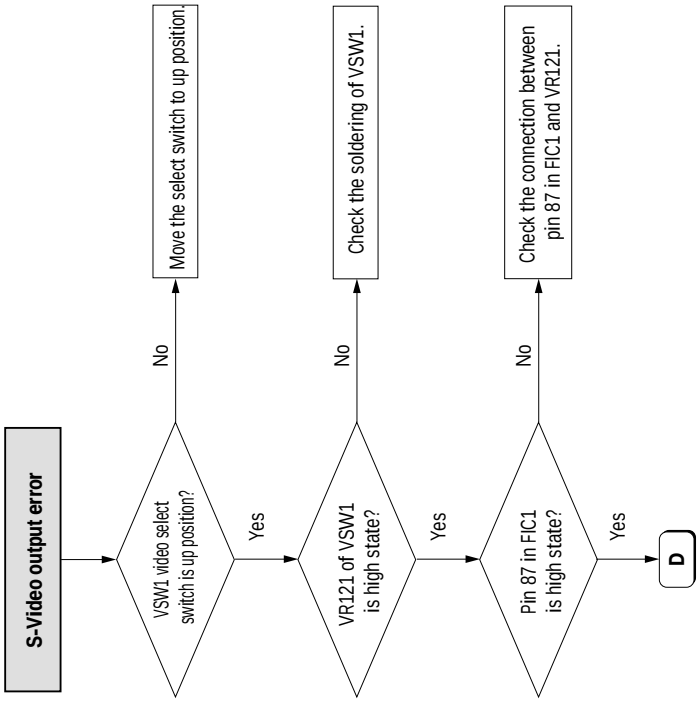
S-Video output error
VSW1 video select switch is up position?
No
Move the select switch to up position.
Yes
VR121 of VSW1 is high state?
No
Check the soldering of VSW1.
Yes
Pin 87 in FIC1 is high state?
No
Check the connection between pin 87 in FIC1 and VR121.
Yes
D

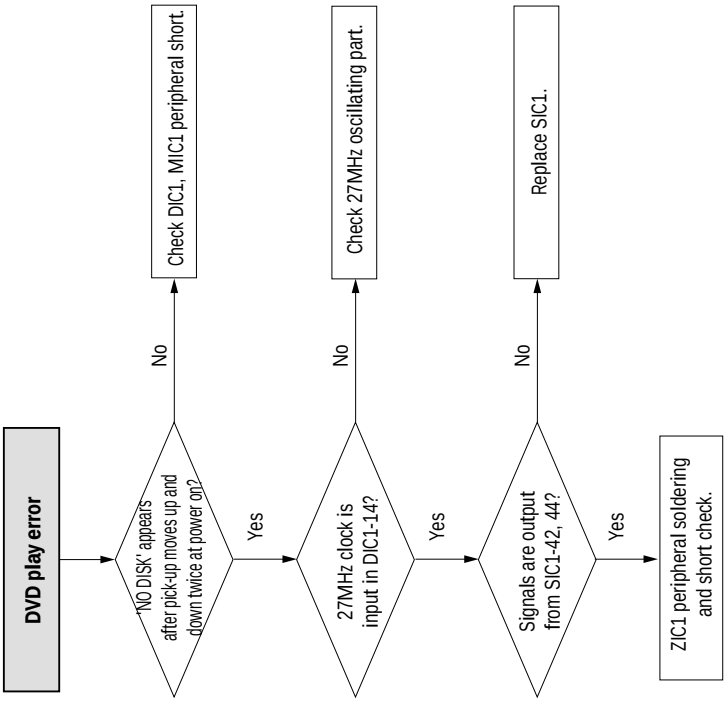
DVD play error
'NO DISK' appears after pick-up moves up and down twice at power on?
No
Check DIC1, MIC1 peripheral short.
Yes
27MHz clock is input in DIC1-14?
No
Check 27MHz oscillating part.
Yes
Signals are output from SIC1-42, 44?
No
Replace SIC1.
Yes
ZIC1 peripheral soldering and short check.

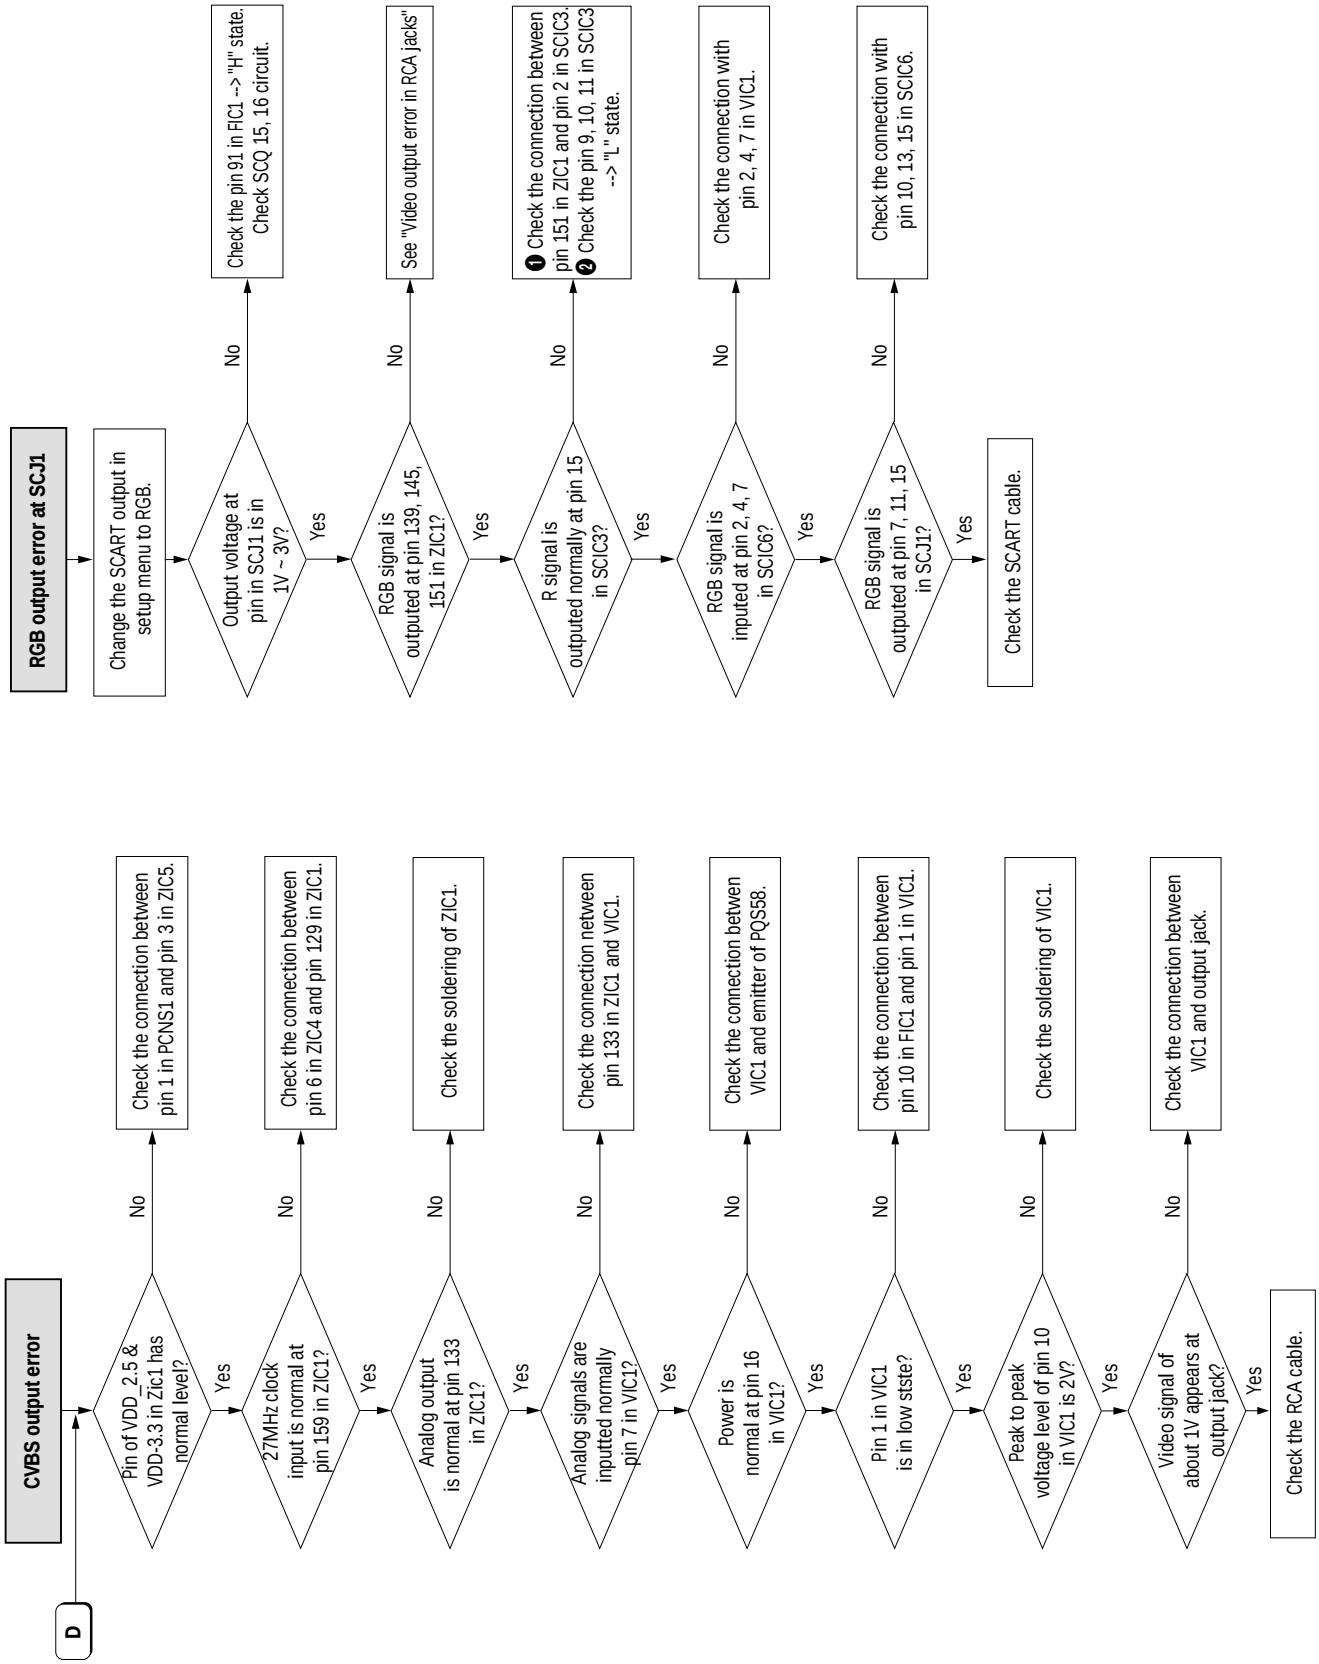
RGB output error at SCJ1
Change the SCART output in setup menu to RGB.
Output voltage at pin in SCJ1 is in 1V ~ 3V?
No
Check the pin 91 in FIC1 --> "H" state. Check SCQ 15, 16 circuit.
Yes
RGB signal is outputed at pin 139, 145, 151 in ZIC1?
No
See "Video output error in RCA jacks"
Yes
R signal is outputed normally at pin 15 in SCIC3?
No
❶ Check the connection between pin 151 in ZIC1 and pin 2 in SCIC3.
❷ Check the pin 9, 10, 11 in SCIC3 --> "L" state.
Yes
RGB signal is inputed at pin 2, 4, 7 in SCIC6?
No
Check the connection with pin 2, 4, 7 in VIC1.
Yes
RGB signal is outputed at pin 7, 11, 15 in SCJ1?
No
Check the connection with pin 10, 13, 15 in SCIC6.
Yes
Check the SCART cable.
D
CVBS output error
Pin of VDD_2.5 & VDD-3.3 in Zic1 has normal level?
No
Check the connection between pin 1 in PCNS1 and pin 3 in ZIC5.
Yes
27MHz clock input is normal at pin 159 in ZIC1?
No
Check the connection between pin 6 in ZIC4 and pin 129 in ZIC1.
Yes
Analog output is normal at pin 133 in ZIC1?
No
Check the soldering of ZIC1.
Yes
Analog signals are inputted normally pin 7 in VIC1?
No
Check the connection netween pin 133 in ZIC1 and VIC1.
Yes
Power is normal at pin 16 in VIC1?
No
Check the connection betwen VIC1 and emitter of PQS58.
Yes
Pin 1 in VIC1 is in low stste?
No
Check the connection between pin 10 in FIC1 and pin 1 in VIC1.
Yes
Peak to peak voltage level of pin 10 in VIC1 is 2V?
No
Check the soldering of VIC1.
Yes
Video signal of about 1V appears at output jack?
No
Check the connection between VIC1 and output jack.
Yes
Check the RCA cable.

MEMO

7. Exploded View and Parts List

Page

7-1 Cabinet Assembly (DVD-611/611B/615) - 7-2

7-2 Cabinet Assembly (DVD-511) - 7-4

7-3 Deck Assembly - 7-6

7-1 Cabinet Assembly (DVD-611)

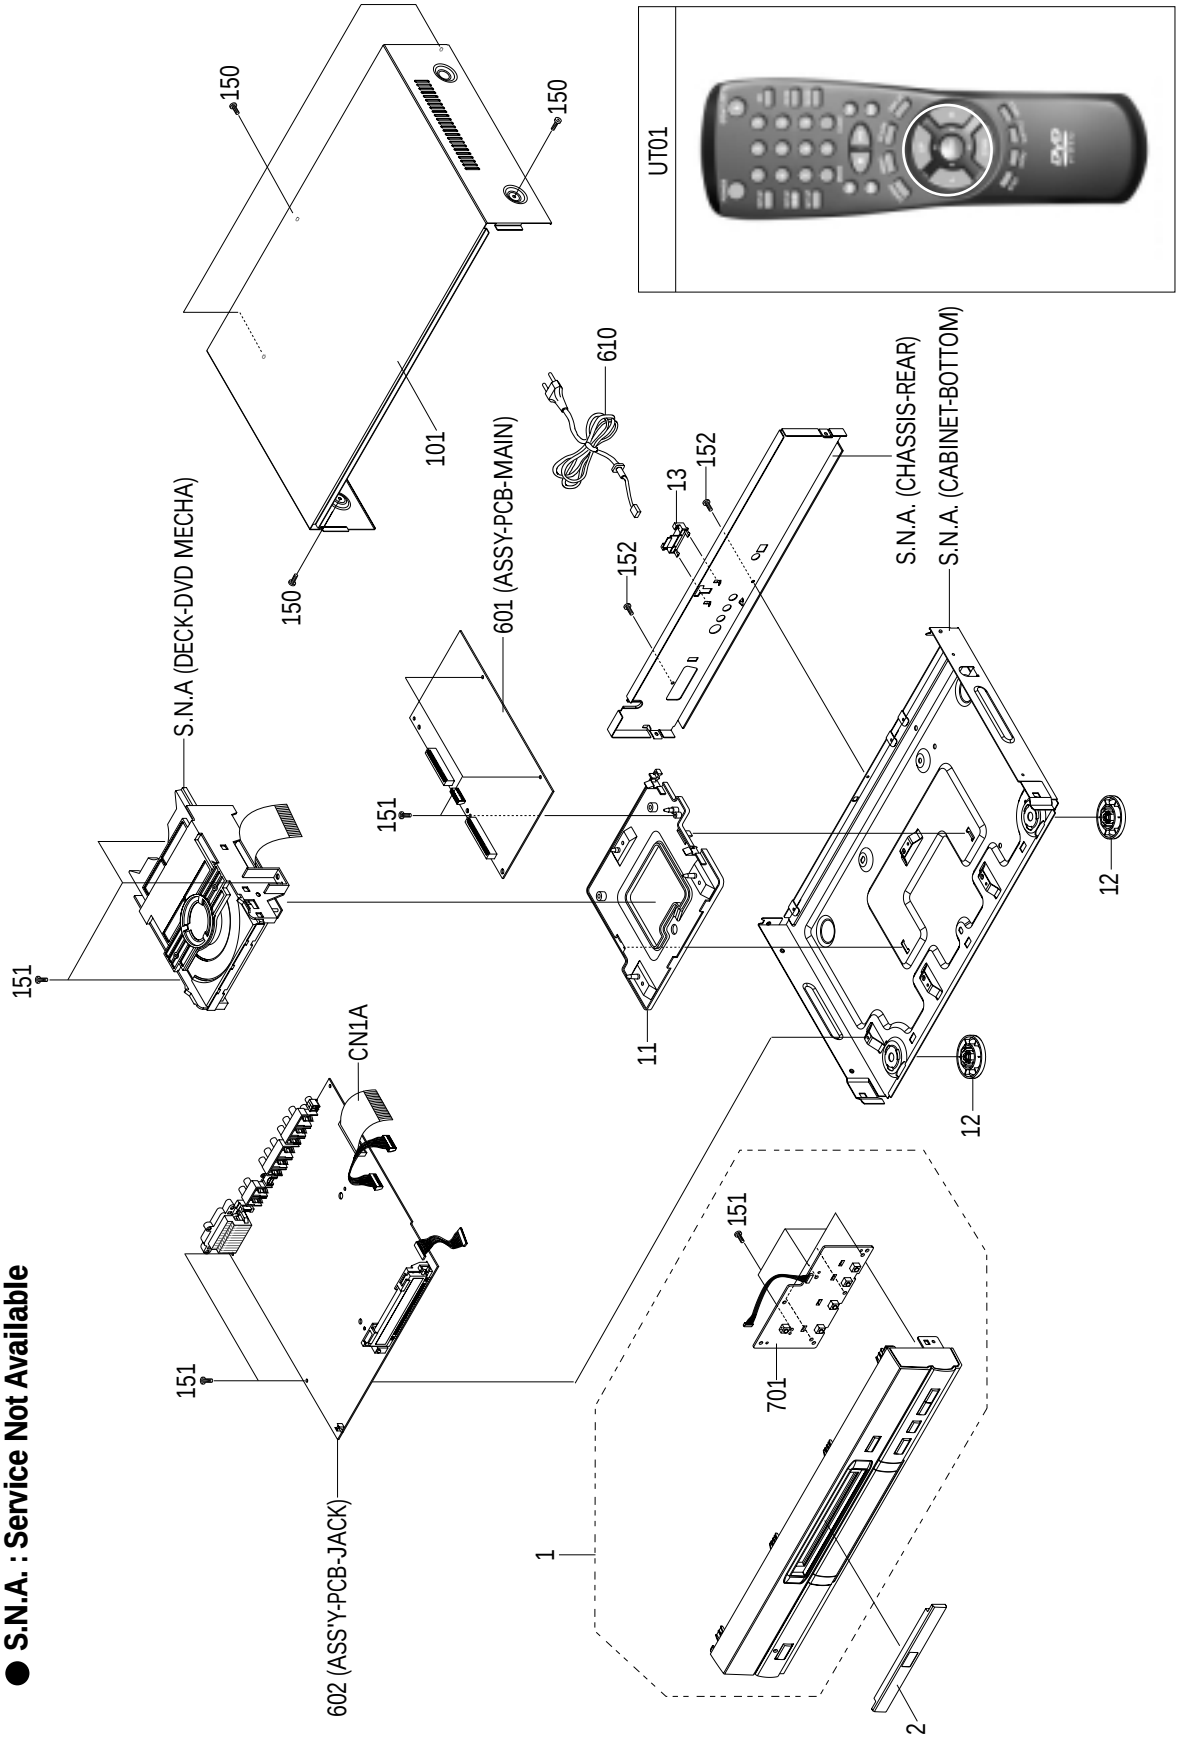

● **S.N.A. : Service Not Available**

Loc. No	Parts No.	Description ; Specification	Remark
1	AH97-00359B	ASSY FRONT CABINET;DVD-611/XEF,ASSY,XEF	DVD-611
	AH97-00359E	ASSY FRONT CABINET;DVD-611B/XET	DVD-611B
	AH97-00359F	ASSY FRONT CABINET;DVD-615/XET	DVD-615
2	AH97-00364B	ASSY-DOOR;ASS'Y,DVD-611,XEF	
11	AH61-00301B	HOLDER-DECK;-,HIPS 94BH,-,GRY,-,DVD-811	
12	AH64-80001E	FOOT-FRONT;-,ABS94,HB,T2,SIL,H/STAMP,DVD	
13	AH61-00303A	HOLDER-CORD POWER;-,ABS 94HB,-,BLK,-,DVD	
101	AH64-00489B	CABINET TOP;-,PCM T0.65,-,-,-,SIL,SV227,	DVD-611/615
	AH64-00489A	CABINET TOP	DVD-611B
150	6003-000275	SCREW-TAPTITE;BH,+,B,M3,L10,BLK,SWCH1018	
151	6003-000276	SCREW-TAPTITE;BH,+,B,M3,L10,ZPC(YEL),SWC	
152	6003-000282	SCREW-TAPTITE;BH,+,B,M3,L8,ZPC(BLK),SWCH	
601	AH92-00337K	ASSY PCB-MAIN;DVD-511/XEF,MAIN PCB	
602	AH92-00338B	ASSY PCB-JACK;DVD-611/XEF,JACK PCB	
610	AC39-10019A	POWER CORD;KKP-419C,H03VVH2-F,VDE/KEMA-K	COMMON
	AC39-12022K	POWER-CORD;Y352160,H03VVH2-F,-,BS6500,1.	U.K. ONLY
701	AH92-00583A	ASSY PCB-KEY;DVD-611/XAA,KEY PCB	
CN1A	3809-001180	CABLE-FLAT;30V,-30to+80C,80mm,35P,1.25mm	
UT01	AH59-00056C	REMOCON-ASS'Y;DVD-611/XEF,SEF,-,-,-,-,-	

7-2 Cabinet Assembly (DVD-511)

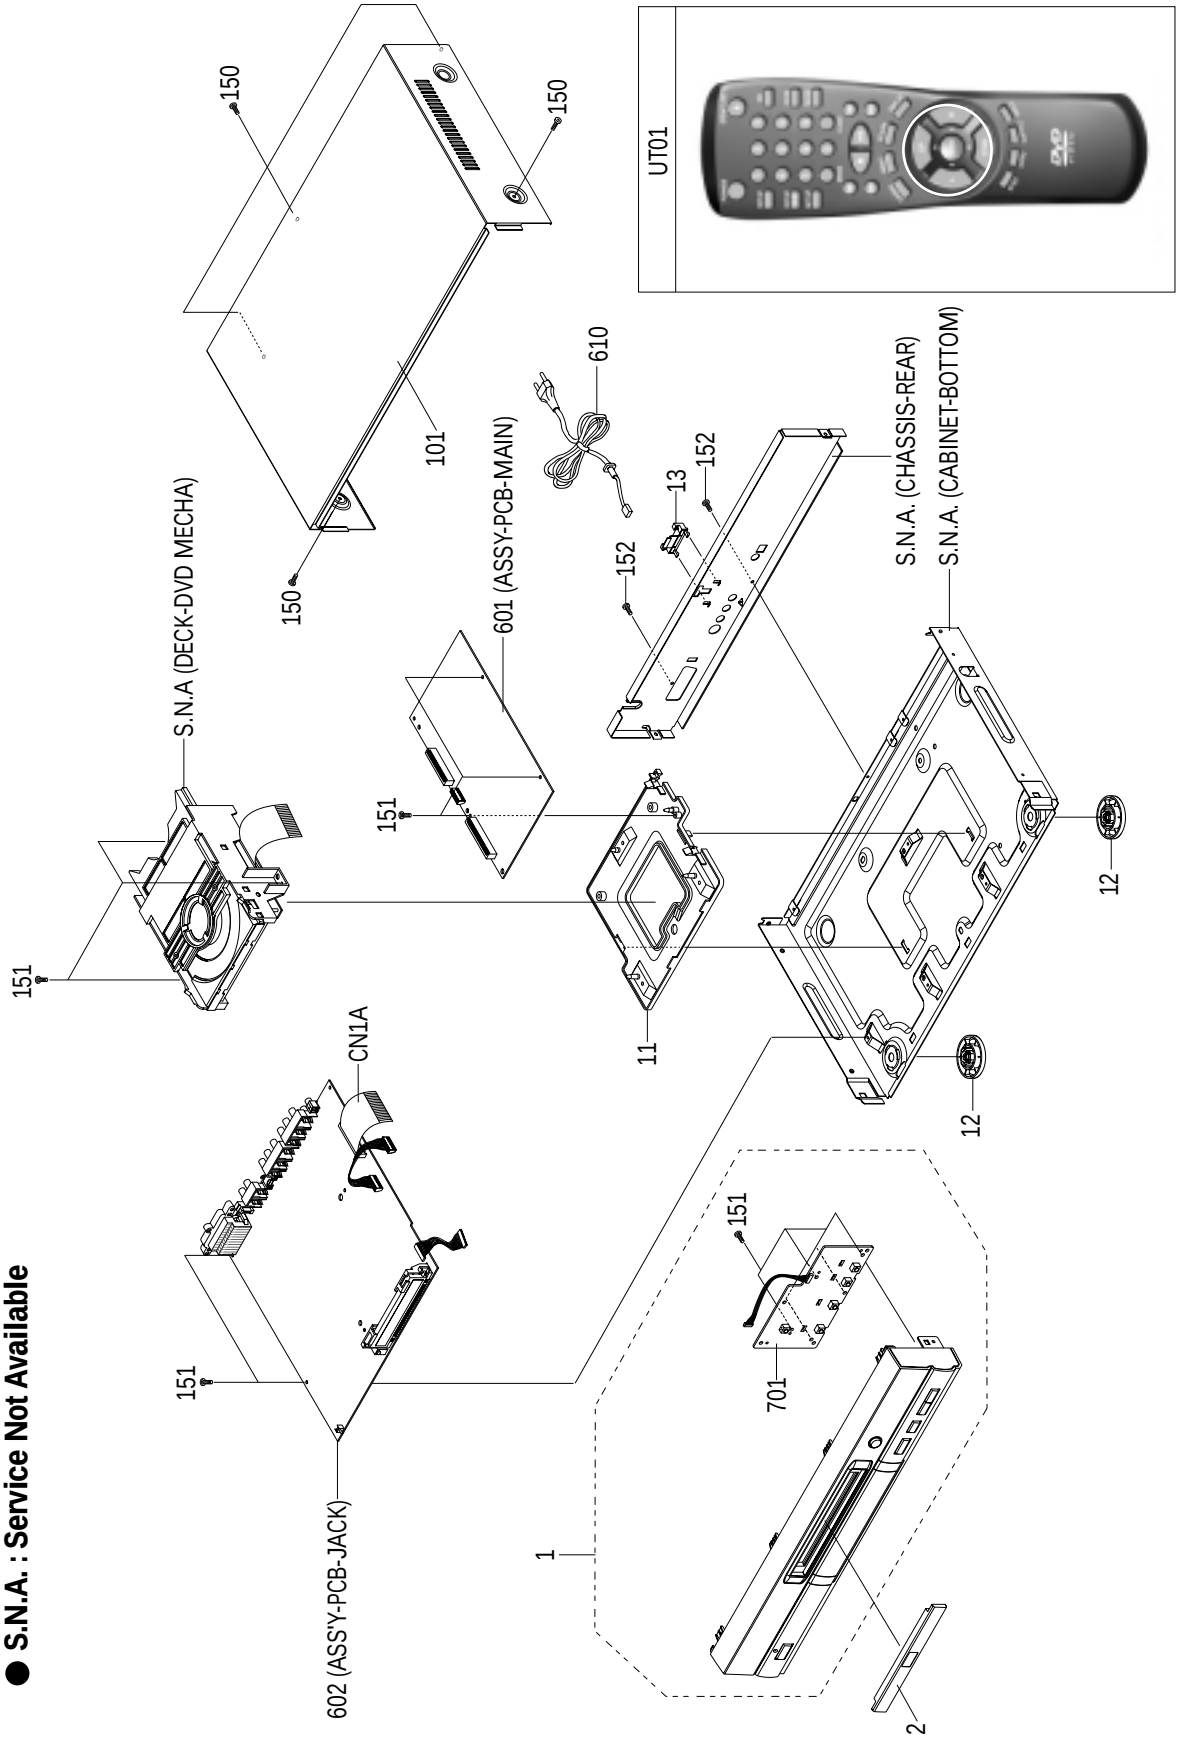

● **S.N.A. : Service Not Available**

Loc. No	Parts No.	Description ; Specification	Remark
1	AH97-00360B	ASSY FRONT CABINET;ASSY,DVD-511/XEF,XEF	
2	AH97-00365B	ASSY-DOOR;ASS'Y,DVD-511,XEF	
11	AH61-00301B	HOLDER-DECK;-,HIPS 94BH,-,GRY,-,DVD-811	
12	AH64-80001E	FOOT-FRONT;-,ABS94,HB,T2,SIL,H/STAMP,DVD	
13	AH61-00303A	HOLDER-CORD POWER;-,ABS 94HB,-,BLK,-,DVD	
101	AH64-00489B	CABINET TOP;-,PCM T0.65,-,-,-,SIL,SV227,	
150	6003-000275	SCREW-TAPTITE;BH,+,B,M3,L10,BLK,SWCH1018A	
151	6003-000276	SCREW-TAPTITE;BH,+,B,M3,L10,ZPC(YEL),SWC	
152	6003-000282	SCREW-TAPTITE;BH,+,B,M3,L8,ZPC(BLK),SWCH	
601	AH92-00337K	ASSY PCB-MAIN;DVD-511/XEF,MAIN PCB	
602	AH92-00338F	ASSY PCB-JACK;DVD-511/XEF,JACK PCB	
610	AC39-10019A	POWER CORD;KKP-419C,H03VVH2-F,VDE/KEMA-K	COMMON
	AC39-12022K	POWER-CORD;Y352160,H03VVH2-F,-,BS6500,1.	U.K. ONLY
701	AH92-00582A	ASSY PCB-KEY;DVD-511/XAA,KEY PCB	
CN1A	3809-001180	CABLE-FLAT;30V,-30to+80C,80mm,35P,1.25mm	
UT01	AH59-00056C	REMOCON-ASS'Y;DVD-611/XEF,SEF,-,-,-,-,-,	

7-3 Deck Assembly

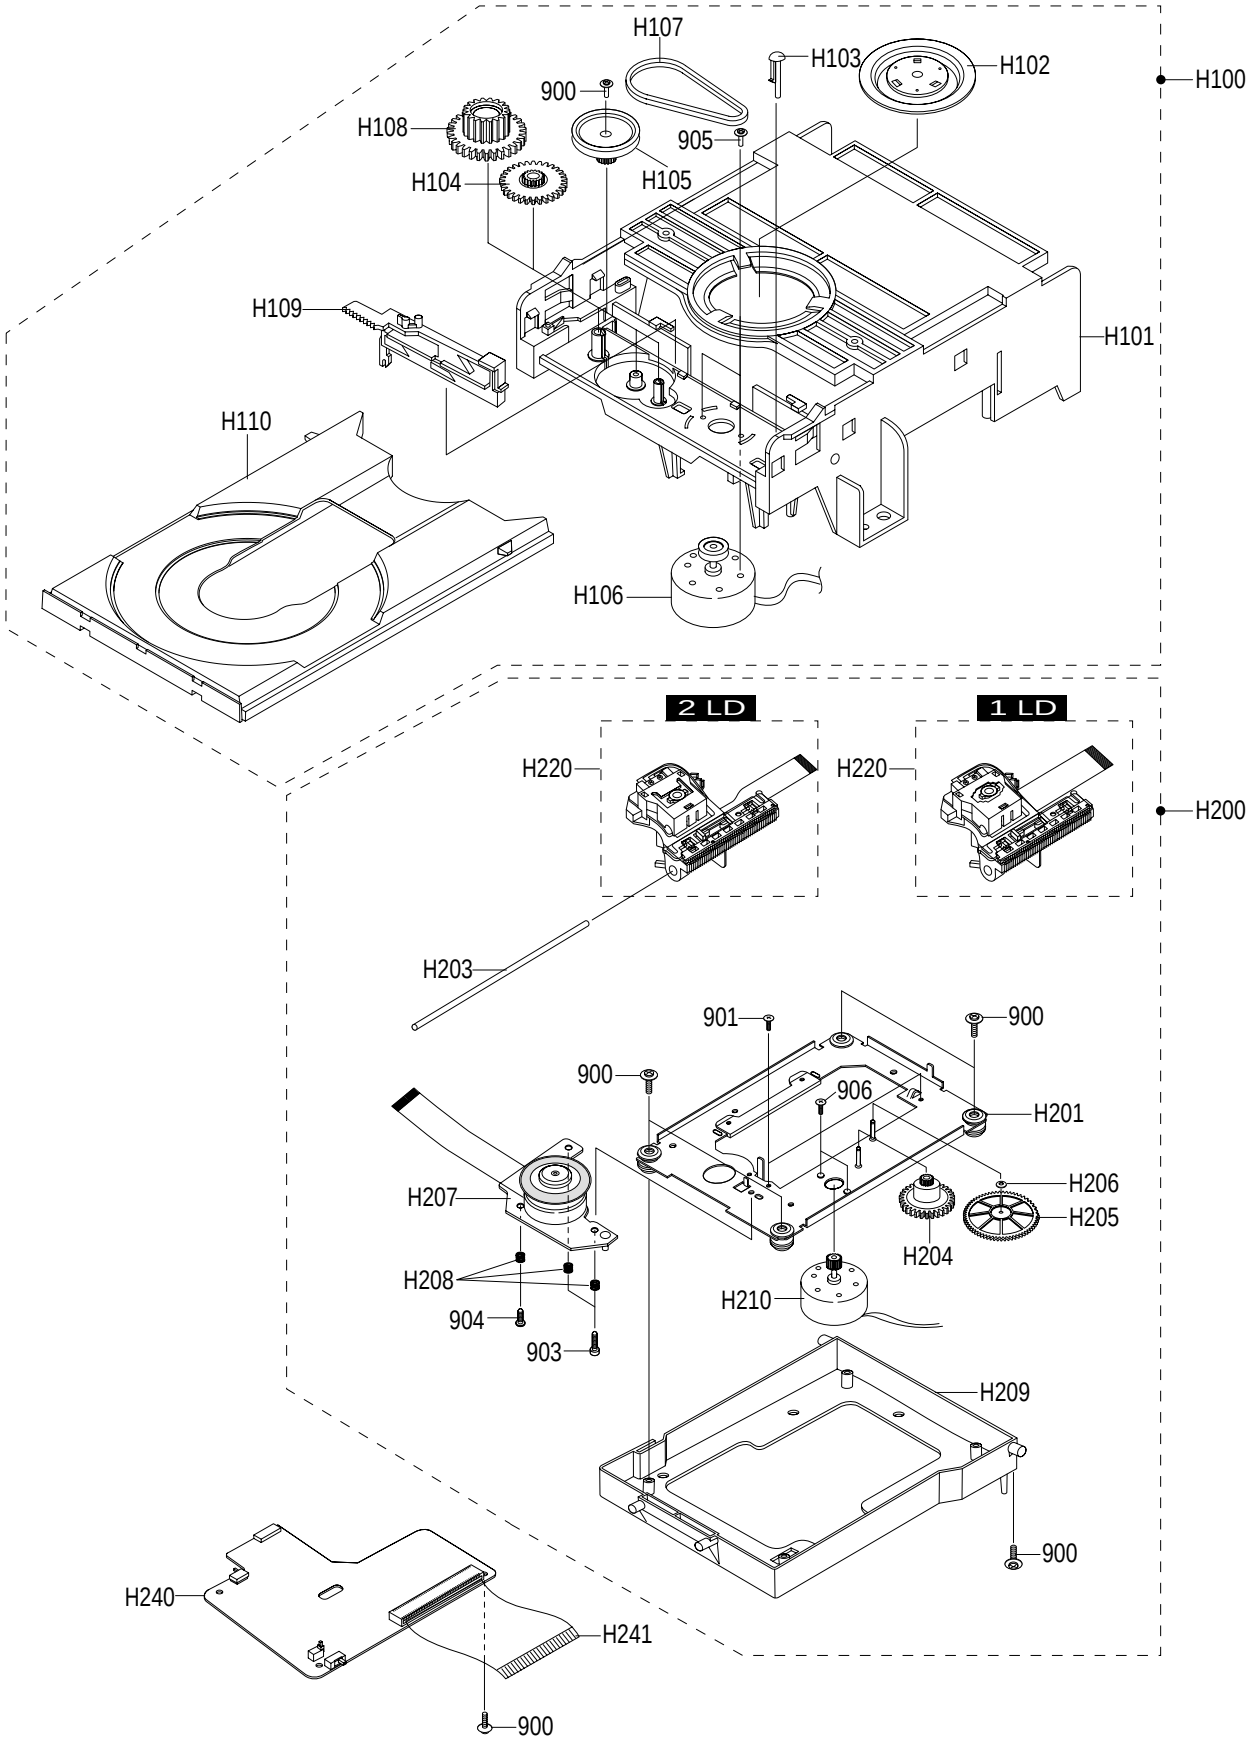

Loc. No	Parts No.	Description ; Specification	Remark
900	6003-001157	SCREW-TAPTITE;PWH,+,B,M2,L6,ZPC(YEL),SWR	
901	6001-001332	SCREW-MACHINE;FH,+,M2,L8,ZPC(YEL),SWRCH1	
903	6001-001333	SCREW-MACHINE;SOCKET,HEX,M2.6,L8,ZPC(YEL	
904	6001-001196	SCREW-MACHINE;BH,+-,M2,L4,ZPC(YEL),SWRCH	
905	BG60-10020A	SCREW-SP MOTOR;-,BHW TOOTH,-,-M1.7,L3-	
906	AH60-00010A	SCREW-MACHINE-MOTOR;-,+SWCH18AK,M1.7,L2	
H100	AH61-00391A	HOUSING-ASSY;DP-5,ABS+POM,-,-,-,-,-,-,-,	
H101	AH61-00272A	CHASSIS-HOUSING;-,ABS(SR-0320),-,-,-,-,B	
H102	AH66-00111A	CLAMPER-ASSY;DP-5,POM+MAGNET,-,-,-,DP-5	
H103	AH66-00080A	LEVER-S/W;WHITE,-,-,-,-,-,-,-	
H104	AH66-00074A	GEAR-HOUSING;-,POM M90-44,-,-,-,-,-,-,-,	
H105	AH66-00072A	PULLEY-GEAR;-,POM M90-44,-,-,-	
H106	AH31-00015A	MOTOR-LOAD ASSY;-,DP-5,-,-	
H107	AH66-00112A	BELT-PULLEY;-,CR,T1.5,ID30,-,-,DP-5	
H108	AH66-00073A	GEAR-TRAY;-,POM M90-44,-,-,-,-,-,-,-	
H109	AH66-00079A	SLIDER-HOUSING;DP-5,-,-,-,PBT #2002K,-	
H110	AH66-00081A	TRAY-DISC;-,ABS(GF) VG4820,-,BLK,-,DP-5	
H200	AH97-00369A	ASSY-P/U DECK;DP-5,-,-	1 LD (DVD-511)
	AH97-00369B	ASSY-P/U DECK;2LD,DP-5,-	2 LD (DVD-611/611B/615)
H201	AH97-00410A	ASSY-BRKT-SUB;SECC+RUBBER+MOTOR,DP-5,-	
H203	AH61-50327A	SHAFT-P/U;DP,SUS420J2,OD3,L84.7,S/FINISH	
H204	AH66-00075A	GEAR-FEED A;-,POM M90-44,-,-,-,-,-,-,-,-	
H205	AH66-00076A	GEAR-FEED B;-,POM M90-44,-,-,-,-,-,-,-,-	
H206	AC60-30306A	WASHER-SLIT;-,-,ID2.1,OD5.0,T0.5,-,POLYS	
H207	AH31-00017A	MOTOR-SPINDLE ASSY;-,DP-5,-,-	
H208	AH61-00403A	SPRING-SPINDLE;-,SWPB,-,CS,PI4.9,PI0.7,-	
H209	AH61-00273A	CHASSIS-SUB;-,ABS(SR-0320),-,-,-,-,BLK,-	
H210	AH31-00016A	MOTOR-FEED ASSY;-,DP-5,-,-	
H220	AH30-00008A	PICK UP-ASSY;VALINO(1LD)	1 LD (DVD-511)
	AJ97-00014A	ASSY-PICK-UP;SOH-D2A,-,-	2 LD (DVD-611/611B/615)
H240	AH92-00608A	ASSY PCB-DECK;VALINO DECK 1LD	1 LD (DVD-511)
	AH92-00609A	ASSY PCB-DECK;VALINO DECK 2LD	2 LD (DVD-611/611B/615)
H241	3809-001181	CABLE-FLAT;30V,-30to+80C,80mm,40P,1.25mm	

MEMO

8. Electrical Parts List

Loc.No	Part No	Description ; Specification	Remark
601	**AH92-00337K**	**ASSY PCB-MAIN;DVD-511/XEF,MAIN PCB**	**COMMON**
CN8	3708-001364	CONNECTOR-FPC/FC/PIC;35P,1.25MM,STRAIGHT	
DC1	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
DC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC12	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC13	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC14	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC15	2203-001640	C-CERAMIC,CHIP;0.39nF,10%,50V,X7R,TP,160	
DC16	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC2	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
DC23	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC24	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC3	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC4	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC5	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DC7	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
DCN1	3708-001085	CONNECTOR-FPC/FC/PIC;40P,1.25mm,STRAIGHT	
DIC1	AH13-10030P	IC-ASIC;-,KS1453,TQFP,128P,DATA PRO. I	
DIC2	1105-001233	IC-DRAM;416C256,256KX16BIT,SOJ,40P,400MI	
DIC3	0801-002097	IC-CMOS LOGIC;7SET08,AND GATE,SOP,5P,110	
DR1	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR16	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR17	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR18	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
DR19	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
DR2	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR20	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
DR21	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
DR22	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
DR3	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR4	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR5	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR7	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
DR8	2011-000816	R-NETWORK;100ohm,5%,63mW,L,CHIP,8P,TP	
DR9	2011-000816	R-NETWORK;100ohm,5%,63mW,L,CHIP,8P,TP	
MC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC12	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC13	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC14	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC15	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC16	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC17	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC2	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC3	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
MC4	2203-000426	C-CERAMIC,CHIP;0.018nF,5%,50V,NP0,TP,160	
MC5	2203-000426	C-CERAMIC,CHIP;0.018nF,5%,50V,NP0,TP,160	
MC6	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC7	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
MC8	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MC9	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
MIC1	0903-001185	IC-MICROCONTROLLER;95C265,16Bit,LQFP,100	
MIC2	1102-001090	IC-EPROM;27C081,1MX8BIT,DIP,32P,600MIL,1	
MIC3	1106-000401	IC-SRAM;681000,128Kx8BIT,SOP,32P,525MI	
MIC4	1103-001204	IC-EEPROM;24C021,256x8Bit,SOP,8P,150MIL,	
MIC5	0801-002097	IC-CMOS LOGIC;7SET08,AND GATE,SOP,5P,110	
MIC6	0801-000411	IC-CMOS LOGIC;74HC32,OR GATE,SOP,14P,150	
MIC7	0801-002517	IC-CMOS LOGIC;7SET00,NAND GATE,SOP,5P,63	
MIC8A	3704-000472	SOCKET-IC;32P,DIP,SN,2.54mm	
MR1	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
MR10	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR11	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR12	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR14	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR15	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR2	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR3	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR4	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MR5	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
MR6	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
MR7	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
MR8	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
MR9	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
MY1	2801-000199	CRYSTAL-UNIT;20MHz,50ppm,28-AAA,16pF,50o	
PC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PC2	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PC3	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PC4	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
PCN1	3711-003358	CONNECTOR-HEADER;BOX,8P,1R,2.5mm,STRAIGH	
PE1	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
PE2	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
PE3	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
PE4	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
RC1	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RC11	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC12	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
RC13	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
RC14	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC16	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC17	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC2	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC20	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC21	2203-000384	C-CERAMIC,CHIP;0.015nF,5%,50V,NP0,TP,160	
RC22	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC23	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC24	2203-001697	C-CERAMIC,CHIP;0.082nF,5%,50V,NP0,TP,160	
RC25	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC26	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC27	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC28	2203-001052	C-CERAMIC,CHIP;0.56nF,10%,50V,X7R,TP,160	
RC29	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC3	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC30	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC32	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC33	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC34	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC35	2203-000236	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,1608	
RC36	2203-000140	C-CERAMIC,CHIP;1.5nF,10%,50V,X7R,TP,1608	
RC39	2203-000531	C-CERAMIC,CHIP;2.7nF,10%,50V,X7R,TP,1608	
RC40	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RC41	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC42	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC43	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC44	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RC45	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
RC46	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
RC47	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC48	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
RC5	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC50	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC51	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC52	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC53	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
RC54	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
RC55	2203-000888	C-CERAMIC,CHIP;4.7nF,10%,50V,X7R,TP,1608	
RC56	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
RC6	2203-001052	C-CERAMIC,CHIP;0.56nF,10%,50V,X7R,TP,160	
RC7	2203-001640	C-CERAMIC,CHIP;0.39nF,10%,50V,X7R,TP,160	
RC8	2203-000384	C-CERAMIC,CHIP;0.015nF,5%,50V,NP0,TP,160	
RC9	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
RD1	0401-000008	DIODE-SWITCHING;DAN217,80V,100mA,SOT-23,	
RD2	0403-001079	DIODE-ZENER;UDZ3.9B,7%,200MW,SOD-323,TP	
RD3	0401-000008	DIODE-SWITCHING;DAN217,80V,100mA,SOT-23,	
RD6	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
RE11	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
RE12	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
RE13	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
RE14	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
RE17	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
RE2	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
RE8	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
RE9	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
RIC1	AH13-10030Y	IC ASIC;-,KS1461,VQFP,100pin,RF IC	
RIC3	1202-000121	IC-VOLTAGE COMP.;2903,SOP,8P,150MIL,DUAL	
RL2	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
RL3	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
RL4	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
RL5	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
RQ1	0501-000279	TR-SMALL SIGNAL;KSA1182-Y,PNP,150mW,SOT-	
RQ2	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
RQ3	0501-000279	TR-SMALL SIGNAL;KSA1182-Y,PNP,150mW,SOT-	
RR1	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR10	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
RR11	2007-000512	R-CHIP;2.4Kohm,5%,1/16W,DA,TP,1608	
RR12	2007-000093	R-CHIP;20Kohm,5%,1/16W,DA,TP,1608	
RR13	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
RR14	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR15	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR16	2007-000704	R-CHIP;3.6Kohm,5%,1/16W,DA,TP,1608	
RR17	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR18	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR19	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR2	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR20	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR21	2007-000704	R-CHIP;3.6Kohm,5%,1/16W,DA,TP,1608	
RR22	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR23	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR24	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
RR25	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR28	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
RR29	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
RR3	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR30	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR31	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
RR32	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR33	2007-000082	R-CHIP;3.3Kohm,5%,1/16W,DA,TP,1608	
RR34	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR35	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR36	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR37	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR38	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR39	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR4	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR40	2007-000655	R-CHIP;27Kohm,5%,1/16W,DA,TP,1608	
RR41	2007-000708	R-CHIP;3.9Kohm,1%,1/16W,DA,TP,1608	
RR43	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR44	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR45	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR46	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
RR47	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR48	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
RR49	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR50	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR51	2007-000134	R-CHIP;33Kohm,5%,1/16W,DA,TP,1608	
RR52	2007-000077	R-CHIP;470ohm,5%,1/16W,DA,TP,1608	
RR53	2007-000312	R-CHIP;10OHM,5%,1/8W,DA,TP,3216	
RR57	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
RR58	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR59	2007-000082	R-CHIP;3.3Kohm,5%,1/16W,DA,TP,1608	
RR6	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR62	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR65	2007-000082	R-CHIP;3.3Kohm,5%,1/16W,DA,TP,1608	
RR68	2007-000130	R-CHIP;39Kohm,5%,1/16W,DA,TP,1608	
RR69	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
RR7	2007-000072	R-CHIP;47ohm,5%,1/16W,DA,TP,1608	
RR70	2007-000134	R-CHIP;33Kohm,5%,1/16W,DA,TP,1608	
RR72	2007-000103	R-CHIP;120Kohm,5%,1/16W,DA,TP,1608	
RR8	2007-000077	R-CHIP;470ohm,5%,1/16W,DA,TP,1608	
RR80	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR81	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR82	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR83	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
RR85	2007-000108	R-CHIP;510Kohm,5%,1/16W,DA,TP,1608	
RR86	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
RR87	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
RR9	2007-000312	R-CHIP;10OHM,5%,1/8W,DA,TP,3216	
SC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
SC10	2203-001222	C-CERAMIC,CHIP;820pF,10%,50V,X7R,TP,1608	
SC11	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC14	2203-000491	C-CERAMIC,CHIP;2.2nF,10%,50V,X7R,TP,1608	
SC15	2203-001052	C-CERAMIC,CHIP;0.56nF,10%,50V,X7R,TP,160	
SC16	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC17	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
SC18	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC19	2203-000140	C-CERAMIC,CHIP;1.5nF,10%,50V,X7R,TP,1608	
SC2	2203-001573	C-CERAMIC,CHIP;0.012nF,5%,50V,NP0,TP,160	
SC20	2203-001640	C-CERAMIC,CHIP;0.39nF,10%,50V,X7R,TP,160	
SC26	2203-002398	C-CERAMIC,CHIP;22nF,10%,50V,X7R,TP,1608	
SC29	2203-000372	C-CERAMIC,CHIP;15nF,10%,50V,X7R,TP,1608,	
SC3	2203-001573	C-CERAMIC,CHIP;0.012nF,5%,50V,NP0,TP,160	
SC30	2203-000372	C-CERAMIC,CHIP;15nF,10%,50V,X7R,TP,1608,	
SC31	2203-000491	C-CERAMIC,CHIP;2.2nF,10%,50V,X7R,TP,1608	
SC32	2203-000491	C-CERAMIC,CHIP;2.2nF,10%,50V,X7R,TP,1608	
SC33	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC36	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC38	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC40	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC41	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
SC44	2203-002398	C-CERAMIC,CHIP;22nF,10%,50V,X7R,TP,1608	
SC49	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC50	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC51	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC52	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC53	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
SC55	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC57	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC58	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC59	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC6	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC60	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC61	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC62	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC64	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
SC65	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
SC66	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
SC68	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC7	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
SC9	2203-000560	C-CERAMIC,CHIP;220nF,+80-20%,25V,Y5V,TP,	
SD2	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SD3	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SE1	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
SE2	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
SE3	2401-002165	C-AL;100uF,20%,16V,GP,TP,6.3x7,5	
SE5	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SE53	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
SE54	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SE55	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SE56	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SE63	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
SIC1	AH13-10030N	IC-ASIC;-,KS1452,QFP,80P,DSSP IC	
SIC3	0801-002097	IC-CMOS LOGIC;7SET08,AND GATE,SOP,5P,110	
SIC4	1003-001298	IC-MOTOR DRIVER;KA3017,HQFP,48P,550MIL,1	
SIC8	AH14-10004T	IC-ANALOG M/PLEXER;MC14053BD,SOP,TAPE 16	
SL2	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
SL4	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
SQ1	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SQ2	0504-000156	TR-DIGITAL;DTA124EKA,PNP,200mW,22K-22K	
SR1	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR10	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
SR11	2007-000107	R-CHIP;470Kohm,5%,1/16W,DA,TP,1608	
SR12	2007-001235	R-CHIP;910Kohm,5%,1/16W,DA,TP,1608	
SR14	2007-000450	R-CHIP;180ohm,5%,1/16W,DA,TP,1608	
SR15	2007-000102	R-CHIP;100Kohm,5%,1/16W,DA,TP,1608	
SR16	2007-000131	R-CHIP;91Kohm,5%,1/16W,DA,TP,1608	
SR17	2007-000081	R-CHIP;2.7Kohm,5%,1/16W,DA,TP,1608	
SR18	2007-000093	R-CHIP;20Kohm,5%,1/16W,DA,TP,1608	
SR19	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR2	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
SR20	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR21	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR22	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR23	2007-000130	R-CHIP;39Kohm,5%,1/16W,DA,TP,1608	
SR24	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR25	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR26	2007-000091	R-CHIP;12Kohm,5%,1/16W,DA,TP,1608	
SR3	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR32	2007-000080	R-CHIP;2Kohm,5%,1/16W,DA,TP,1608	
SR33	2007-000080	R-CHIP;2Kohm,5%,1/16W,DA,TP,1608	
SR34	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR35	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR36	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR37	2007-000124	R-CHIP;2.2Kohm,5%,1/16W,DA,TP,1608	
SR38	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR39	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR4	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR40	2007-000101	R-CHIP;82Kohm,5%,1/16W,DA,TP,1608	
SR41	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
SR42	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR43	2007-000106	R-CHIP;220Kohm,5%,1/16W,DA,TP,1608	
SR44	2007-000098	R-CHIP;56Kohm,5%,1/16W,DA,TP,1608	
SR45	2007-000655	R-CHIP;27Kohm,5%,1/16W,DA,TP,1608	
SR47	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR5	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
SR52	2007-000704	R-CHIP;3.6Kohm,5%,1/16W,DA,TP,1608	
SR53	2007-000123	R-CHIP;1.5Kohm,5%,1/16W,DA,TP,1608	
SR6	2007-000098	R-CHIP;56Kohm,5%,1/16W,DA,TP,1608	
SR60	2007-000097	R-CHIP;47Kohm,5%,1/16W,DA,TP,1608	
SR67	2007-000034	R-CHIP;1OHM,5%,1/8W,DA,TP,3216	
SR68	2007-000034	R-CHIP;1OHM,5%,1/8W,DA,TP,3216	
SR7	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
SR70	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
SR71	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR73	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR74	2007-000090	R-CHIP;10Kohm,5%,1/16W,DA,TP,1608	
SR75	2007-000092	R-CHIP;15Kohm,5%,1/16W,DA,TP,1608	
SR76	2007-000616	R-CHIP;24Kohm,5%,1/16W,DA,TP,1608	
SR77	2007-001179	R-CHIP;8.2Kohm,5%,1/16W,DA,TP,1608	
SR80	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR81	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR82	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR83	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR84	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
SR85	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
SR9	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
SY1	2801-000261	CRYSTAL-UNIT;33.8688MHZ,50PPM,28-AAA,12P	
VR1	2104-001068	VR-SMD;10Kohm,25%,1/20W,TOP	
ZC1	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC10	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC11	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC12	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC13	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC14	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC15	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC16	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC17	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC18	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC19	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC2	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC29	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
ZC3	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC37	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
ZC38	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC39	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC4	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC40	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC41	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC42	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC43	2203-001652	C-CERAMIC,CHIP;470nF,+80-20%,16V,Y5V,TP,	
ZC44	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC45	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC46	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC47	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC48	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC49	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC5	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC50	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC51	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC58	2203-000440	C-CERAMIC,CHIP;1nF,10%,50V,X7R,TP,1608,-	
ZC59	2203-005148	C-CERAMIC,CHIP;100nF,10%,16V,X7R,TP,1608	
ZC6	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC60	2203-000681	C-CERAMIC,CHIP;0.027nF,5%,50V,NP0,TP,160	
ZC61	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZC62	2203-000681	C-CERAMIC,CHIP;0.027nF,5%,50V,NP0,TP,160	
ZC63	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC65	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC66	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC67	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC68	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC69	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC7	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC70	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC71	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC72	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC73	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC74	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC75	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC76	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	

Loc.No	Part No	Description ; Specification	Remark
ZC77	2203-000426	C-CERAMIC,CHIP;0.018nF,5%,50V,NP0,TP,160	
ZC78	2203-000626	C-CERAMIC,CHIP;0.022nF,5%,50V,NP0,TP,160	
ZC8	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZC9	2203-000257	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,1608	
ZE30	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZE34	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZE35	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
ZE36	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZE37	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
ZIC1	1204-001673	IC-DECODER;ZIVA4.1,QFP,208P,1100MIL,PLAS	
ZIC2	1105-001268	IC-DRAM;3617161,16BIT,TSOP,50P-,7NS,3	
ZIC3	1105-001268	IC-DRAM;3617161,16BIT,TSOP,50P-,7NS,3	
ZIC4	AH14-10004R	IC;M74HCU04,SOP,TAPE 14P	
ZIC5	0402-000309	DIODE-RECTIFIER;1SR154-400,400V,1A,PSM	
ZL10	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
ZL11	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL12	2703-000398	INDUCTOR-SMD;10uH,10%,3.2x2.5x2.2mm	
ZL2	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL6	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL7	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZL9	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
ZR1	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR16	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR17	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR18	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR23	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR27	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
ZR28	2007-000084	R-CHIP;4.7Kohm,5%,1/16W,DA,TP,1608	
ZR29	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR30	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR31	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR32	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR33	2011-000475	R-NETWORK;33ohm,5%,63mW,L,CHIP,8P,TP	
ZR34	2007-000113	R-CHIP;33ohm,5%,1/16W,DA,TP,1608	
ZR35	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR37	2007-000113	R-CHIP;33ohm,5%,1/16W,DA,TP,1608	
ZR38	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR68	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR69	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR70	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR71	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR72	2011-000816	R-NETWORK;100ohm,5%,63mW,L,CHIP,8P,TP	
ZR73	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR75	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR76	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR77	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR78	2007-001164	R-CHIP;75ohm,1%,1/16W,DA,TP,1608	
ZR79	2007-007332	R-CHIP;1.18KOHM,1%,1/10W,DA,TP,2012	
ZR82	2007-000799	R-CHIP;360ohm,5%,1/16W,DA,TP,1608	
ZR84	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR86	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR88	2007-000078	R-CHIP;1Kohm,5%,1/16W,DA,TP,1608	
ZR89	2007-000109	R-CHIP;1Mohm,5%,1/16W,DA,TP,1608	
ZR90	2007-000070	R-CHIP;0ohm,5%,1/16W,DA,TP,1608	
ZR91	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR92	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZR93	2007-000074	R-CHIP;100ohm,5%,1/16W,DA,TP,1608	
ZY1	2801-003554	CRYSTAL-UNIT;27MHz,10ppm,28-AAM,12pF,40o	

Loc.No	Part No	Description ; Specification	Remark
602	**AH92-00338B**	**ASSY PCB-JACK;DVD-611/XEF,JACK PCB**	**DVD-611/611B/615**
AC10	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AC11	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
AC13	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
AC14	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC15	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC201	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AC202	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
AC203	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
AC4	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC5	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC6	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC7	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC8	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC9	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AD51	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
AD54	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
AD55	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
AD60	0407-000116	DIODE-ARRAY;DAP202K,80V,100mA,CK2-3,SOT-	
AE1	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE17	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
AE2	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE21	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
AE22	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
AE3	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE51	2401-001969	C-AL;470uF,20%,25V,GP,TP,10x12.5,5	
AE52	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
AE6	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
AE9	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
AIC1	1002-001213	IC-D/A CONVERTER;AK4393VF,24BIT,SOP,28P,	
AIC3	AH14-10004R	IC;M74HCU04,SOP,TAPE 14P	
AL1	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
AL2	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
AL201	2901-001125	FILTER-EMI ON BOARD;50V,0.5A,-,220pF,7x2	
AOP1	1201-000163	IC-OP AMP;4560,SOP,8P,173MIL,DUAL,100V/m	
AQ1	0501-000341	TR-SMALL SIGNAL;KSC1623-L,NPN,200mW,SOT-	
AQ3	0501-000341	TR-SMALL SIGNAL;KSC1623-L,NPN,200mW,SOT-	
AQ51	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
AQ52	0504-000156	TR-DIGITAL;DTA124EKA,PNP,200mW,22K-22K	
AQ55	0504-000118	TR-DIGITAL;KSR1003,NPN,300MW,22K/22K,TO-	
AQ56	0504-000118	TR-DIGITAL;KSR1003,NPN,300MW,22K/22K,TO-	
AQ57	0504-001003	TR-DIGITAL;KSR2003,PNP,300MW,22K/22K,TO-	
AR10	2007-000267	R-CHIP;1.8KOHM,5%,1/10W,DA,TP,2012	
AR11	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR14	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR15	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR16	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR17	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR18	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR19	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR2	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR201	2007-000766	R-CHIP;330OHM,5%,1/10W,DA,TP,2012	
AR202	2007-001247	R-CHIP;91OHM,5%,1/10W,DA,TP,2012	
AR203	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR21	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR22	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR24	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR26	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR28	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR29	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR3	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR30	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR31	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR32	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR33	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR35	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	

Loc.No	Part No	Description ; Specification	Remark
AR36	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR38	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR4	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR40	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR5	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR51	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR54	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR55	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR56	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR6	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR7	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR8	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR9	2007-000267	R-CHIP;1.8KOHM,5%,1/10W,DA,TP,2012	
AVJ2	3722-001467	JACK-RCA;3P,3.2mm,NI,BLK,-	
AVJ4	3722-001053	JACK-RCA;1P,3.2mm,NI,BLK,-	
AVJ5	3707-001005	CONNECTOR-OPTICAL;PLUG,SM,-,4.4/2.0MM	
AZD51	0403-000551	DIODE-ZENER;MTZ3.9B,3.9V,3.89-4.16V,500m	
CN1	3708-001364	CONNECTOR-FPC/FC/PIC;35P,1.25MM,STRAIGHT	
CN1A	3809-001180	CABLE-FLAT;30V,-30to+80C,80mm,35P,1.25mm	
CN3	AH39-00179A	CONNECT WIRE;-,-,-,-,#26,-,-,-,-,-,-,-,1	
FC10	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC14	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC15	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC16	2203-000444	C-CERAMIC,CHIP;1nF,10%,50V,X7R,TP,2012,-	
FC2	2202-000162	C-CERAMIC,MLC-AXIAL;.015NF,5%,50V,SL,TP,	
FC3	2202-000162	C-CERAMIC,MLC-AXIAL;.015NF,5%,50V,SL,TP,	
FC4	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC6	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC7	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
FD10	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD6	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD7	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD8	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD9	0403-000551	DIODE-ZENER;MTZ3.9B,3.9V,3.89-4.16V,500m	
FE1	2401-000922	C-AL;22uF,20%,16V,GP,TP,5x5,5	
FE12	2401-001475	C-AL;47uF,20%,10V,GP,TP,6.3x5,5mm	
FE5	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
FE8	2401-001507	C-AL;47uF,20%,16V,GP,TP,6.3x5,5	
FIC1	AH09-00034A	IC MICOM;LC866232A,SANYO,100PIN,QFP,QFP	
FIC2	1203-001252	IC-VOL. DETECTOR;7545,TO-92,3P,-,PLASTIC	
FIC4	AH59-00010A	MODULE-REMOCON;-,-,-,37.9KHZ,940NM,-,-,-	
FL2	2701-000114	INDUCTOR-AXIAL;10uH,10%,2.5x3.4mm	
FR1	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR10	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR101	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR102	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR103	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR104	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR105	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR106	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR11	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR12	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR13	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR16	2001-000027	R-CARBON;100OHM,5%,1/4W,AA,TP,2.4X6.4MM	
FR17	2001-000027	R-CARBON;100OHM,5%,1/4W,AA,TP,2.4X6.4MM	
FR18	2007-000493	R-CHIP;2.2KOHM,5%,1/10W,DA,TP,2012	
FR19	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR20	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR21	2001-000435	R-CARBON;1MOHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR24	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR25	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR26	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR2S	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR31	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR32	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR33	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR34	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR35	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR36	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR37	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR43	2001-000793	R-CARBON;47OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR44	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR45	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR46	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR4S	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR5	2001-000325	R-CARBON;120OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR51	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR52	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR7	2007-000282	R-CHIP;100KOHM,5%,1/10W,DA,TP,2012	
FY1	2802-000108	RESONATOR-CERAMIC;12MHZ,0.5%,BK,10.0X5.0	
HC3	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
HC4	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
HE3	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
HE4	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
HOP2	1201-000163	IC-OP AMP;4560,SOP,8P,173MIL,DUAL,100V/m	
HR10	2007-000282	R-CHIP;100KOHM,5%,1/10W,DA,TP,2012	
HR15	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
HR16	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
HR9	2007-000282	R-CHIP;100KOHM,5%,1/10W,DA,TP,2012	
JP266	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP281	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP347	2008-000141	R-FUSIBLE;2.2ohm,5%,1/4W,AA,TP,2.6x6.7mm	
JP383	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
JP385	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP58	2701-000114	INDUCTOR-AXIAL;10uH,10%,2.5x3.4mm	
JP80	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP81	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP91	2008-000141	R-FUSIBLE;2.2ohm,5%,1/4W,AA,TP,2.6x6.7mm	
PBD11	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PBF11	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PBS01	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PCD01	2201-000916	C-CERAMIC,DISC;100pF,10%,400V,Y5U,TP,10x	⚠
PCD02	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	⚠
PCD03	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	⚠
PCD12	2201-000129	C-CERAMIC,DISC;0.1nF,10%,1kV,Y5P,TP,7x4,	⚠
PCF01	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	⚠
PCF02	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	⚠
PCF11	2305-001029	C-FILM,MPEF;10nF,10%,630V,TP,12x9x12.5,5	
PCF13	2201-000376	C-CERAMIC,DISC;0.22nF,5%,50V,SL,TP,6.3x3	
PCNS1	AH39-00177A	CONNECT WIRE;-,-,-,-,#24,-,-,-,-,-,-,-,1	
PCNS2	3711-000178	CONNECTOR-HEADER;1WALL,2P,1R,3.96mm,STRA	⚠
PCS03	2201-000916	C-CERAMIC,DISC;100pF,10%,400V,Y5U,TP,10x	⚠
PCS31	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
PCS32	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
PDD35	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDF01	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDF12	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDF13	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDL51	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDL52	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDL55	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDS01	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS02	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS03	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS04	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS11	0402-000276	DIODE-RECTIFIER;UF4007,1KV,1A,DO-41,TP	
PDS31	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDS32	0402-001194	DIODE-RECTIFIER;UG2D,200V,2A,DO-204AC,TP	
PDS33	0404-001097	DIODE-SCHOTTKY;SG45,45V,7500mA,TO-220A,B	
PDS34	0404-001097	DIODE-SCHOTTKY;SG45,45V,7500mA,TO-220A,B	
PDS36	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDS51	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	

Loc.No	Part No	Description ; Specification	Remark
PDS52	0402-000132	DIODE-RECTIFIER;1N4004,400V,1A,DO-41,TP	
PEF10	2401-001682	C-AL;82uF,20%,400V,GP,BK,22x25,10	⚠
PEF12	2401-002608	C-AL;33uF,20%,35V,GP,TP,5x11,5	
PES31	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES32	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES33	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
PES34	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
PES35	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11,2.5	
PES36	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
PES37	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
PES51	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
PES52	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
PES53	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES54	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
PES56	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES57	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES58	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
PFD01	3601-001123	FUSE-CARTRIDGE;250V,1.6A,TIME-LAG,CERAMI	⚠
PICF1	1203-001802	IC-PWM CONTROLLER;STR-G6551,TO-220F,5P,-	⚠
PICS1	0604-000186	PHOTO-COUPLER;TR,-,200mW,DIP-4,ST	⚠
PICS2	AC14-12006D	IC;KA431Z,TO-92,TAPING	
PICS3	1203-000122	IC-NEGA.FIXED REG.;7908,TO-220,3P,-,PLAS	
PICS4	1203-001697	IC-VOLTAGE REGULATOR;78R08,TO-220,4P,-,P	
PICS5	1203-001083	IC-VOLTAGE REGULATOR;3RF23,TO-202,4P,12.	
PLF01	AC29-30050A	FILTER-LINE NOISE;-,400UH,-,250V,-	⚠
PLS01	AC29-30050C	FILTER-LINE NOISE;-,25MH,0.35A,AC250V,BS	⚠
PLS31	AC27-12001N	COIL-CHOKE;10UH-15%,RA,K-30,Q80,150KHZ,-	
POWER	0601-001447	LED;ROUND,RED,3.1mm,650nm	
PQL51	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQL52	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,T0-9	
PQL53	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQL54	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,T0-9	
PQL55	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,T0-9	
PQL56	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQL57	0504-000126	TR-DIGITAL;KSR1101,NPN,200MW,4.7K/4.7K,S	
PQL58	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
PQS55	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQS56	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
PQS57	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
PQS58	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
PRD31	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
PRD32	2007-000931	R-CHIP;470OHM,5%,1/10W,DA,TP,2012	
PRF10	2006-000262	R-CEMENT;2.7ohm,10%,2W,CB,TP,7.5x11x20.	
PRF11	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF12	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF13	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF14	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF15	2001-000096	R-CARBON(S);1MOHM,5%,1/2W,AA,TP,2.4X6.4M	
PRF16	2001-000938	R-CARBON;68OHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRF17	2001-000591	R-CARBON;3.3KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRF19	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRF20	2003-000105	R-METAL OXIDE;0.33ohm,5%,2W,AD,TP,6x16mm	
PRL51	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL52	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRL53	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL54	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRL55	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRL56	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL57	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL58	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRS11	2003-000273	R-METAL OXIDE;33Kohm,5%,2W,AA,TP,6x16mm	
PRS12	2003-000273	R-METAL OXIDE;33Kohm,5%,2W,AA,TP,6x16mm	
PRS31	2001-000440	R-CARBON;1OHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRS32	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
PRS33	2004-000869	R-METAL;3Kohm,1%,1/8W,AA,TP,1.8x3.2mm	
PRS34	2004-000459	R-METAL;2.2Kohm,1%,1/8W,AA,TP,1.8x3.2m	

Loc.No	Part No	Description ; Specification	Remark
PRS54	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRS55	2001-000062	R-CARBON;470OHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRS56	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PTD1	AC26-00001M	TRANS-SWITCHING;-,-,-,100V-240V,DEMCO,EE	⚠
PVA1	1405-000186	VARISTOR;470V,4500A,17x12mm,TP	⚠
PZS51	0403-000717	DIODE-ZENER;MTZJ5.1B,5.1V,4.94-5.2V,500m	
SCC11	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
SCC12	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
SCC14	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
SCC3	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCC4	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCC7	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCC8	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCD1	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SCD3	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SCD4	0403-000297	DIODE-ZENER;MTZ6.2B,6.2V,5.96-6.27V,500m	
SCE10	2401-001479	C-AL;470uF,20%,10V,GP,TP,-,-	
SCE11	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE12	2401-001479	C-AL;470uF,20%,10V,GP,TP,-,-	
SCE13	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE14	2401-001479	C-AL;470uF,20%,10V,GP,TP,-,-	
SCE15	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE16	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
SCE17	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
SCE4	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SCE5	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE6	2401-000369	C-AL;100uF,20%,6.3V,GP,-,6.3x11,5	
SCIC3	AH14-10004T	IC-ANALOG M/PLEXER;MC14053BD,SOP,TAPE 16	
SCIC4	1201-001063	IC-OP AMP;2267,SOP,8P,300MIL,DUAL,6.7dB,	
SCIC6	1201-001419	IC-VIDEO AMP;7660,SSOP,16P,173MIL,3,6DB,	
SCJ1	3722-001359	JACK-SCART;21P,-,SN,BLK,#20-28	
SCL1	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
SCL11	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
SCL2	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
SCQ15	0504-000156	TR-DIGITAL;DTA124EKA,PNP,200mW,22K-22K	
SCQ16	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCQ18	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCQ3	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCQ7	0501-000314	TR-SMALL SIGNAL;KSA812,PNP,150mW,SOT-23,	
SCQ8	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCR1	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
SCR15	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
SCR19	2007-000030	R-CHIP;560OHM,5%,1/10W,DA,TP,2012	
SCR20	2007-000030	R-CHIP;560OHM,5%,1/10W,DA,TP,2012	
SCR23	2007-001201	R-CHIP;820OHM,5%,1/10W,DA,TP,2012	
SCR24	2007-001201	R-CHIP;820OHM,5%,1/10W,DA,TP,2012	
SCR25	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR35	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR36	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR37	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR4	2007-000981	R-CHIP;5.6KOHM,5%,1/10W,DA,TP,2012	
SCR46	2007-000290	R-CHIP;100OHM,5%,1/10W,DA,TP,2012	
SCR5	2007-000686	R-CHIP;3.3KOHM,5%,1/10W,DA,TP,2012	
SCR60	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR61	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR63	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR65	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR76	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
SVJ1	3722-001375	JACK-DIN;4P,-,NI,BLK,-	
SW1	3404-000160	SWITCH-TACT;12V,50mA,160gf+-50gf,6.55x7.	
VC1	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC10	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC106	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
VC11	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC12	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VC13	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	

Loc.No	Part No	Description ; Specification	Remark
VC14	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC16	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
VC17	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
VC18	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VC19	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC21	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC22	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC3	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC4	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VC5	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC6	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC8	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC9	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VE5	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
VE6	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
VE7	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
VE8	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
VE9	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
VFD1	AH07-00024A	VF DISPLAY;HNV-11SS19,21SEG,74X9.0mm,DVD	
VIC1	1201-001419	IC-VIDEO AMP;7660,SSOP,16P,173MIL,3,6DB,	
VL1	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL112	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
VL2	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL3	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL4	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL5	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL6	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL7	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL8	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VR10	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR10S	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR11	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR12	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR121	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR122	2007-000572	R-CHIP;220OHM,5%,1/10W,DA,TP,2012	
VR123	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR7	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR8	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR9	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VSW1	AH34-00010A	SWITCH SLIDE;-,50V DC,-,-,100MOHM,-,-,-,	

Loc.No	Part No	Description ; Specification	Remark
602	**AH92-00338F**	**ASSY PCB-JACK;DVD-511/XEF,JACK PCB**	**DVD-511**
AC10	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AC11	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
AC13	2301-000423	C-FILM,PEF;3.3NF,5%,100V,TP,7X10X4.5MM,5	
AC14	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC15	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC201	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AC202	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
AC203	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
AC4	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC5	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC6	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
AC7	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC8	2301-000402	C-FILM,PEF;1nF,5%,50V,TP,5x7x2.8mm,5mm	
AC9	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
AD51	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
AD54	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
AD55	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
AD60	0407-000116	DIODE-ARRAY;DAP202K,80V,100mA,CK2-3,SOT-	
AE1	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE17	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
AE2	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE21	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
AE22	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
AE3	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
AE51	2401-001969	C-AL;470uF,20%,25V,GP,TP,10x12.5,5	
AE52	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
AE6	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
AE9	2401-000414	C-AL;10uF,20%,16V,GP,TP,4x7,5	
AIC1	1002-001213	IC-D/A CONVERTER;AK4393VF,24BIT,SOP,28P,	
AIC3	AH14-10004R	IC;M74HCU04,SOP,TAPE 14P	
AL1	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
AL2	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
AL201	2901-001125	FILTER-EMI ON BOARD;50V,0.5A,-,220pF,7x2	
AOP1	1201-000163	IC-OP AMP;4560,SOP,8P,173MIL,DUAL,100V/m	
AQ1	0501-000341	TR-SMALL SIGNAL;KSC1623-L,NPN,200mW,SOT-	
AQ3	0501-000341	TR-SMALL SIGNAL;KSC1623-L,NPN,200mW,SOT-	
AQ51	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
AQ52	0504-000156	TR-DIGITAL;DTA124EKA,PNP,200mW,22K-22K	
AQ55	0504-000118	TR-DIGITAL;KSR1003,NPN,300MW,22K/22K,TO-	
AQ56	0504-000118	TR-DIGITAL;KSR1003,NPN,300MW,22K/22K,TO-	
AQ57	0504-001003	TR-DIGITAL;KSR2003,PNP,300MW,22K/22K,TO-	
AR10	2007-000267	R-CHIP;1.8KOHM,5%,1/10W,DA,TP,2012	
AR11	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR14	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR15	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR16	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR17	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR18	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR19	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR2	2001-000258	R-CARBON;1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR201	2007-000766	R-CHIP;330OHM,5%,1/10W,DA,TP,2012	
AR202	2007-001247	R-CHIP;91OHM,5%,1/10W,DA,TP,2012	
AR203	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR21	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR22	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR24	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR26	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR28	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR29	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR30	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR31	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
AR32	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR33	2007-000221	R-CHIP;1.2KOHM,5%,1/10W,DA,TP,2012	
AR35	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR36	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	

Loc.No	Part No	Description ; Specification	Remark
AR38	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR40	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR5	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR51	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR54	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR55	2001-000241	R-CARBON;1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M	
AR56	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR6	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR7	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR8	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AR9	2007-000267	R-CHIP;1.8KOHM,5%,1/10W,DA,TP,2012	
AVJ2	3722-001467	JACK-RCA;3P,3.2mm,NI,BLK,-	
AVJ4	3722-001053	JACK-RCA;1P,3.2mm,NI,BLK,-	
AVJ5	3707-001005	CONNECTOR-OPTICAL;PLUG,SM,-,4.4/2.0MM	
AZD51	0403-000551	DIODE-ZENER;MTZ3.9B,3.9V,3.89-4.16V,500m	
CN1	3708-001364	CONNECTOR-FPC/FC/PIC;35P,1.25MM,STRAIGHT	
CN1A	3809-001180	CABLE-FLAT;30V,-30to+80C,80mm,35P,1.25mm	
CN3	AH39-00179A	CONNECT WIRE;-,-,-,-,#26,-,-,-,-,-,-,-,1	
FC10	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC14	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC15	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC16	2203-000444	C-CERAMIC,CHIP;1nF,10%,50V,X7R,TP,2012,-	
FC2	2202-000162	C-CERAMIC,MLC-AXIAL;.015NF,5%,50V,SL,TP,	
FC3	2202-000162	C-CERAMIC,MLC-AXIAL;.015NF,5%,50V,SL,TP,	
FC4A	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
FC6	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
FC7	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
FD10	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD6	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD7	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD8	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
FD9	0403-000551	DIODE-ZENER;MTZ3.9B,3.9V,3.89-4.16V,500m	
FE1	2401-000922	C-AL;22uF,20%,16V,GP,TP,5x5,5	
FE12	2401-001475	C-AL;47uF,20%,10V,GP,TP,6.3x5,5mm	
FE5	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
FE8	2401-001507	C-AL;47uF,20%,16V,GP,TP,6.3x5,5	
FIC1	AH09-00034A	IC MICOM;LC866232A,SANYO,100PIN,QFP,QFP	
FIC2	1203-001252	IC-VOL. DETECTOR;7545,TO-92,3P,-,PLASTIC	
FIC4	AH59-00010A	MODULE-REMOCON;-,-,37.9KHZ,940NM,-,-,-	
FL2	2701-000114	INDUCTOR-AXIAL;10uH,10%,2.5x3.4mm	
FR1	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR10	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR101	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR102	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR103	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR104	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR105	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR106	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR11	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR12	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR13	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR16	2001-000027	R-CARBON;100OHM,5%,1/4W,AA,TP,2.4X6.4MM	
FR17	2001-000027	R-CARBON;100OHM,5%,1/4W,AA,TP,2.4X6.4MM	
FR18	2007-000493	R-CHIP;2.2KOHM,5%,1/10W,DA,TP,2012	
FR19	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR20	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR21	2001-000435	R-CARBON;1MOHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR24	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR25	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR26	2001-000281	R-CARBON;100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR2S	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR31	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR32	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR33	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR34	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR35	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	

Loc.No	Part No	Description ; Specification	Remark
FR36	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR37	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR43	2001-000793	R-CARBON;47OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR44	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR45	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR46	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
FR4S	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR5	2001-000325	R-CARBON;120OHM,5%,1/8W,AA,TP,1.8X3.2MM	
FR51	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR52	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
FR7	2007-000282	R-CHIP;100KOHM,5%,1/10W,DA,TP,2012	
FY1	2802-000108	RESONATOR-CERAMIC;12MHZ,0.5%,BK,10.0X5.0	
HC3	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
HC4	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
HE3	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
HE4	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
HOP2	1201-000163	IC-OP AMP;4560,SOP,8P,173MIL,DUAL,100V/m	
HR10	2007-000282	R-CHIP;100KOHM,5%,1/10W,DA,TP,2012	
HR15	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
HR16	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
HR9	2007-000282	R-CHIP;100KOHM,5%,1/10W,DA,TP,2012	
JP266	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP281	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP347	2008-000141	R-FUSIBLE;2.2ohm,5%,1/4W,AA,TP,2.6x6.7mm	
JP383	2001-000780	R-CARBON;470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
JP385	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP58	2701-000114	INDUCTOR-AXIAL;10uH,10%,2.5x3.4mm	
JP80	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP81	2007-000033	R-CHIP;0OHM,5%,1/8W,DA,TP,3216	
JP91	2008-000141	R-FUSIBLE;2.2ohm,5%,1/4W,AA,TP,2.6x6.7mm	
PBD11	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PBF11	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PBS01	3301-000297	CORE-FERRITE BEAD;AA,3.6x1.2x5.7mm,1400,	
PCD01	2201-000916	C-CERAMIC,DISC;100pF,10%,400V,Y5U,TP,10x	⚠
PCD02	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	⚠
PCD03	2201-000812	C-CERAMIC,DISC;2.2nF,20%,400V,Y5U,BK,12.	⚠
PCD12	2201-000129	C-CERAMIC,DISC;0.1nF,10%,1kV,Y5P,TP,7x4,	⚠
PCF01	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	⚠
PCF02	2305-001021	C-FILM,MPEF;100nF,20%,275V,TP,17.5x7x13.	⚠
PCF11	2305-001029	C-FILM,MPEF;10nF,10%,630V,TP,12x9x12.5,5	
PCF13	2201-000376	C-CERAMIC,DISC;0.22nF,5%,50V,SL,TP,6.3x3	
PCNS1	AH39-00177A	CONNECT WIRE;-,-,-,-,#24,-,-,-,-,-,-,-,1	
PCNS2	3711-000178	CONNECTOR-HEADER;1WALL,2P,1R,3.96mm,STRA	
PCR01A	2002-000121	R-COMPOSITION;1Mohm,10%,1/2W,AA,TP,3.5x9	
PCS03	2201-000916	C-CERAMIC,DISC;100pF,10%,400V,Y5U,TP,10x	⚠
PCS31	2301-000381	C-FILM,PEF;10nF,5%,50V,TP,6.5x5.5x3mm,5m	
PCS32	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
PDD35	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDF01	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDF12	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDF13	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDL51	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDL52	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDL55	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDS01	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS02	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS03	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS04	0402-001196	DIODE-RECTIFIER;1T5,600V,1A,TS-1,TP	
PDS11	0402-000276	DIODE-RECTIFIER;UF4007,1KV,1A,DO-41,TP	
PDS31	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDS32	0402-001194	DIODE-RECTIFIER;UG2D,200V,2A,DO-204AC,TP	
PDS33	0404-001097	DIODE-SCHOTTKY;SG45,45V,7500mA,TO-220A,B	
PDS34	0404-001097	DIODE-SCHOTTKY;SG45,45V,7500mA,TO-220A,B	
PDS36	0402-001195	DIODE-RECTIFIER;F1T4,400V,1.0A,TS-1,TP	
PDS51	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
PDS52	0402-000132	DIODE-RECTIFIER;1N4004,400V,1A,DO-41,TP	

Loc.No	Part No	Description ; Specification	Remark
PEF10	2401-001682	C-AL;82uF,20%,400V,GP,BK,22x25,10	⚠
PEF12	2401-002608	C-AL;33uF,20%,35V,GP,TP,5x11,5	
PES31	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES32	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES33	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
PES34	2401-000118	C-AL;1000uF,20%,10V,GP,TP,10x12.5,5	
PES35	2401-003046	C-AL;47uF,20%,50V,WT,TP,6.3x11,2.5	
PES36	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
PES37	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
PES51	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
PES52	2401-000598	C-AL;1uF,20%,50V,GP,TP,4x7,5	
PES53	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES54	2401-002144	C-AL;47uF,20%,16V,GP,TP,5x11,5	
PES56	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES57	2401-000302	C-AL;100uF,20%,25V,GP,TP,6.3x11,5	
PES58	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
PFD01	3601-001123	FUSE-CARTRIDGE;250V,1.6A,TIME-LAG,CERAMI	⚠
PICF1	1203-001802	IC-PWM CONTROLLER;STR-G6551,TO-220F,5P,-	⚠
PICS1	0604-000186	PHOTO-COUPLER;TR,-,200mW,DIP-4,ST	⚠
PICS2	AC14-12006D	IC;KA431Z,TO-92,TAPING	
PICS3	1203-000122	IC-NEGA.FIXED REG.;7908,TO-220,3P,-,PLAS	
PICS4	1203-001697	IC-VOLTAGE REGULATOR;78R08,TO-220,4P,-,P	
PICS5	1203-001083	IC-VOLTAGE REGULATOR;3RF23,TO-202,4P,12.	
PLF01	AC29-30050A	FILTER-LINE NOISE;-,400UH,-,250V,-	⚠
PLS01	AC29-30050C	FILTER-LINE NOISE;-,25MH,0.35A,AC250V,BS	⚠
PLS31	AC27-12001N	COIL-CHOKE;10UH-15%,RA,K-30,Q80,150KHZ,-	
POWER	0601-001447	LED;ROUND,RED,3.1mm,650nm	
PQL51	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQL52	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,T0-9	
PQL53	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQL54	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,T0-9	
PQL55	0501-000442	TR-SMALL SIGNAL;KTC3203-Y,NPN,400MW,T0-9	
PQL56	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQL57	0504-000126	TR-DIGITAL;KSR1101,NPN,200MW,4.7K/4.7K,S	
PQL58	0501-000303	TR-SMALL SIGNAL;KSA733,PNP,250mW,TO-92,T	
PQS55	0504-000152	TR-DIGITAL;KSR2101,PNP,200MW,4.7K/4.7K,S	
PQS56	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
PQS57	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
PQS58	0501-000616	TR-SMALL SIGNAL;KSC2328A-Y,NPN,1W,TO-92L	
PRD12	2003-000148	R-METAL OXIDE;100OHM,5%,2W,AE,TP,6X16MM	
PRD31	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
PRD32	2007-000931	R-CHIP;470OHM,5%,1/10W,DA,TP,2012	
PRF10	2006-000262	R-CEMENT;2.7ohm,10%,2W,CB,TP,7.5x11x20.	
PRF11	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF12	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF13	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF14	2001-000076	R-CARBON;47KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRF15	2001-000096	R-CARBON(S);1MOHM,5%,1/2W,AA,TP,2.4X6.4M	
PRF16	2001-000938	R-CARBON;68OHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRF17	2001-000591	R-CARBON;3.3KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRF19	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRF20	2003-000105	R-METAL OXIDE;0.33ohm,5%,2W,AD,TP,6x16mm	
PRL51	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL52	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRL53	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL54	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRL55	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRL56	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL57	2001-000273	R-CARBON;100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRL58	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRS11	2003-000994	R-METAL OXIDE(S);33Kohm,5%,2W,AF,TP,3.9x	
PRS12	2003-000994	R-METAL OXIDE(S);33Kohm,5%,2W,AF,TP,3.9x	
PRS31	2001-000440	R-CARBON;1OHM,5%,1/8W,AA,TP,1.8X3.2MM	
PRS32	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
PRS33	2004-000869	R-METAL;3Kohm,1%,1/8W,AA,TP,1.8x3.2mm	
PRS34	2004-000459	R-METAL;2.2Kohm,1%,1/8W,AA,TP,1.8x3.2m	

Loc.No	Part No	Description ; Specification	Remark
PRS54	2001-000449	R-CARBON;2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
PRS55	2001-000062	R-CARBON;470OHM,5%,1/4W,AA,TP,2.4X6.4MM	
PRS56	2001-000429	R-CARBON;1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
PTD1	AC26-00001M	TRANS-SWITCHING;-,-,-,100V-240V,DEMCO,EE	⚠
PVA1	1405-000186	VARISTOR;470V,4500A,17x12mm,TP	⚠
PZS51	0403-000717	DIODE-ZENER;MTZJ5.1B,5.1V,4.94-5.2V,500m	
SCC100	2203-000444	C-CERAMIC,CHIP;1nF,10%,50V,X7R,TP,2012,-	
SCC11	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
SCC12	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
SCC14	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
SCC3	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCC4	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCC7	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCC8	2203-000239	C-CERAMIC,CHIP;0.1nF,5%,50V,NP0,TP,2012	
SCD1	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SCD3	0407-000114	DIODE-ARRAY;DAN202K,80V,100mA,CA2-3,SOT-	
SCD4	0403-000297	DIODE-ZENER;MTZ6.2B,6.2V,5.96-6.27V,500m	
SCE10	2401-001479	C-AL;470uF,20%,10V,GP,TP,-,-	
SCE11	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE12	2401-001479	C-AL;470uF,20%,10V,GP,TP,-,-	
SCE13	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE14	2401-001479	C-AL;470uF,20%,10V,GP,TP,-,-	
SCE15	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE16	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
SCE17	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
SCE4	2401-002075	C-AL;4.7uF,20%,50V,GP,TP,5x11,5	
SCE5	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
SCE6	2401-000369	C-AL;100uF,20%,6.3V,GP,-,6.3x11,5	
SCIC3	AH14-10004T	IC-ANALOG M/PLEXER;MC14053BD,SOP,TAPE 16	
SCIC4	1201-001063	IC-OP AMP;2267,SOP,8P,300MIL,DUAL,6.7dB,	
SCIC6	1201-001419	IC-VIDEO AMP;7660,SSOP,16P,173MIL,3,6DB,	
SCJ1	3722-001359	JACK-SCART;21P,-,SN,BLK,#20-28	
SCL1	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
SCL11	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
SCL2	2701-000181	INDUCTOR-AXIAL;33uH,5%,2.4x3.4mm	
SCQ15	0504-000156	TR-DIGITAL;DTA124EKA,PNP,200mW,22K-22K	
SCQ16	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCQ18	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCQ3	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCQ7	0501-000314	TR-SMALL SIGNAL;KSA812,PNP,150mW,SOT-23,	
SCQ8	0504-000128	TR-DIGITAL;-,NPN,200MW,22K/22K,SOT-23,TP	
SCR1	2001-000734	R-CARBON;4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
SCR15	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
SCR19	2007-000030	R-CHIP;560OHM,5%,1/10W,DA,TP,2012	
SCR20	2007-000030	R-CHIP;560OHM,5%,1/10W,DA,TP,2012	
SCR23	2007-001201	R-CHIP;820OHM,5%,1/10W,DA,TP,2012	
SCR24	2007-001201	R-CHIP;820OHM,5%,1/10W,DA,TP,2012	
SCR25	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR35	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR36	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR37	2007-001166	R-CHIP;75OHM,5%,1/10W,DA,TP,2012	
SCR4	2007-000981	R-CHIP;5.6KOHM,5%,1/10W,DA,TP,2012	
SCR46	2007-000290	R-CHIP;100OHM,5%,1/10W,DA,TP,2012	
SCR5	2007-000686	R-CHIP;3.3KOHM,5%,1/10W,DA,TP,2012	
SCR60	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR61	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR63	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR65	2007-000029	R-CHIP;0OHM,5%,1/10W,DA,TP,2012	
SCR76	2007-000468	R-CHIP;1KOHM,5%,1/10W,DA,TP,2012	
SVJ1	3722-001375	JACK-DIN;4P,-,NI,BLK,-	
SW1	3404-000160	SWITCH-TACT;12V,50mA,160gf+-50gf,6.55x7.	
VC1	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC10	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC106	2203-000260	C-CERAMIC,CHIP;10nF,10%,50V,X7R,TP,2012	
VC11	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC12	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	

Loc.No	Part No	Description ; Specification	Remark
VC13	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC14	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC16	2202-002037	C-CERAMIC,MLC-AXIAL;100nF,80-20%,50V,Y5V	
VC17	2203-000192	C-CERAMIC,CHIP;100nF,+80-20%,50V,Y5V,TP,	
VC18	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VC19	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC21	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC22	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC3	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC4	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VC5	2202-000791	C-CERAMIC,MLC-AXIAL;150pF,10%,50V,Y5P,TP	
VC6	2202-000205	C-CERAMIC,MLC-AXIAL;22pF,5%,50V,SL,TP,1.	
VC8	2202-000851	C-CERAMIC,MLC-AXIAL;270PF,10%,50V,Y5P,TP	
VC9	2202-000231	C-CERAMIC,MLC-AXIAL;330pF,10%,50V,Y5P,TP	
VE5	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
VE6	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
VE7	2401-001353	C-AL;470uF,20%,10V,GP,TP,8x11.5,5	
VE8	2401-000913	C-AL;22uF,20%,16V,GP,TP,5x11,5	
VE9	2401-002042	C-AL;220uF,20%,10V,GP,TP,6.3x11,5	
VFD1	AH07-00024A	VF DISPLAY;HNV-11SS19,21SEG,74X9.0mm,DVD	
VIC1	1201-001419	IC-VIDEO AMP;7660,SSOP,16P,173MIL,3,6DB,	
VL1	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL112	3301-000353	CORE-FERRITE BEAD;AB,2.0x1.25x0.9mm,-,-	
VL2	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL3	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL4	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL5	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL6	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL7	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VL8	2701-000238	INDUCTOR-AXIAL;1.8uH,10%,2.5x3.4mm	
VR10	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR10S	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR11	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR12	2001-000969	R-CARBON;75OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR121	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR122	2007-000572	R-CHIP;220OHM,5%,1/10W,DA,TP,2012	
VR123	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR7	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR8	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VR9	2001-001006	R-CARBON;82OHM,5%,1/8W,AA,TP,1.8X3.2MM	
VSW1	AH34-00010A	SWITCH SLIDE;-,50V DC,-,-,100MOHM,-,-,-,	

Loc.No	Part No	Description ; Specification	Remark
701	**AH92-00583A**	**ASSY PCB-KEY;DVD-611/XAA,KEY PCB**	**DVD-611/611B/615**
CON21	AH39-00180A	CONNECT WIRE;-,-,-,-,#26,-,-,-,-,-,-,-,1	
FSW1	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW2	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW4	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW5	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW6	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
701	**AH92-00582A**	**ASSY PCB-KEY;DVD-511/XAA,KEY PCB**	**DVD-511**
CON21	AH39-00180A	CONNECT WIRE;-,-,-,-,#26,-,-,-,-,-,-,-,1	
FSW1	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW2	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW4	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW5	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
FSW6	3404-000165	SWITCH-TACT;12V,50mA,160gf,6x6mm,SPST	
H240	**AH92-00609A**	**ASSY PCB-DECK;VALINO DECK 2L**	**DVD-611/611B/615**
CN1	3708-001084	CONNECTOR-FPC/FC/PIC;40P,1.25mm,ANGLE,SN	
CN2	3708-001493	CONNECTOR-FPC/FC/PIC;24P,1mm,SMD-A,SN	
CN3	3708-001492	CONNECTOR-FPC/FC/PIC;11P,1mm,ANGLE,SN	
DC1	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC2	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC3	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC4	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC5	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DD1	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
DD2	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
DR1	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR2	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR3	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR4	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR5	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR6	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR7	2001-000515	R-CARBON;220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
SW1	3409-001045	SWITCH-DETECTOR;30V,0.1A,1,36gf,-	
SW2	3409-001045	SWITCH-DETECTOR;30V,0.1A,1,36gf,-	
SW2	3409-000176	SWITCH-DETECTOR;30Vdc,100mA,SPST,-,-	
SW3	3408-000227	SWITCH-SLIDE;30V,300mA,DPDT,-	
H240	**AH92-00608A**	**ASSY PCB-DECK;DVD-611/XAA,VALINO DECK 1L**	**DVD-511**
CN1	3708-001084	CONNECTOR-FPC/FC/PIC;40P,1.25mm,ANGLE,SN	
CN2	3708-001494	CONNECTOR-FPC/FC/PIC;20P,1mm,SMD-A,SN	
CN3	3708-001492	CONNECTOR-FPC/FC/PIC;11P,1mm,ANGLE,SN	
DC1	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC2	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC4	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DC5	2202-000797	C-CERAMIC,MLC-AXIAL;10NF,30%,16V,Y5S,TP,	
DD2	0401-000101	DIODE-SWITCHING;1N4148,100V,200mA,DO-35,	
DR1	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR4	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR5	2001-000405	R-CARBON;180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR6	2001-000290	R-CARBON;10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
DR7	2001-000924	R-CARBON;680OHM,5%,1/8W,AA,TP,1.8X3.2MM	
SW1	3409-001045	SWITCH-DETECTOR;30V,0.1A,1,36gf,-	
SW2	3409-000176	SWITCH-DETECTOR;30Vdc,100mA,SPST,-,-	
SW3	3408-000227	SWITCH-SLIDE;30V,300mA,DPDT,-	

9. Block Diagram

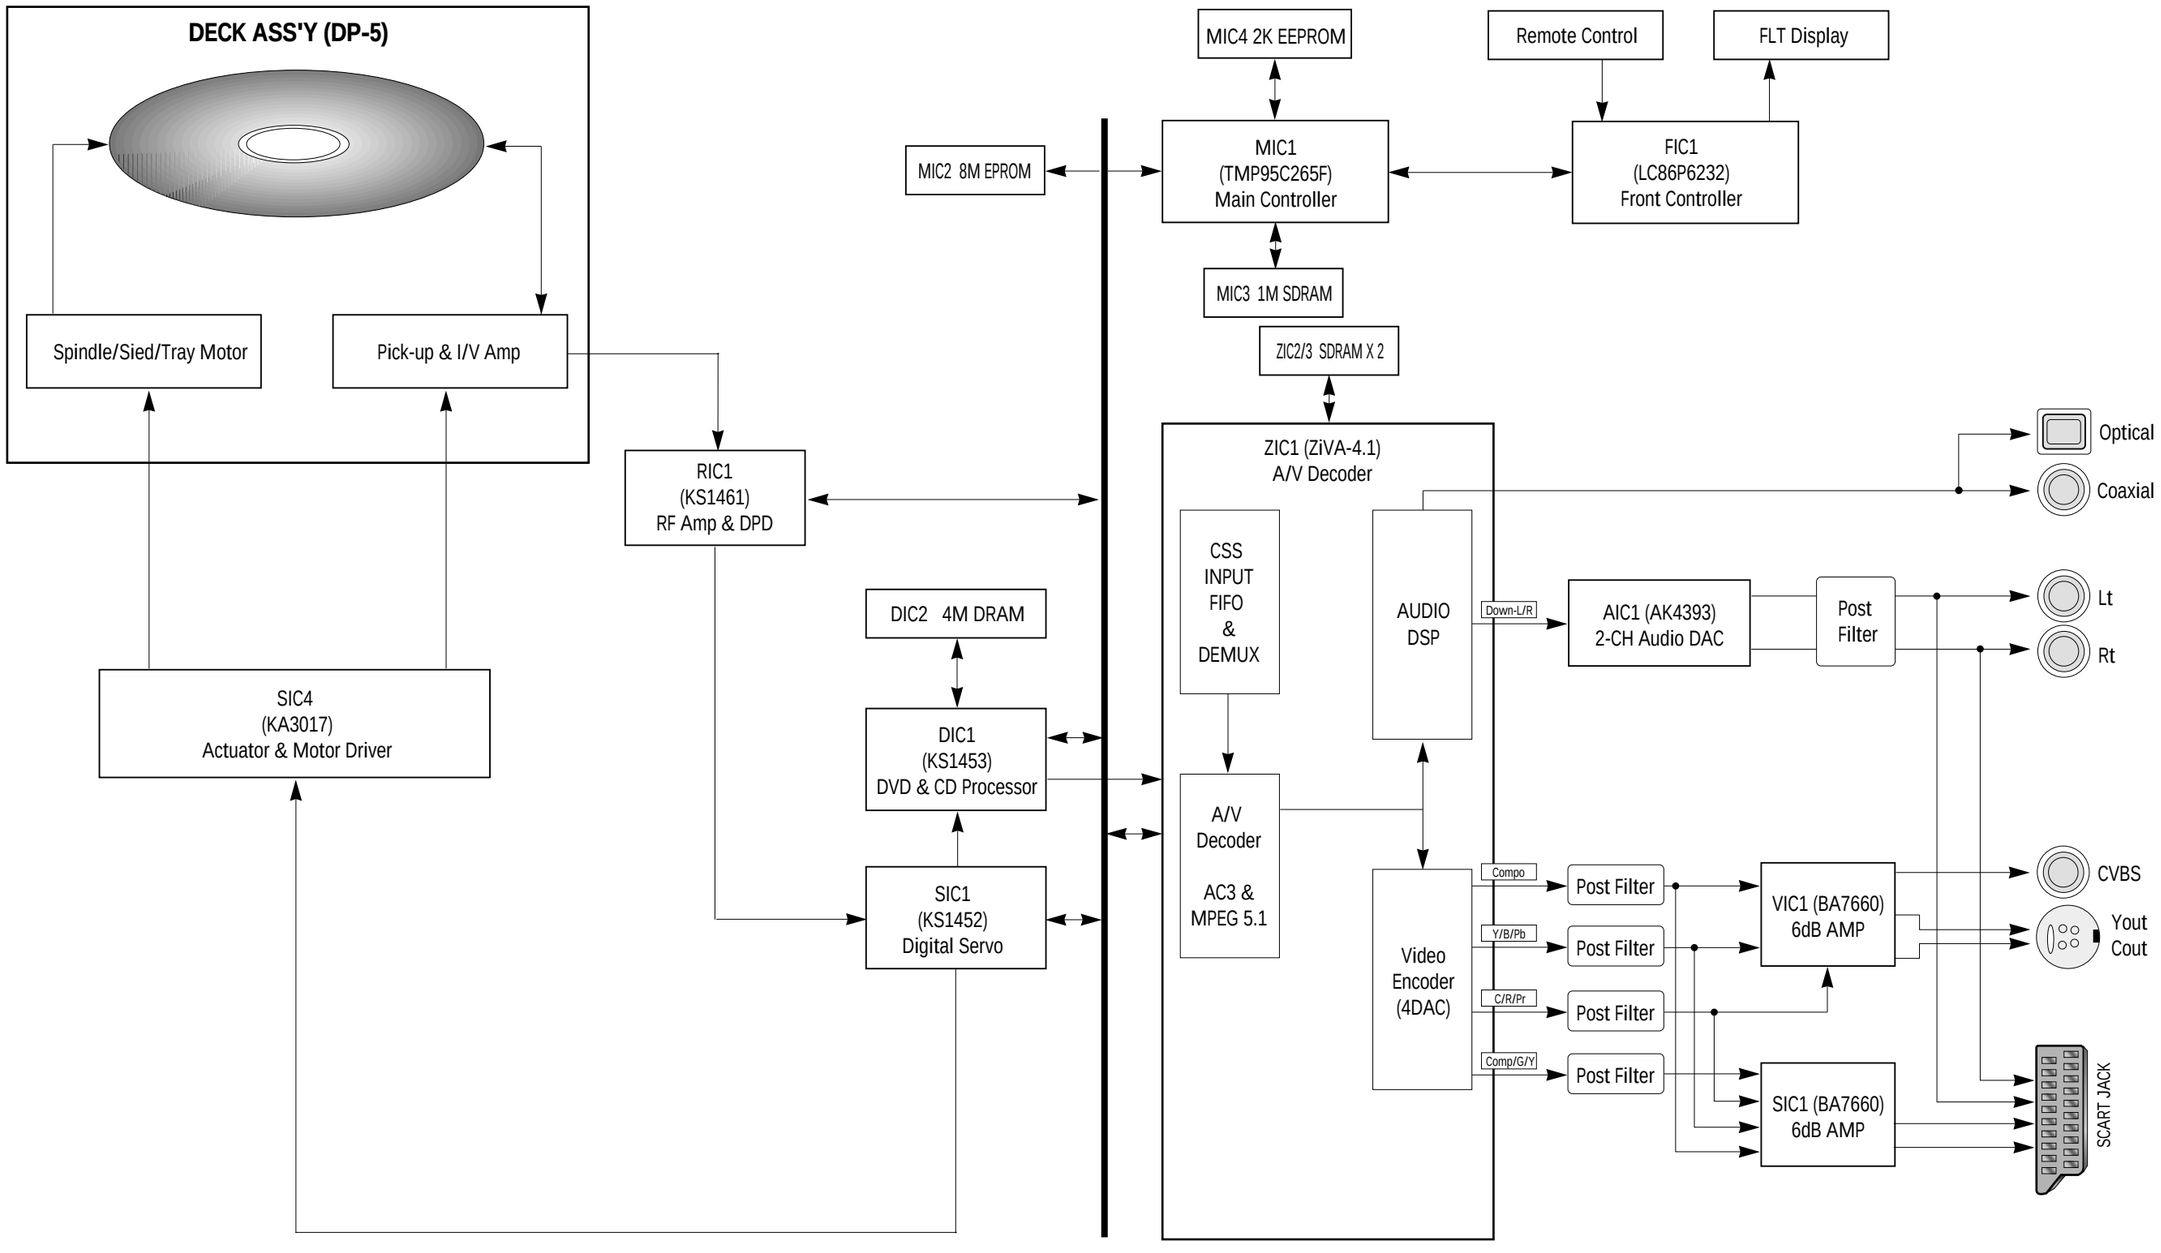

MEMO

10. PCB Diagrams

10-1 Main ---------- 10-2

10-2 Jack ---------- 10-3

10-3 Key ---------- 10-4

10-4 Deck ---------- 10-4

10-1 Main

COMPONENT SIDE

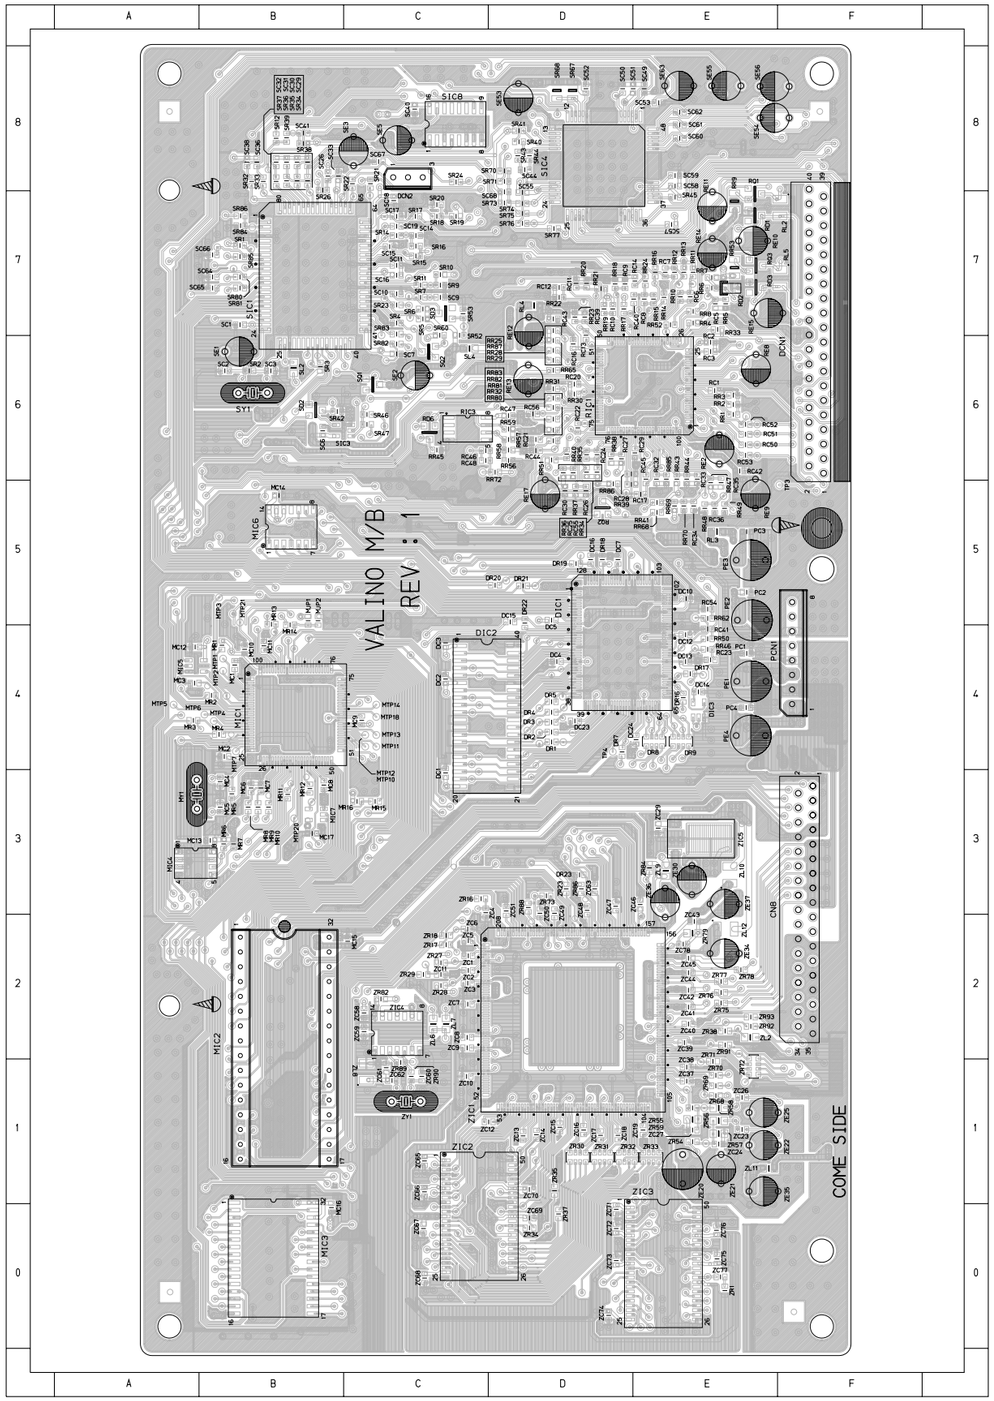

SOLDER SIDE

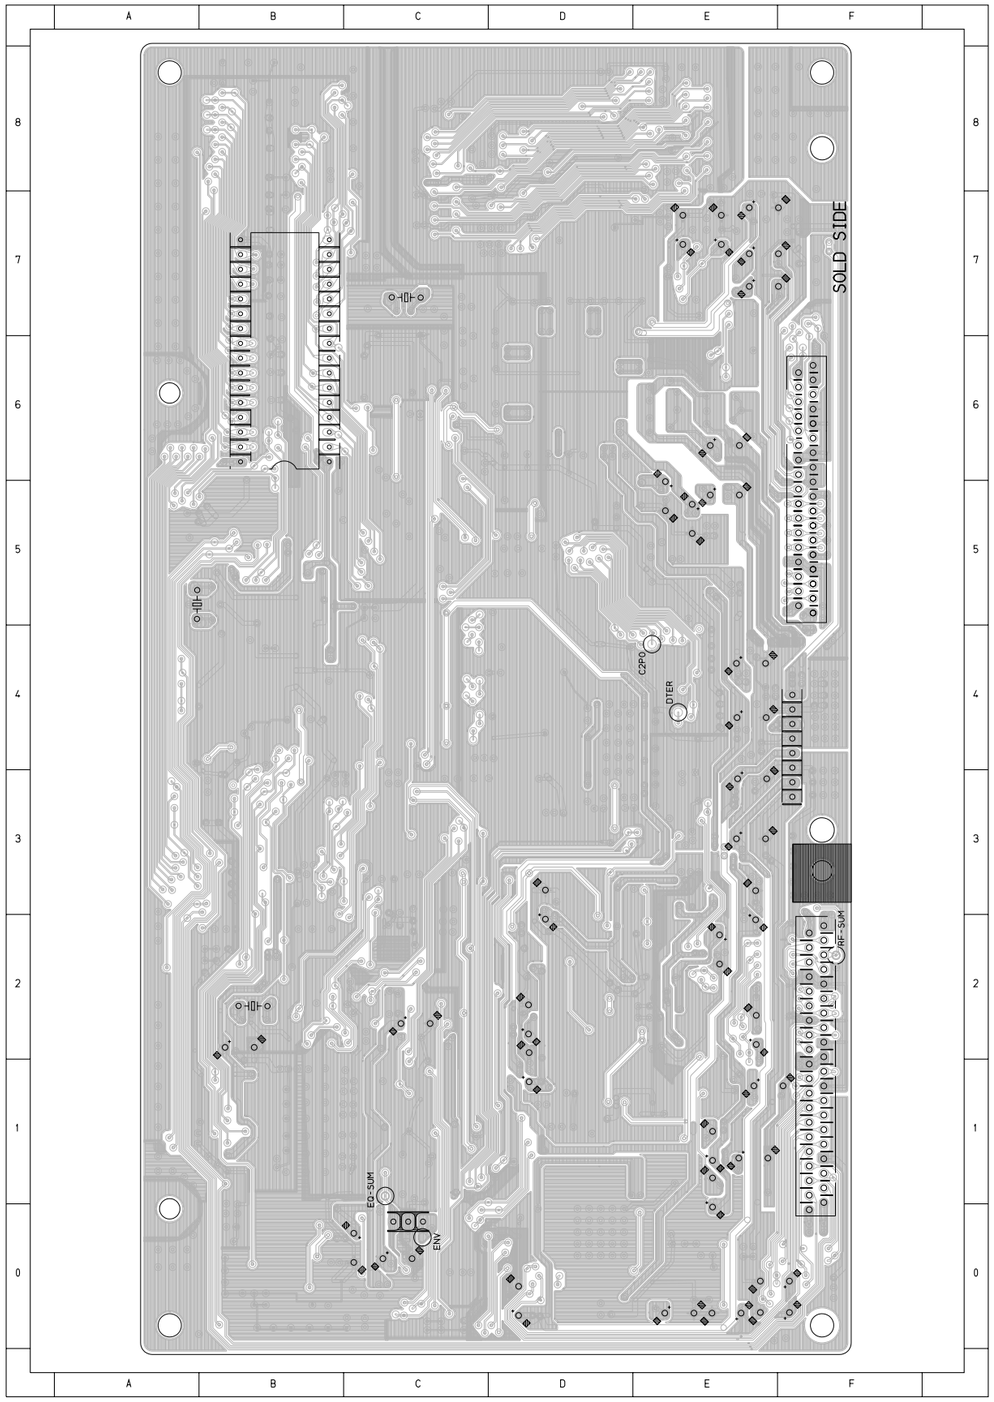

10-2 Jack

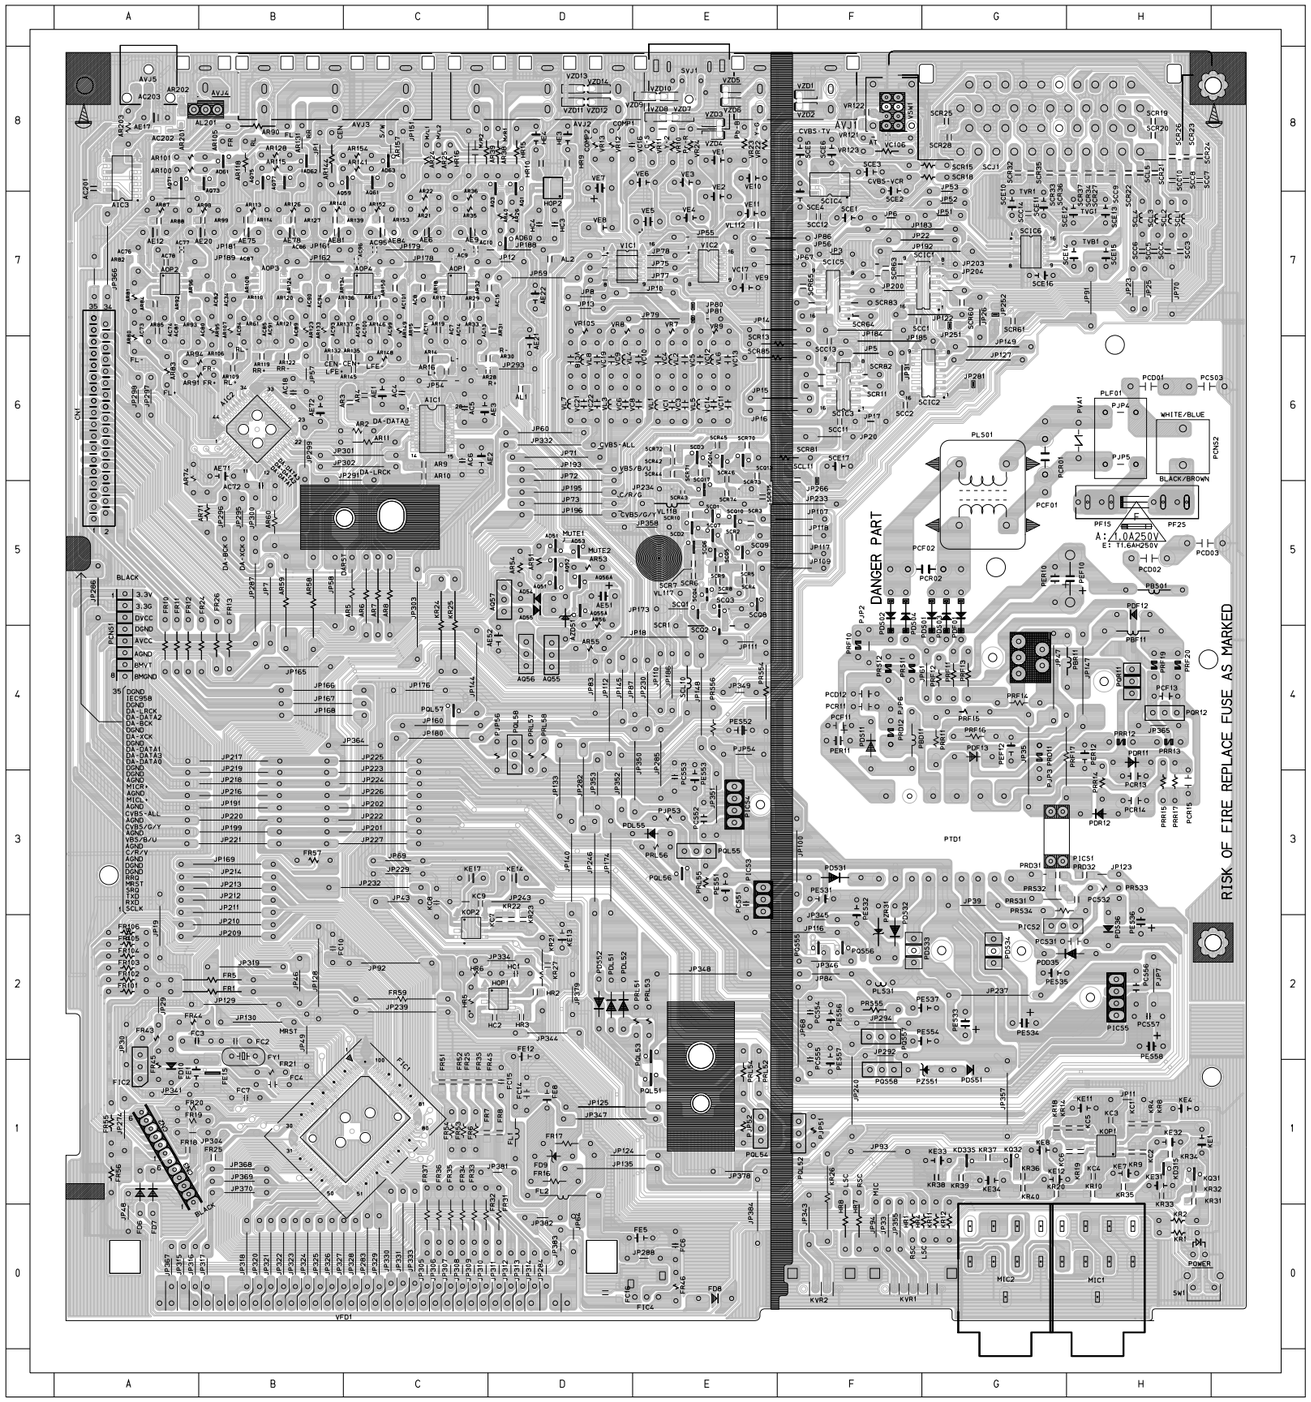
DANGER PART
RISK OF FIRE REPLACE FUSE AS MARKED
WHITE/BLUE
BLACK/BROWN
BLACK
POWER

10-3 Key

DVD-511

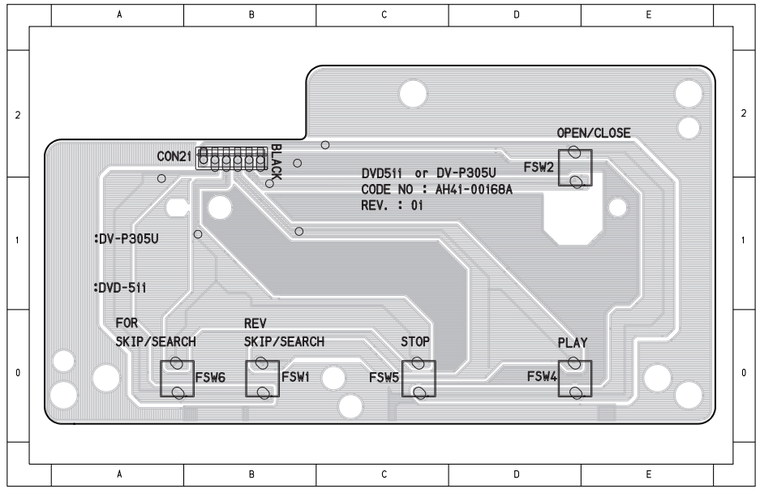

DVD-611
DVD-611B
DVD-615

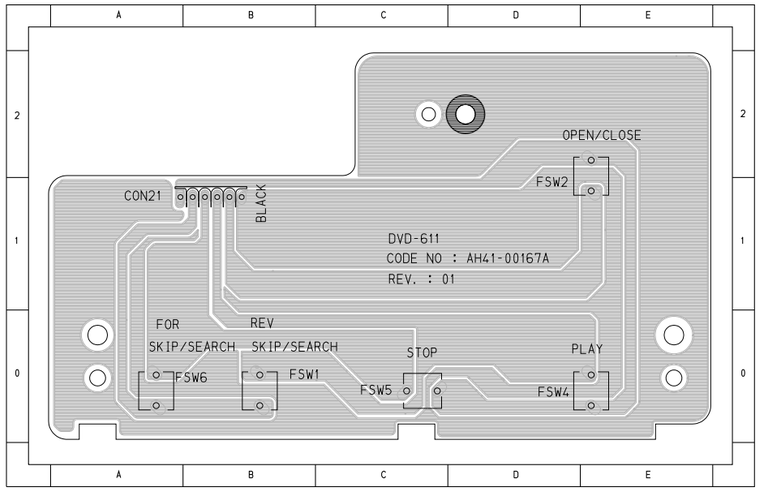

10-4 Deck

1 LD ; DVD-511

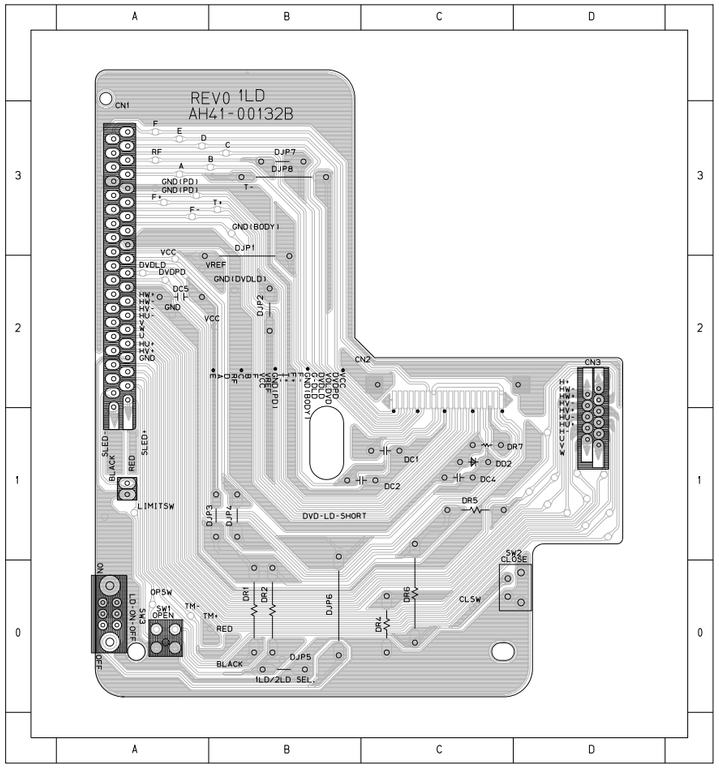

2 LD ; DVD-611 DVD-611B DVD-615

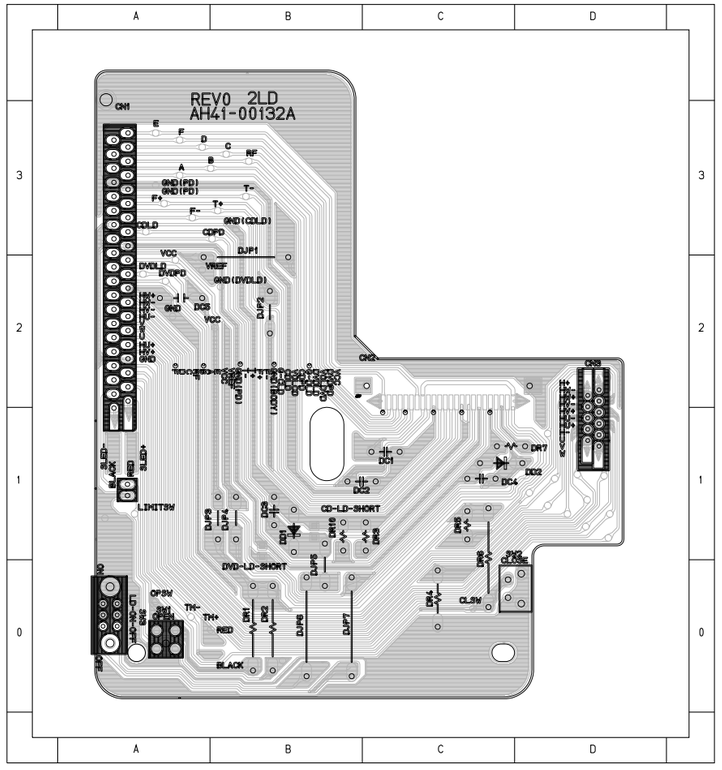

11. Wiring Diagram

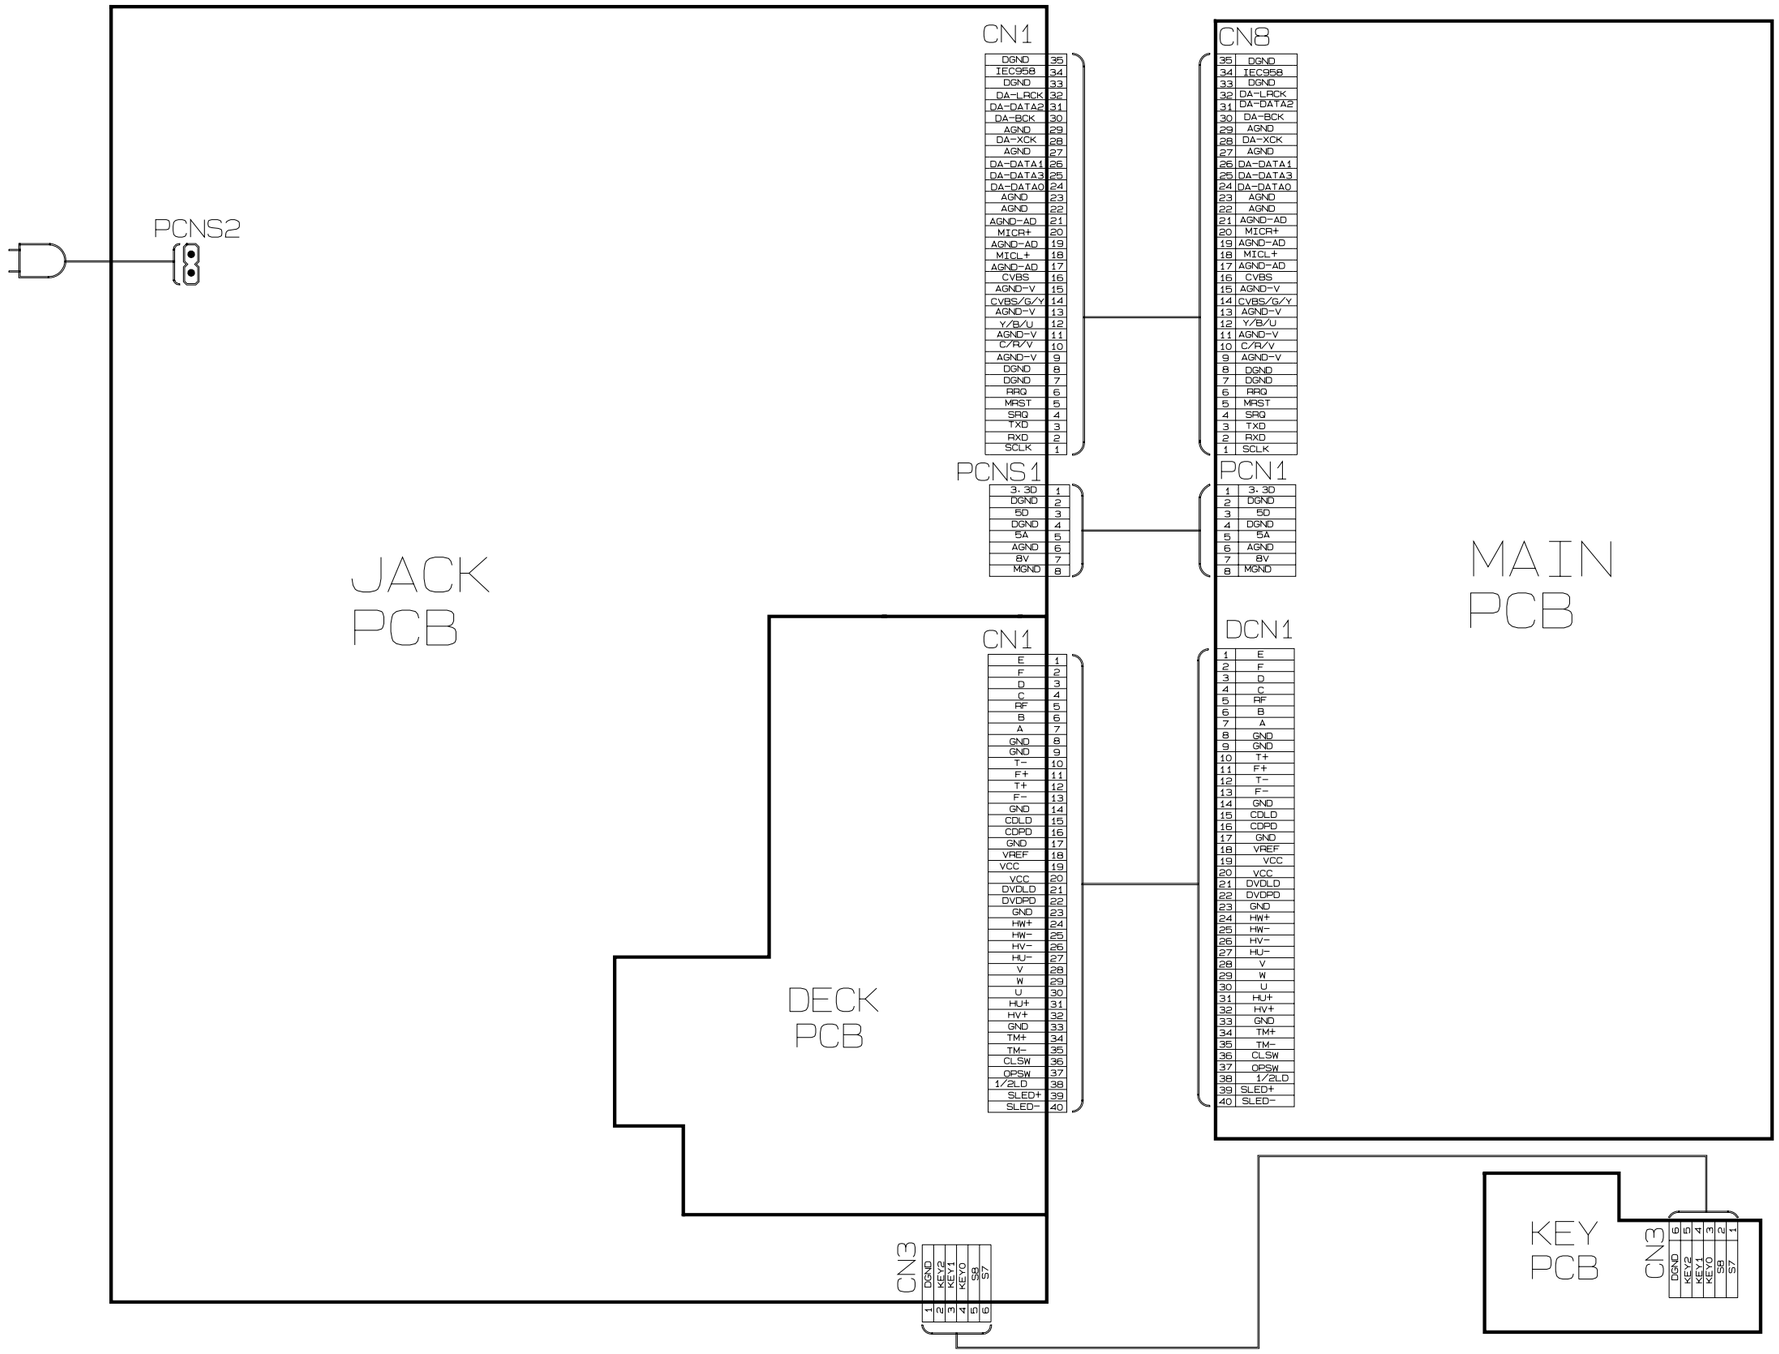

MEMO

12. Schematic Diagrams

12-1 Power - - -

12-1 Power

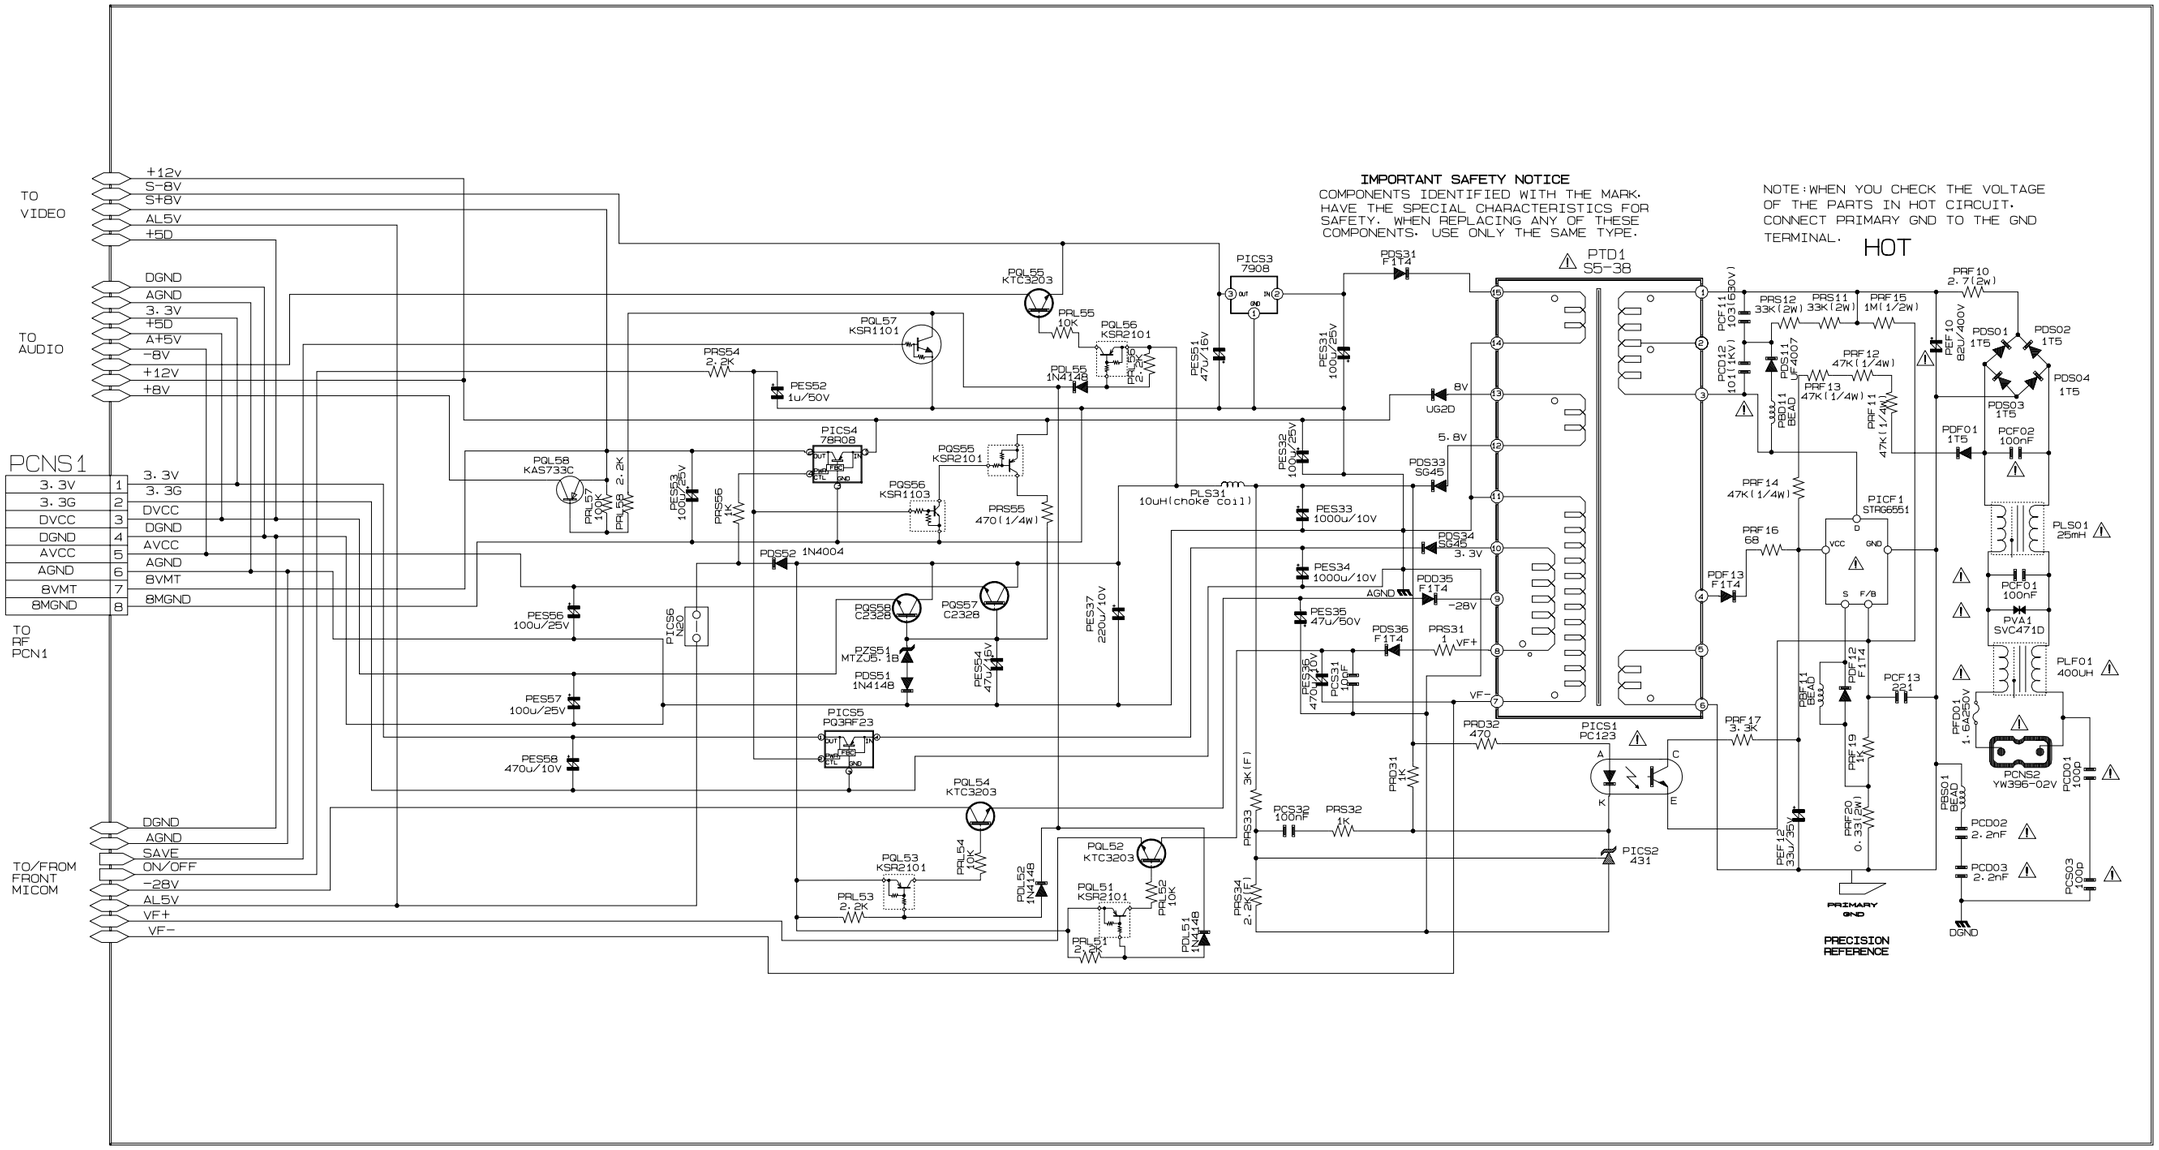
IMPORTANT SAFETY NOTICE
COMPONENTS IDENTIFIED WITH THE MARK. HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS. USE ONLY THE SAME TYPE.
NOTE:WHEN YOU CHECK THE VOLTAGE OF THE PARTS IN HOT CIRCUIT. CONNECT PRIMARY GND TO THE GND TERMINAL.
HOT
PTD1 S5-38
TO VIDEO
+12v
S-8V
S+8V
AL5V
+5D
TO AUDIO
DGND
AGND
3.3V
+5D
A+5V
-8V
+12V
+8V
PCNS1
3.3V 1
3.3G 2
DVCC 3
DGND 4
AVCC 5
AGND 6
8VMT 7
8MGND 8
TO RF PCN1
TO/FROM FRONT MICOM
DGND
AGND
SAVE
ON/OFF
-28V
AL5V
VF+
VF-
PRIMARY GND
PRECISION REFERENCE
PICS1 PC123
PICS2 431
PICS3 7908
PICS4 78R08
PICS5 PQ3RF23
PICF1 STR6651
PICS6 N20
PLS01 25mH
PLF01 400UH
PVA1 SVC471D
PCNS2 YW396-02V
PDS31 F14
PDS33 SG45
PDS34 SG45 3.3V
PDD35 F1T4 -28V
PDS36 F1T4
PDS01 1T5
PDS02 1T5
PDS03 1T5
PDS04 1T5
PDF01 1T5
PDS11 BB410 4007
PDS12 BB410 4007
PDS51 1N4148
PDS52 1N4004
PDS53 1N4148
PDS54 1N4148
PDS55 1N4148
PDS56 1N4148
PDS57 1N4148
PDS58 1N4148
PQL51 KSR2101
PQL52 KTC3203
PQL53 KSR2101
PQL54 KTC3203
PQL55 KTC3203
PQL56 KSR2101
PQL57 KSR1101
PQL58 KAS733C
PQS55 KSR2101
PQS56 KSR1103
PQS57 C2328
PQS58 C2328
PZS51 MTZJ5.1B
PRL51 2.2K
PRL52 10K
PRL53 2.2K
PRL54 10K
PRL55 10K
PRL56 2.2K
PRL57 100K
PRS31 1 VF+
PRS32 1K
PRS33 3K(F)
PRS34 2.2K
PRS54 2.2K
PRS55 470(1/4W)
PRS56 1K
PRS57 2.2K
PRD31 1K
PRD32 470
PRF10 2.7(2W)
PRF11 BEAD 330
PRF12 F1T4
PRF13 F1T4
PRF14 47K(1/4W)
PRF15 1M(1/2W)
PRF16 68
PRF17 3.3K
PRF18 35V/35V
PRF19 1K
PRF20 0.33(2W)
PRS01 BEAD 330
PRS11 33K(2W)
PRS12 33K(2W)
PCF01 100nF
PCF02 100nF
PCF11 103(630V)
PCF12 101(1KV)
PCF13 221
PCD01 100P
PCD02 2.2nF
PCD03 2.2nF
PCS01 103
PCS02 100nF
PCS03 100nF
PCS31 103
PCS32 100nF
PCS503 100P
PES31 47U/16V
PES32 100U/25V
PES33 1000U/10V
PES34 1000U/10V
PES36 47U/50V
PES37 220U/10V
PES51 47U/16V
PES52 1U/50V
PES53 100U/25V
PES54 470U/16V
PES56 100U/25V
PES57 100U/25V
PES58 470U/10V
PDF01 1.6A/250V
PLS31 10uH(choke coil)
PCD31 470P/2KV
PCD32 470P/2KV
PCD501 470P/2KV
PCD502 470P/2KV
PCD503 470P/2KV
PCD504 470P/2KV
PCD505 470P/2KV
PCD506 470P/2KV
PCD507 470P/2KV
PCD508 470P/2KV
PCD509 470P/2KV
PCD510 470P/2KV
PCD511 470P/2KV
PCD512 470P/2KV
PCD513 470P/2KV
PCD514 470P/2KV
PCD515 470P/2KV
PCD516 470P/2KV
PCD517 470P/2KV
PCD518 470P/2KV
PCD519 470P/2KV
PCD520 470P/2KV
PCD521 470P/2KV
PCD522 470P/2KV
PCD523 470P/2KV
PCD524 470P/2KV
PCD525 470P/2KV
PCD526 470P/2KV
PCD527 470P/2KV
PCD528 470P/2KV
PCD529 470P/2KV
PCD530 470P/2KV
PCD531 470P/2KV
PCD532 470P/2KV
PCD533 470P/2KV
PCD534 470P/2KV
PCD535 470P/2KV
PCD536 470P/2KV
PCD537 470P/2KV
PCD538 470P/2KV
PCD539 470P/2KV
PCD540 470P/2KV
PCD541 470P/2KV
PCD542 470P/2KV
PCD543 470P/2KV
PCD544 470P/2KV
PCD545 470P/2KV
PCD546 470P/2KV
PCD547 470P/2KV
PCD548 470P/2KV
PCD549 470P/2KV
PCD550 470P/2KV
PCD551 470P/2KV
PCD552 470P/2KV
PCD553 470P/2KV
PCD554 470P/2KV
PCD555 470P/2KV
PCD556 470P/2KV
PCD557 470P/2KV
PCD558 470P/2KV
PCD559 470P/2KV
PCD560 470P/2KV
PCD561 470P/2KV
PCD562 470P/2KV
PCD563 470P/2KV
PCD564 470P/2KV
PCD565 470P/2KV
PCD566 470P/2KV
PCD567 470P/2KV
PCD568 470P/2KV
PCD569 470P/2KV
PCD570 470P/2KV
PCD571 470P/2KV
PCD572 470P/2KV
PCD573 470P/2KV
PCD574 470P/2KV
PCD575 470P/2KV
PCD576 470P/2KV
PCD577 470P/2KV
PCD578 470P/2KV
PCD579 470P/2KV
PCD580 470P/2KV
PCD581 470P/2KV
PCD582 470P/2KV
PCD583 470P/2KV
PCD584 470P/2KV
PCD585 470P/2KV
PCD586 470P/2KV
PCD587 470P/2KV
PCD588 470P/2KV
PCD589 470P/2KV
PCD590 470P/2KV
PCD591 470P/2KV
PCD592 470P/2KV
PCD593 470P/2KV
PCD594 470P/2KV
PCD595 470P/2KV
PCD596 470P/2KV
PCD597 470P/2KV
PCD598 470P/2KV
PCD599 470P/2KV
PCD600 470P/2KV
PCD601 470P/2KV
PCD602 470P/2KV
PCD603 470P/2KV
PCD604 470P/2KV
PCD605 470P/2KV
PCD606 470P/2KV
PCD607 470P/2KV
PCD608 470P/2KV
PCD609 470P/2KV
PCD610 470P/2KV
PCD611 470P/2KV
PCD612 470P/2KV
PCD613 470P/2KV
PCD614 470P/2KV
PCD615 470P/2KV
PCD616 470P/2KV
PCD617 470P/2KV
PCD618 470P/2KV
PCD619 470P/2KV
PCD620 470P/2KV
PCD621 470P/2KV
PCD622 470P/2KV
PCD623 470P/2KV
PCD624 470P/2KV
PCD625 470P/2KV
PCD626 470P/2KV
PCD627 470P/2KV
PCD628 470P/2KV
PCD629 470P/2KV
PCD630 470P/2KV
PCD631 470P/2KV
PCD632 470P/2KV
PCD633 470P/2KV
PCD634 470P/2KV
PCD635 470P/2KV
PCD636 470P/2KV
PCD637 470P/2KV
PCD638 470P/2KV
PCD639 470P/2KV
PCD640 470P/2KV
PCD641 470P/2KV
PCD642 470P/2KV
PCD643 470P/2KV
PCD644 470P/2KV
PCD645 470P/2KV
PCD646 470P/2KV
PCD647 470P/2KV
PCD648 470P/2KV
PCD649 470P/2KV
PCD650 470P/2KV
PCD651 470P/2KV
PCD652 470P/2KV
PCD653 470P/2KV
PCD654 470P/2KV
PCD655 470P/2KV
PCD656 470P/2KV
PCD657 470P/2KV
PCD658 470P/2KV
PCD659 470P/2KV
PCD660 470P/2KV
PCD661 470P/2KV
PCD662 470P/2KV
PCD663 470P/2KV
PCD664 470P/2KV
PCD665 470P/2KV
PCD666 470P/2KV
PCD667 470P/2KV
PCD668 470P/2KV
PCD669 470P/2KV
PCD670 470P/2KV
PCD671 470P/2KV
PCD672 470P/2KV
PCD673 470P/2KV
PCD674 470P/2KV
PCD675 470P/2KV
PCD676 470P/2KV
PCD677 470P/2KV
PCD678 470P/2KV
PCD679 470P/2KV
PCD680 470P/2KV
PCD681 470P/2KV
PCD682 470P/2KV
PCD683 470P/2KV
PCD684 470P/2KV
PCD685 470P/2KV
PCD686 470P/2KV
PCD687 470P/2KV
PCD688 470P/2KV
PCD689 470P/2KV
PCD690 470P/2KV
PCD691 470P/2KV
PCD692 470P/2KV
PCD693 470P/2KV
PCD694 470P/2KV
PCD695 470P/2KV
PCD696 470P/2KV
PCD697 470P/2KV
PCD698 470P/2KV
PCD699 470P/2KV
PCD700 470P/2KV
PCD701 470P/2KV
PCD702 470P/2KV
PCD703 470P/2KV
PCD704 470P/2KV
PCD705 470P/2KV
PCD706 470P/2KV
PCD707 470P/2KV
PCD708 470P/2KV
PCD709 470P/2KV
PCD710 470P/2KV
PCD711 470P/2KV
PCD712 470P/2KV
PCD713 470P/2KV
PCD714 470P/2KV
PCD715 470P/2KV
PCD716 470P/2KV
PCD717 470P/2KV
PCD718 470P/2KV
PCD719 470P/2KV
PCD720 470P/2KV
PCD721 470P/2KV
PCD722 470P/2KV
PCD723 470P/2KV
PCD724 470P/2KV
PCD725 470P/2KV
PCD726 470P/2KV
PCD727 470P/2KV
PCD728 470P/2KV
PCD729 470P/2KV
PCD730 470P/2KV
PCD731 470P/2KV
PCD732 470P/2KV
PCD733 470P/2KV
PCD734 470P/2KV
PCD735 470P/2KV
PCD736 470P/2KV
PCD737 470P/2KV
PCD738 470P/2KV
PCD739 470P/2KV
PCD740 470P/2KV
PCD741 470P/2KV
PCD742 470P/2KV
PCD743 470P/2KV
PCD744 470P/2KV
PCD745 470P/2KV
PCD746 470P/2KV
PCD747 470P/2KV
PCD748 470P/2KV
PCD749 470P/2KV
PCD750 470P/2KV
PCD751 470P/2KV
PCD752 470P/2KV
PCD753 470P/2KV
PCD754 470P/2KV
PCD755 470P/2KV
PCD756 470P/2KV
PCD757 470P/2KV
PCD758 470P/2KV
PCD759 470P/2KV
PCD760 470P/2KV
PCD761 470P/2KV
PCD762 470P/2KV
PCD763 470P/2KV
PCD764 470P/2KV
PCD765 470P/2KV
PCD766 470P/2KV
PCD767 470P/2KV
PCD768 470P/2KV
PCD769 470P/2KV
PCD770 470P/2KV
PCD771 470P/2KV
PCD772 470P/2KV
PCD773 470P/2KV
PCD774 470P/2KV
PCD775 470P/2KV
PCD776 470P/2KV
PCD777 470P/2KV
PCD778 470P/2KV
PCD779 470P/2KV
PCD780 470P/2KV
PCD781 470P/2KV
PCD782 470P/2KV
PCD783 470P/2KV
PCD784 470P/2KV
PCD785 470P/2KV
PCD786 470P/2KV
PCD787 470P/2KV
PCD788 470P/2KV
PCD789 470P/2KV
PCD790 470P/2KV
PCD791 470P/2KV
PCD792 470P/2KV
PCD793 470P/2KV
PCD794 470P/2KV
PCD795 470P/2KV
PCD796 470P/2KV
PCD797 470P/2KV
PCD798 470P/2KV
PCD799 470P/2KV
PCD800 470P/2KV
PCD801 470P/2KV
PCD802 470P/2KV
PCD803 470P/2KV
PCD804 470P/2KV
PCD805 470P/2KV
PCD806 470P/2KV
PCD807 470P/2KV
PCD808 470P/2KV
PCD809 470P/2KV
PCD810 470P/2KV
PCD811 470P/2KV
PCD812 470P/2KV
PCD813 470P/2KV
PCD814 470P/2KV
PCD815 470P/2KV
PCD816 470P/2KV
PCD817 470P/2KV
PCD818 470P/2KV
PCD819 470P/2KV
PCD820 470P/2KV
PCD821 470P/2KV
PCD822 470P/2KV
PCD823 470P/2KV
PCD824 470P/2KV
PCD825 470P/2KV
PCD826 470P/2KV
PCD827 470P/2KV
PCD828 470P/2KV
PCD829 470P/2KV
PCD830 470P/2KV
PCD831 470P/2KV
PCD832 470P/2KV
PCD833 470P/2KV
PCD834 470P/2KV
PCD835 470P/2KV
PCD836 470P/2KV
PCD837 470P/2KV
PCD838 470P/2KV
PCD839 470P/2KV
PCD840 470P/2KV
PCD841 470P/2KV
PCD842 470P/2KV
PCD843 470P/2KV
PCD844 470P/2KV
PCD845 470P/2KV
PCD846 470P/2KV
PCD847 470P/2KV
PCD848 470P/2KV
PCD849 470P/2KV
PCD850 470P/2KV
PCD851 470P/2KV
PCD852 470P/2KV
PCD853 470P/2KV
PCD854 470P/2KV
PCD855 470P/2KV
PCD856 470P/2KV
PCD857 470P/2KV
PCD858 470P/2KV
PCD859 470P/2KV
PCD860 470P/2KV
PCD861 470P/2KV
PCD862 470P/2KV
PCD863 470P/2KV
PCD864 470P/2KV
PCD865 470P/2KV
PCD866 470P/2KV
PCD867 470P/2KV
PCD868 470P/2KV
PCD869 470P/2KV
PCD870 470P/2KV
PCD871 470P/2KV
PCD872 470P/2KV
PCD873 470P/2KV
PCD874 470P/2KV
PCD875 470P/2KV
PCD876 470P/2KV
PCD877 470P/2KV
PCD878 470P/2KV
PCD879 470P/2KV
PCD880 470P/2KV
PCD881 470P/2KV
PCD882 470P/2KV
PCD883 470P/2KV
PCD884 470P/2KV
PCD885 470P/2KV
PCD886 470P/2KV
PCD887 470P/2KV
PCD888 470P/2KV
PCD889 470P/2KV
PCD890 470P/2KV
PCD891 470P/2KV
PCD892 470P/2KV
PCD893 470P/2KV
PCD894 470P/2KV
PCD895 470P/2KV
PCD896 470P/2KV
PCD897 470P/2KV
PCD898 470P/2KV
PCD899 470P/2KV
PCD900 470P/2KV
PCD901 470P/2KV
PCD902 470P/2KV
PCD903 470P/2KV
PCD904 470P/2KV
PCD905 470P/2KV
PCD906 470P/2KV
PCD907 470P/2KV
PCD908 470P/2KV
PCD909 470P/2KV
PCD910 470P/2KV
PCD911 470P/2KV
PCD912 470P/2KV
PCD913 470P/2KV
PCD914 470P/2KV
PCD915 470P/2KV
PCD916 470P/2KV
PCD917 470P/2KV
PCD918 470P/2KV
PCD919 470P/2KV
PCD920 470P/2KV
PCD921 470P/2KV
PCD922 470P/2KV
PCD923 470P/2KV
PCD924 470P/2KV
PCD925 470P/2KV
PCD926 470P/2KV
PCD927 470P/2KV
PCD928 470P/2KV
PCD929 470P/2KV
PCD930 470P/2KV
PCD931 470P/2KV
PCD932 470P/2KV
PCD933 470P/2KV
PCD934 470P/2KV
PCD935 470P/2KV
PCD936 470P/2KV
PCD937 470P/2KV
PCD938 470P/2KV
PCD939 470P/2KV
PCD940 470P/2KV
PCD941 470P/2KV
PCD942 470P/2KV
PCD943 470P/2KV
PCD944 470P/2KV
PCD945 470P/2KV
PCD946 470P/2KV
PCD947 470P/2KV
PCD948 470P/2KV
PCD949 470P/2KV
PCD950 470P/2KV
PCD951 470P/2KV
PCD952 470P/2KV
PCD953 470P/2KV
PCD954 470P/2KV
PCD955 470P/2KV
PCD956 470P/2KV
PCD957 470P/2KV
PCD958 470P/2KV
PCD959 470P/2KV
PCD960 470P/2KV
PCD961 470P/2KV
PCD962 470P/2KV
PCD963 470P/2KV
PCD964 470P/2KV
PCD965 470P/2KV
PCD966 470P/2KV
PCD967 470P/2KV
PCD968 470P/2KV
PCD969 470P/2KV
PCD970 470P/2KV
PCD971 470P/2KV
PCD972 470P/2KV
PCD973 470P/2KV
PCD974 470P/2KV
PCD975 470P/2KV
PCD976 470P/2KV
PCD977 470P/2KV
PCD978 470P/2KV
PCD979 470P/2KV
PCD980 470P/2KV
PCD981 470P/2KV
PCD982 470P/2KV
PCD983 470P/2KV
PCD984 470P/2KV
PCD985 470P/2KV
PCD986 470P/2KV
PCD987 470P/2KV
PCD988 470P/2KV
PCD989 470P/2KV
PCD990 470P/2KV
PCD991 470P/2KV
PCD992 470P/2KV
PCD993 470P/2KV
PCD994 470P/2KV
PCD995 470P/2KV
PCD996 470P/2KV
PCD997 470P/2KV
PCD998 470P/2KV
PCD999 470P/2KV
PCD1000 470P/2KV

12-2 Main-Micom

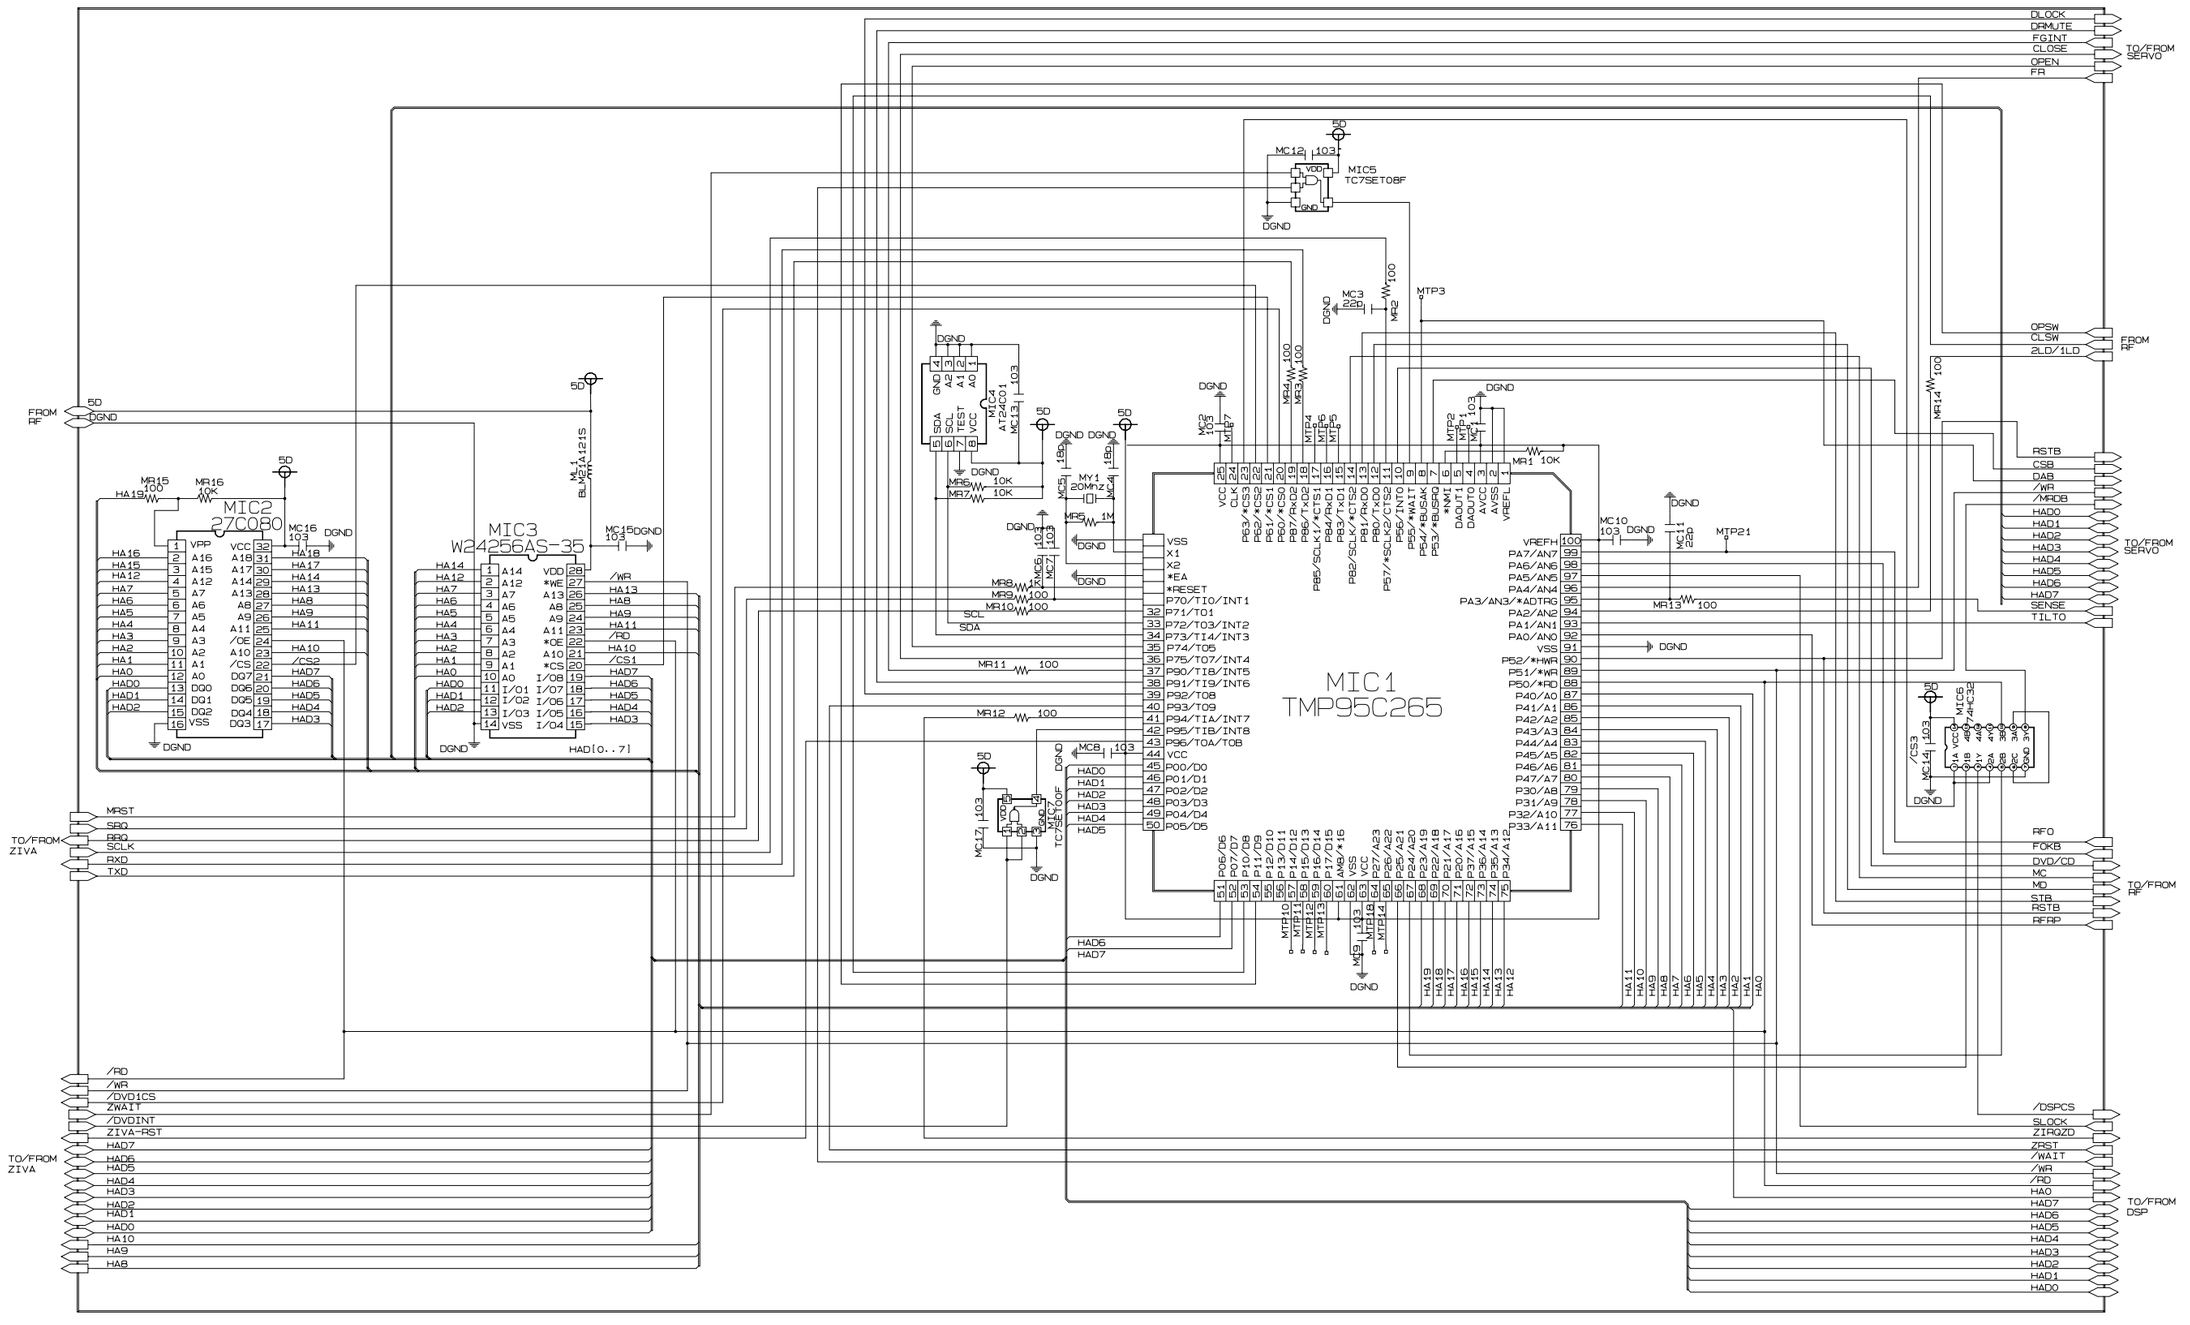

12-3 Servo

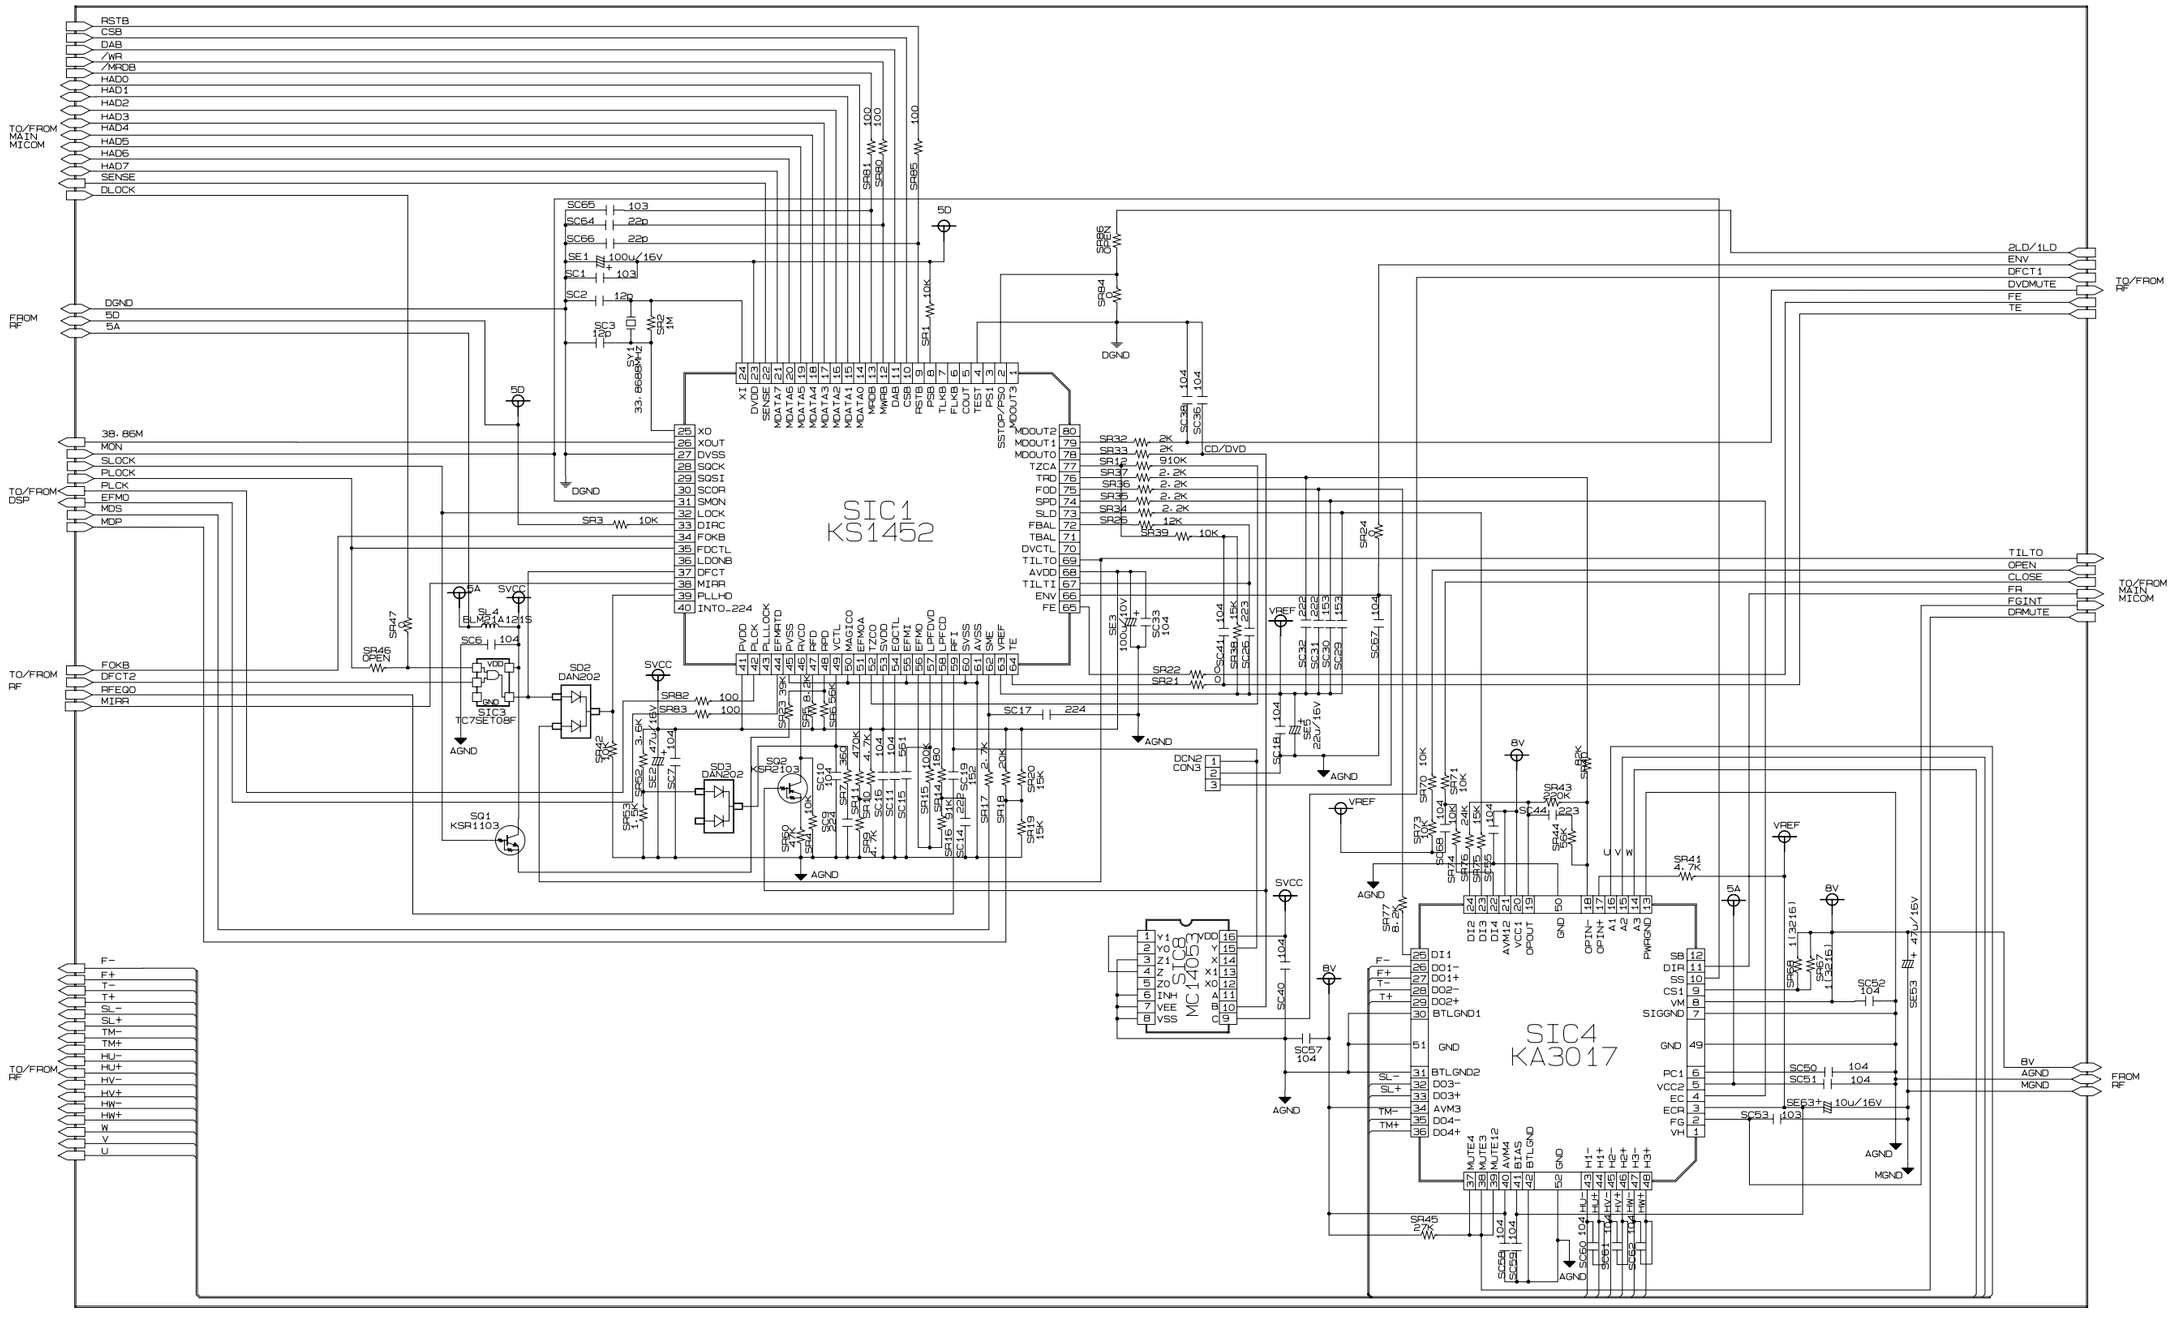
SIC1
KS1452
SIC3
TC7SET08F
SIC4
KA3017
SIC8
MC14053
SQ1
KSR1103
SQ2
KSR2103
SD2
DAN202
SD3
DAN202
RSTB
CSB
DAB
/WR
/MRDB
HAD0
HAD1
HAD2
HAD3
HAD4
HAD5
HAD6
HAD7
SENSE
DLOCK
TO/FROM MAIN MICOM
FROM RF
TO/FROM DSP
TO/FROM RF
TO/FROM MAIN MICOM
FOKB
DFCT2
RFEQO
MIRR
F−
F+
T−
T+
SL−
SL+
TM−
TM+
HU−
HU+
HV−
HV+
HW−
HW+
W
V
U
2LD/1LD
ENV
DFCT1
DVDMUTE
FE
TE
TILTO
OPEN
CLOSE
FR
FGINT
DRMUTE
CD/DVD
38.86M
MON
SLOCK
PLOCK
PLCK
EFMO
MDS
MDP
DGND
5D
5A
8V
SVCC
AGND
VREF
MGND

12-4 Video

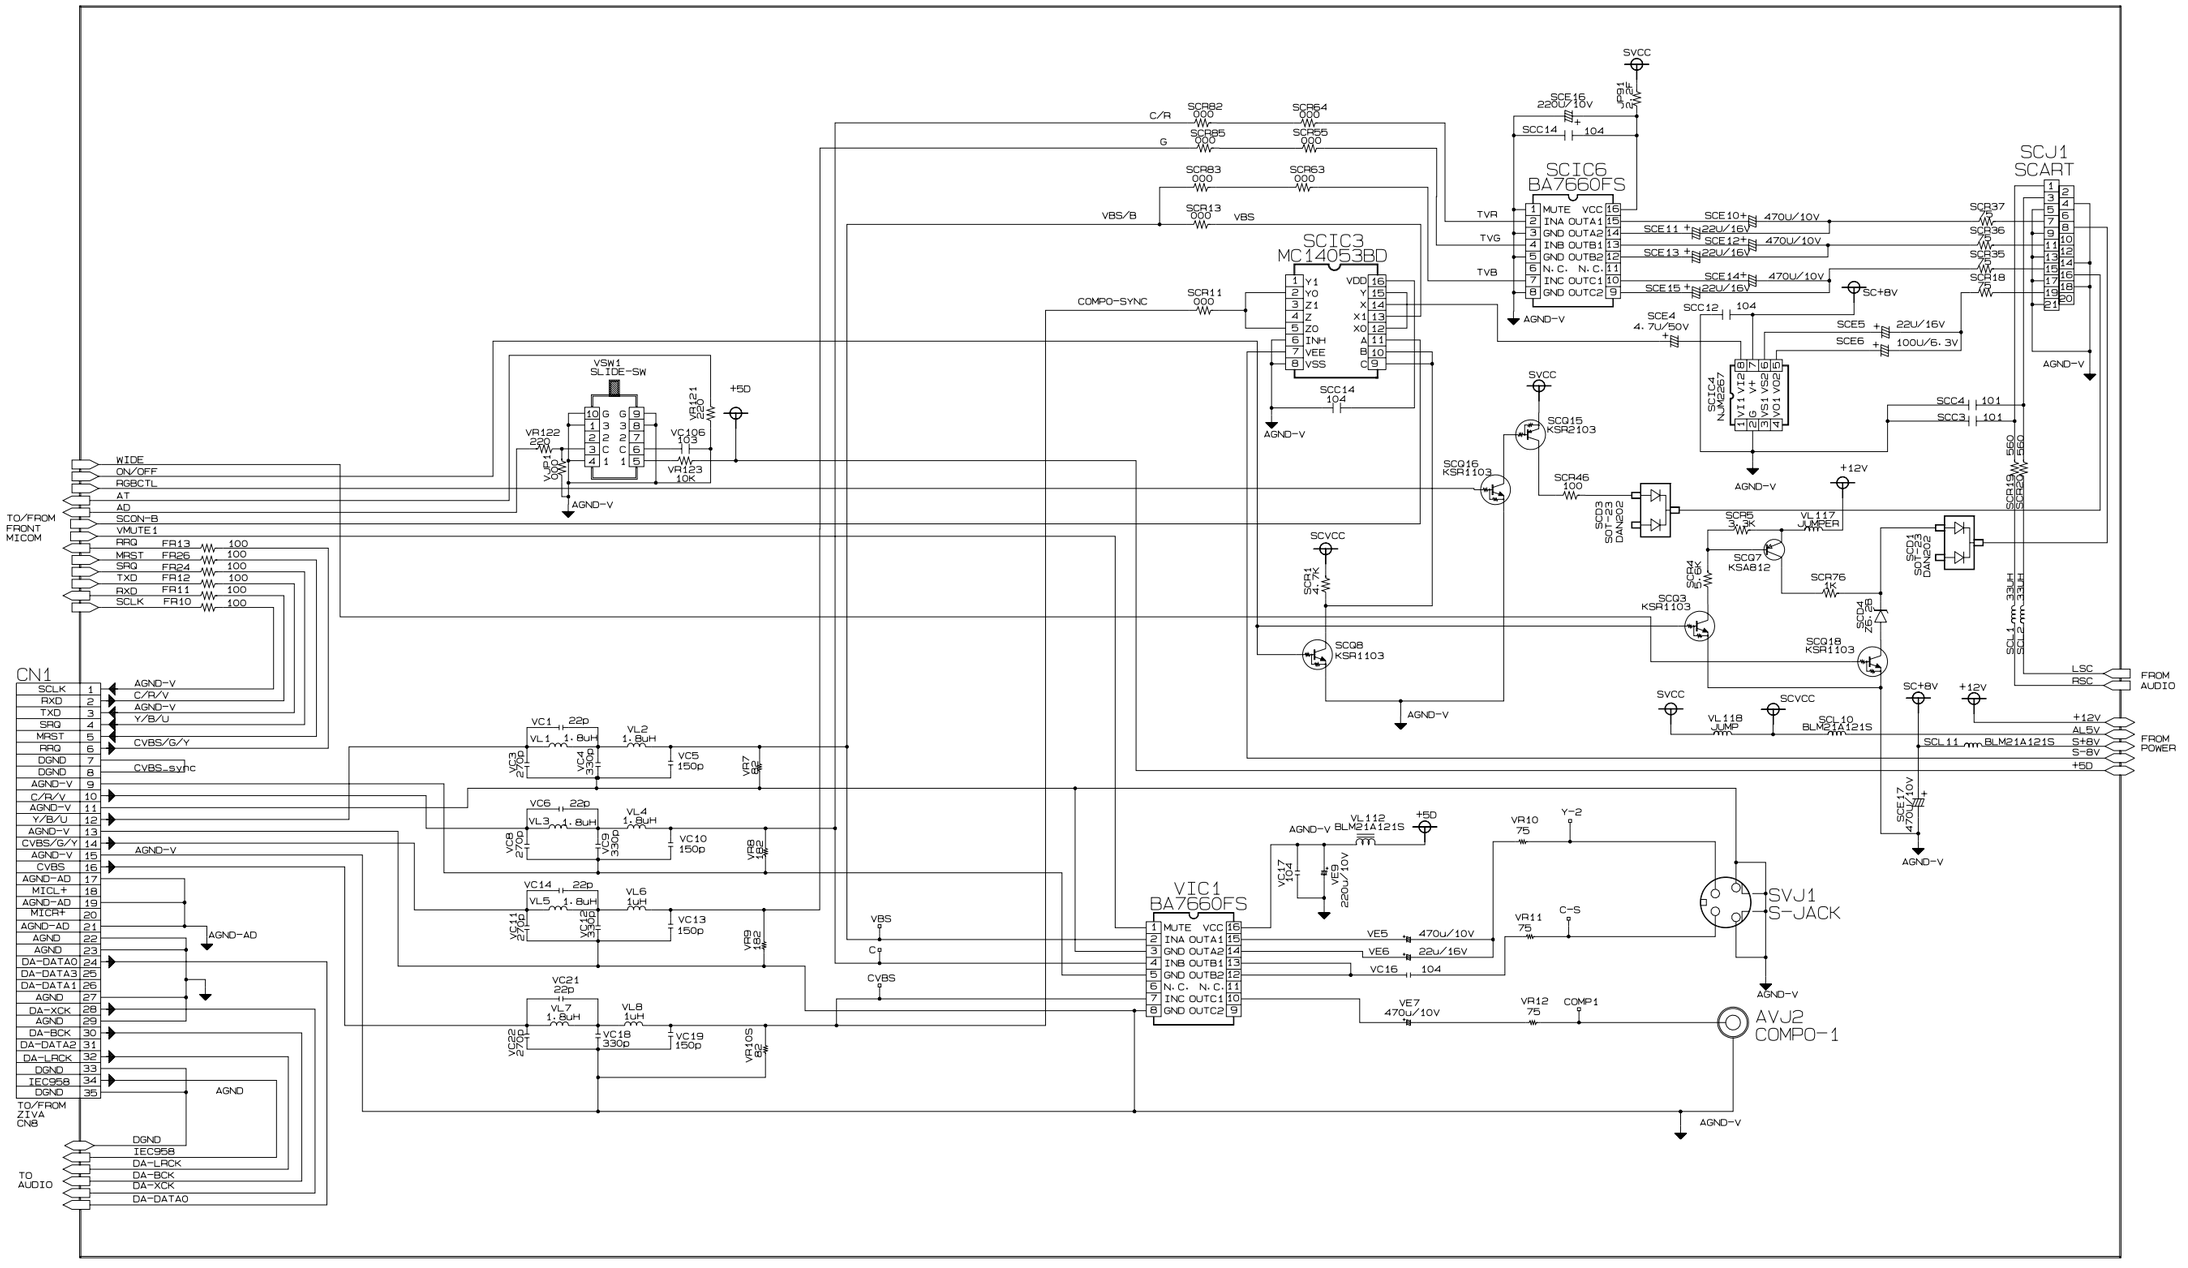
SCIC6
BA7660FS
SCIC3
MC14053BD
VIC1
BA7660FS
SCJ1
SCART
SVJ1
S-JACK
AVJ2
COMPO-1
CN1
TO/FROM
FRONT
MICOM
TO/FROM
ZIVA
CNB
TO
AUDIO
FROM
AUDIO
FROM
POWER
AGND-V
SVCC
SCVCC
+5D
+12V
SC+8V
AGND-AD
AGND
DGND
WIDE
ON/OFF
RGBCTL
AT
AD
SCON-B
VMUTE1
RRQ
MRST
SRQ
TXD
RXD
SCLK
CVBS/G/Y
CVBS_sync
C/R/V
Y/B/U
CVBS
MICL+
MICR+
IEC958
DA-LRCK
DA-BCK
DA-XCK
DA-DATA0
TVR
TVG
TVB
VBS
C
CVBS
COMPO-SYNC
LSC
RSC
AL5V
S+8V
S-8V
C-S
COMP1

12-5 Audio

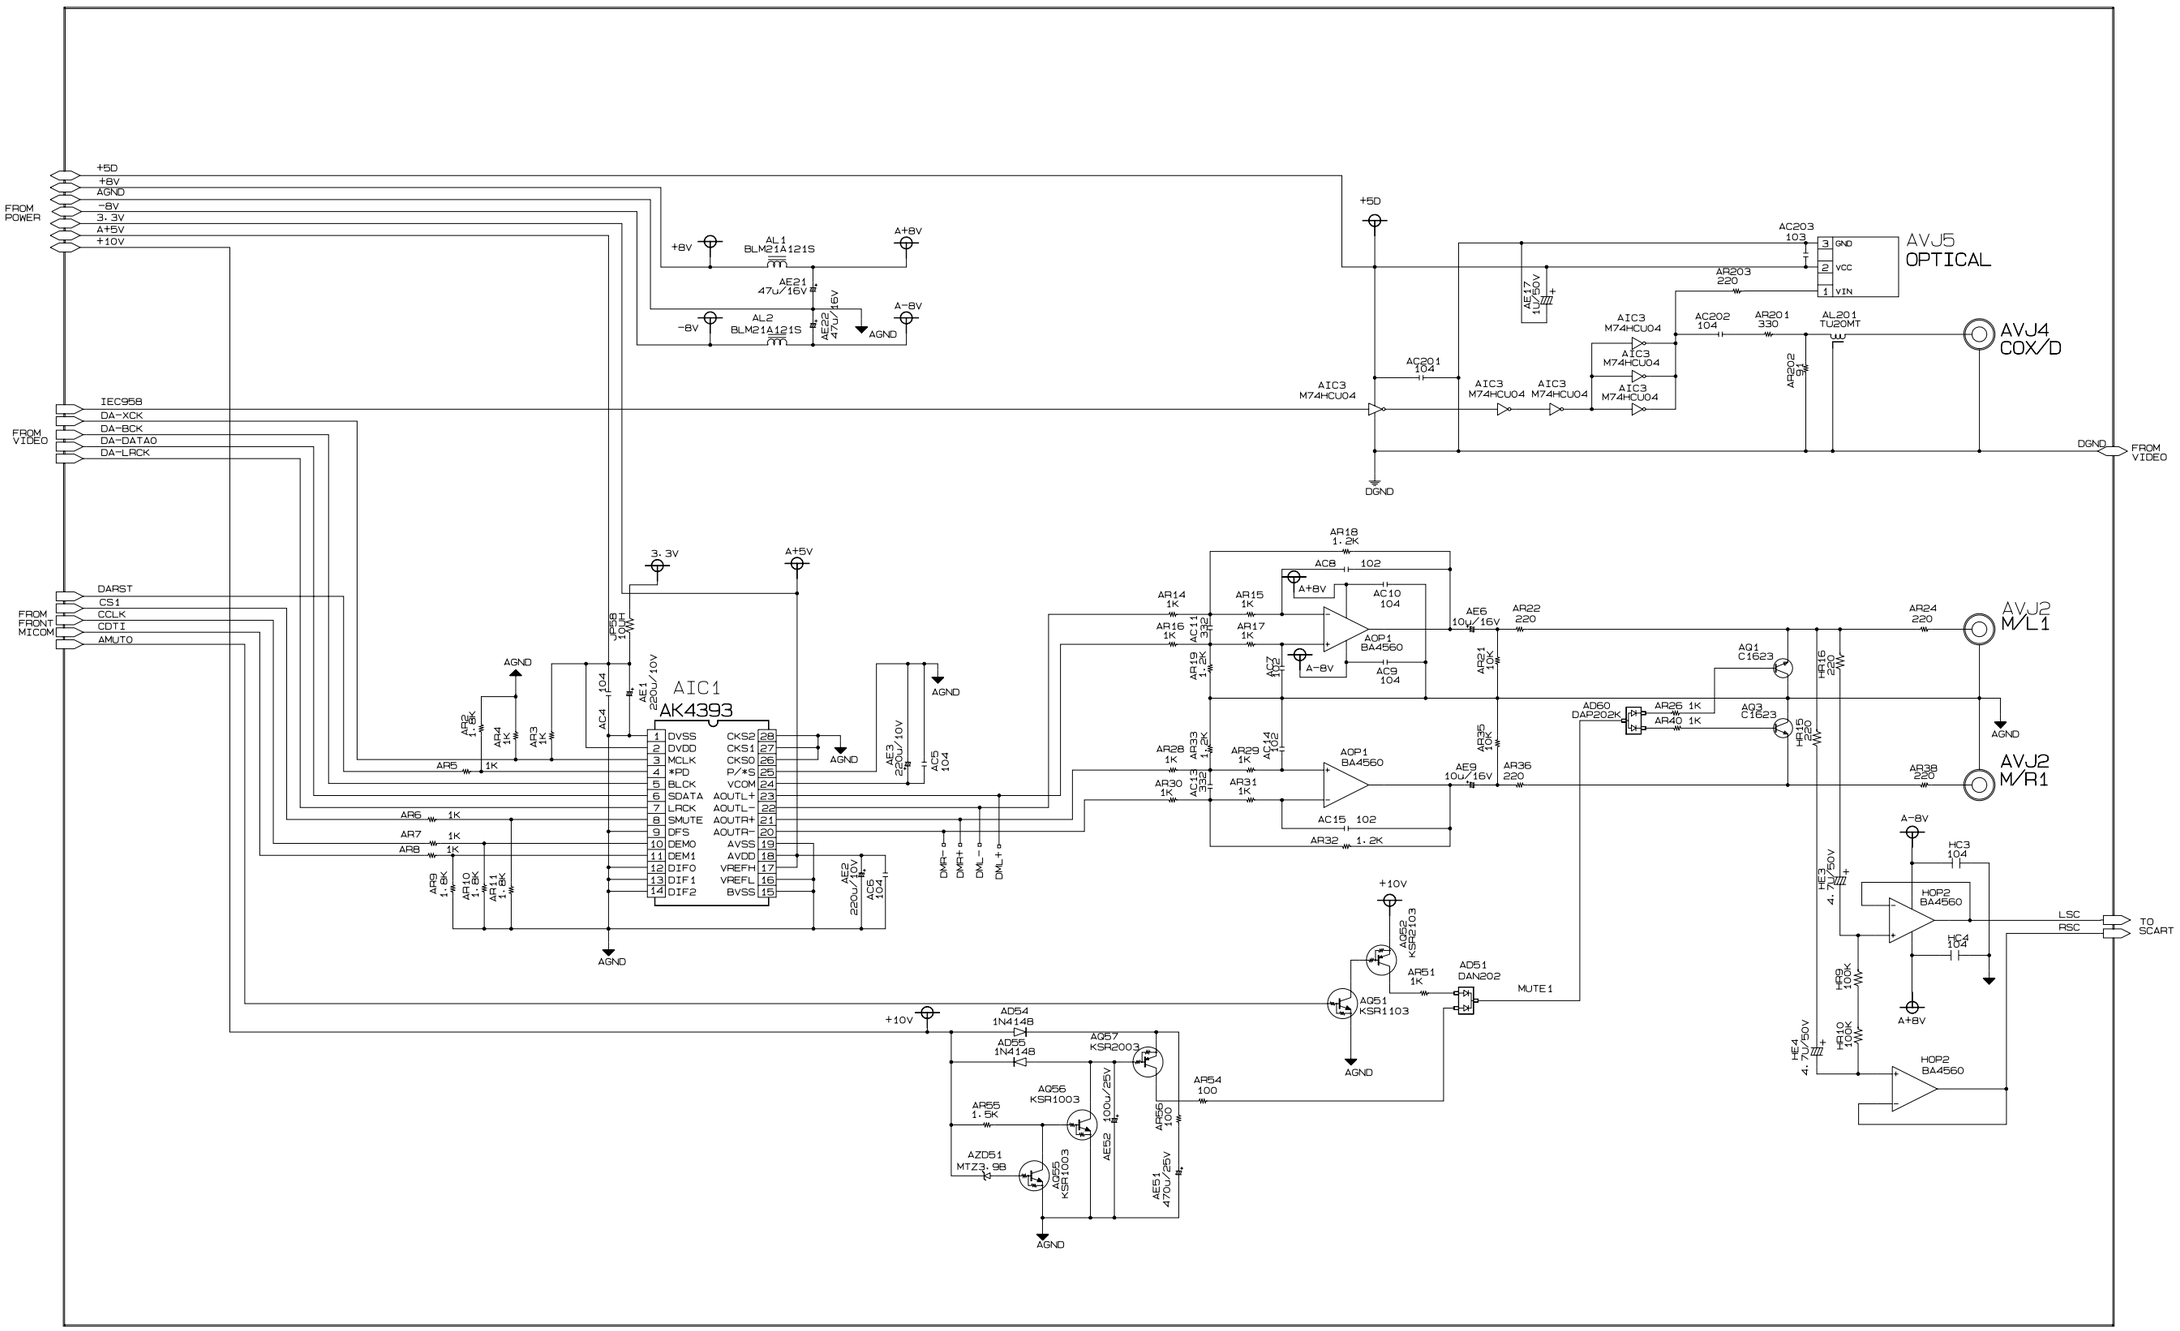
FROM POWER
+5D
+8V
AGND
-8V
3.3V
A+5V
+10V
AL1 BLM21A121S
AL2 BLM21A121S
AE21 47u/16V
AE22 47u/16V
A+8V
A-8V
AGND
FROM VIDEO
IEC958
DA-XCK
DA-BCK
DA-DATA0
DA-LRCK
FROM FRONT MICOM
DARST
CS1
CCLK
CDTI
AMUTO
AIC1
AK4393
DVSS
DVDD
MCLK
*PD
BLCK
SDATA
LRCK
SMUTE
DFS
DEMO
DEM1
DIF0
DIF1
DIF2
CKS2
CKS1
CKS0
P/*S
VCOM
AOUTL+
AOUTL-
AOUTR+
AOUTR-
AVSS
AVDD
VREFH
VREFL
BVSS
AE1 220u/10V
AE2 220u/10V
AE3 220u/10V
AE4 100u/10V
AC4 104
AC5 104
AR1 10K
AR2 1.8K
AR3 1K
AR4 1K
AR5 1K
AR6 1K
AR7 1K
AR8 1K
AR9 1.8K
AR10 1.8K
AR11 1.8K
DMR-
DMR+
DML-
DML+
AIC3 M74HCU04
AC201 104
AE17 10u/16V
AC203 103
GND
VCC
VIN
AR203 220
AVJ5 OPTICAL
AC202 104
AR201 330
AL201 TU20MT
AVJ4 COX/D
AR202 51
DGND
AR18 1.2K
AC8 102
AC10 104
AR14 1K
AR15 1K
AR16 1K
AR17 1K
AC11 332
AC7 102
AOP1 BA4560
AC9 104
AE6 10u/16V
AR22 220
AR21 10K
AR19 1.2K
AQ1 C1623
AQ3 C1623
AD60 DAP202K
AR26 1K
AR40 1K
HR15 220
HR16 220
AR24 220
AVJ2 M/L1
AVJ2 M/R1
AR28 1K
AR29 1K
AR30 1K
AR31 1K
AC13 332
AC14 102
AOP1 BA4560
AR33 1.2K
AR35 10K
AE9 10u/16V
AR36 220
AR38 220
AC15 102
AR32 1.2K
HC3 104
HC4 104
HE3 4.7u/50V
HE4 4.7u/50V
HOP2 BA4560
HR9 100K
HR10 100K
LSC
RSC
TO SCART
AQ2 KSR2103
AR51 1K
AD51 DAN202
MUTE1
AQ1 KSR1103
AD54 1N4148
AD55 1N4148
AQ57 KSR2003
AR54 100
AQ56 KSR1003
AR55 1.5K
AR56 100
AE52 100u/25V
AE51 470u/25V
AZD51 MTZ3.9B
AQ55 KSR1003

12-6 RF

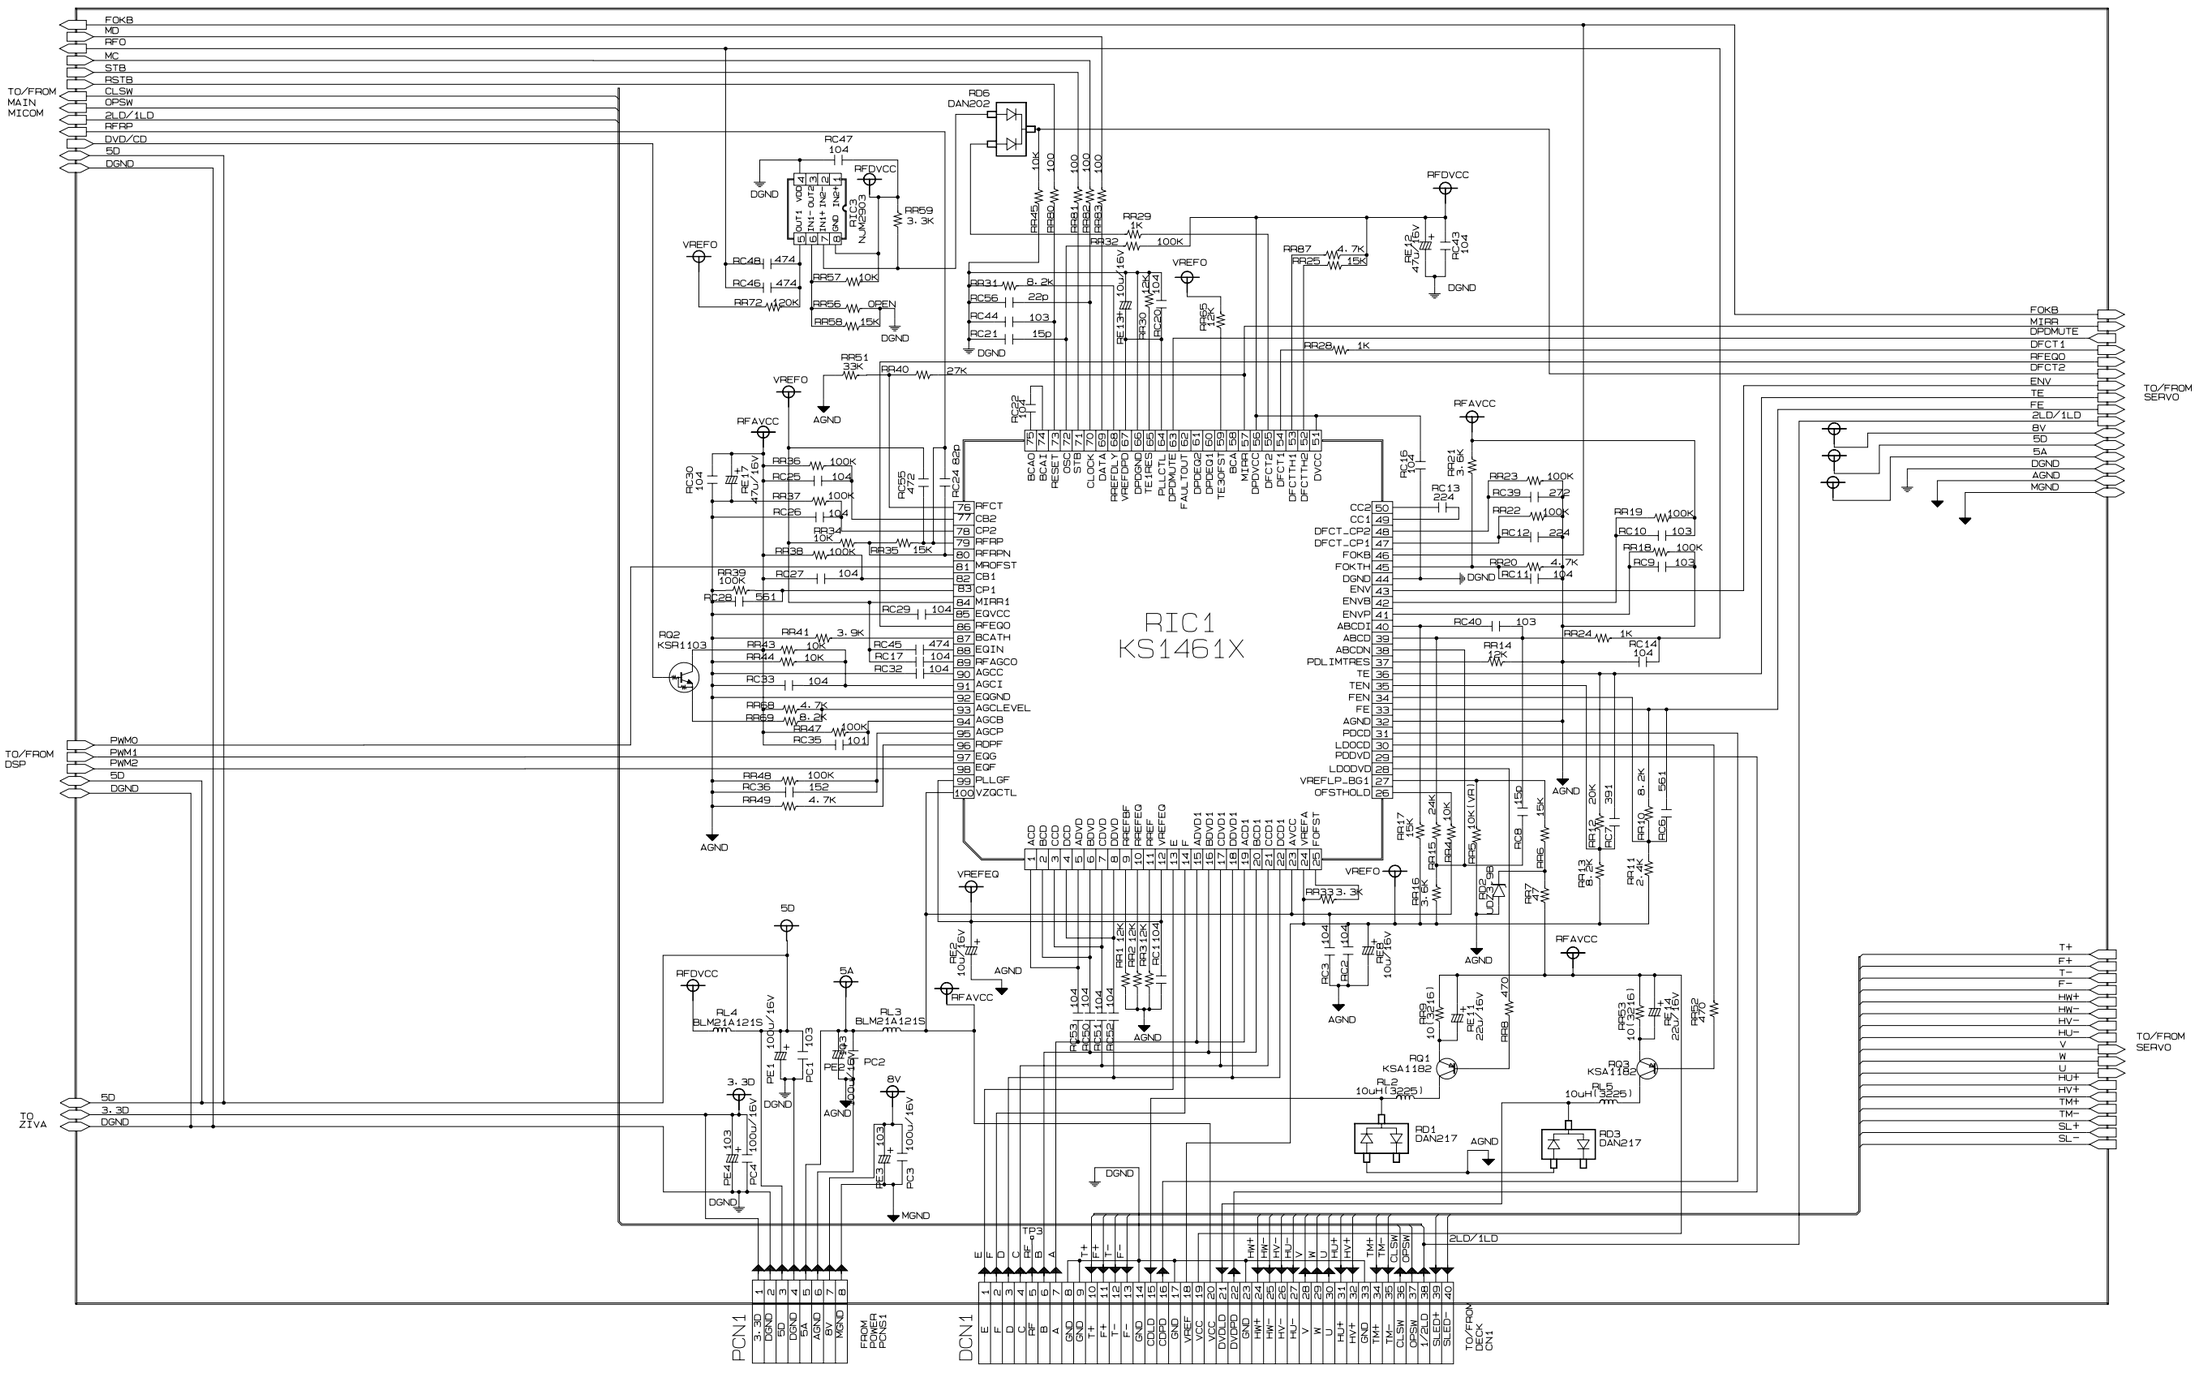
RIC1
KS1461X
TO/FROM MAIN MICOM
FOKB
MD
RFO
MC
STB
RSTB
CLSW
OPSW
2LD/1LD
RFRP
DVD/CD
5D
DGND
TO/FROM DSP
PWM0
PWM1
PWM2
TO ZIVA
TO/FROM SERVO
RD6 DAN202
RQ2 KSR1103
RQ1 KSA1182
RQ3 KSA1182
RD1 DAN217
RD3 DAN217
RFDVCC
RFAVCC
VREFO
VREFEQ
AGND
DGND
MGND
PCN1
DCN1
TO/FROM DECK CN1

12-7 ZiVA (A/V Decoder)

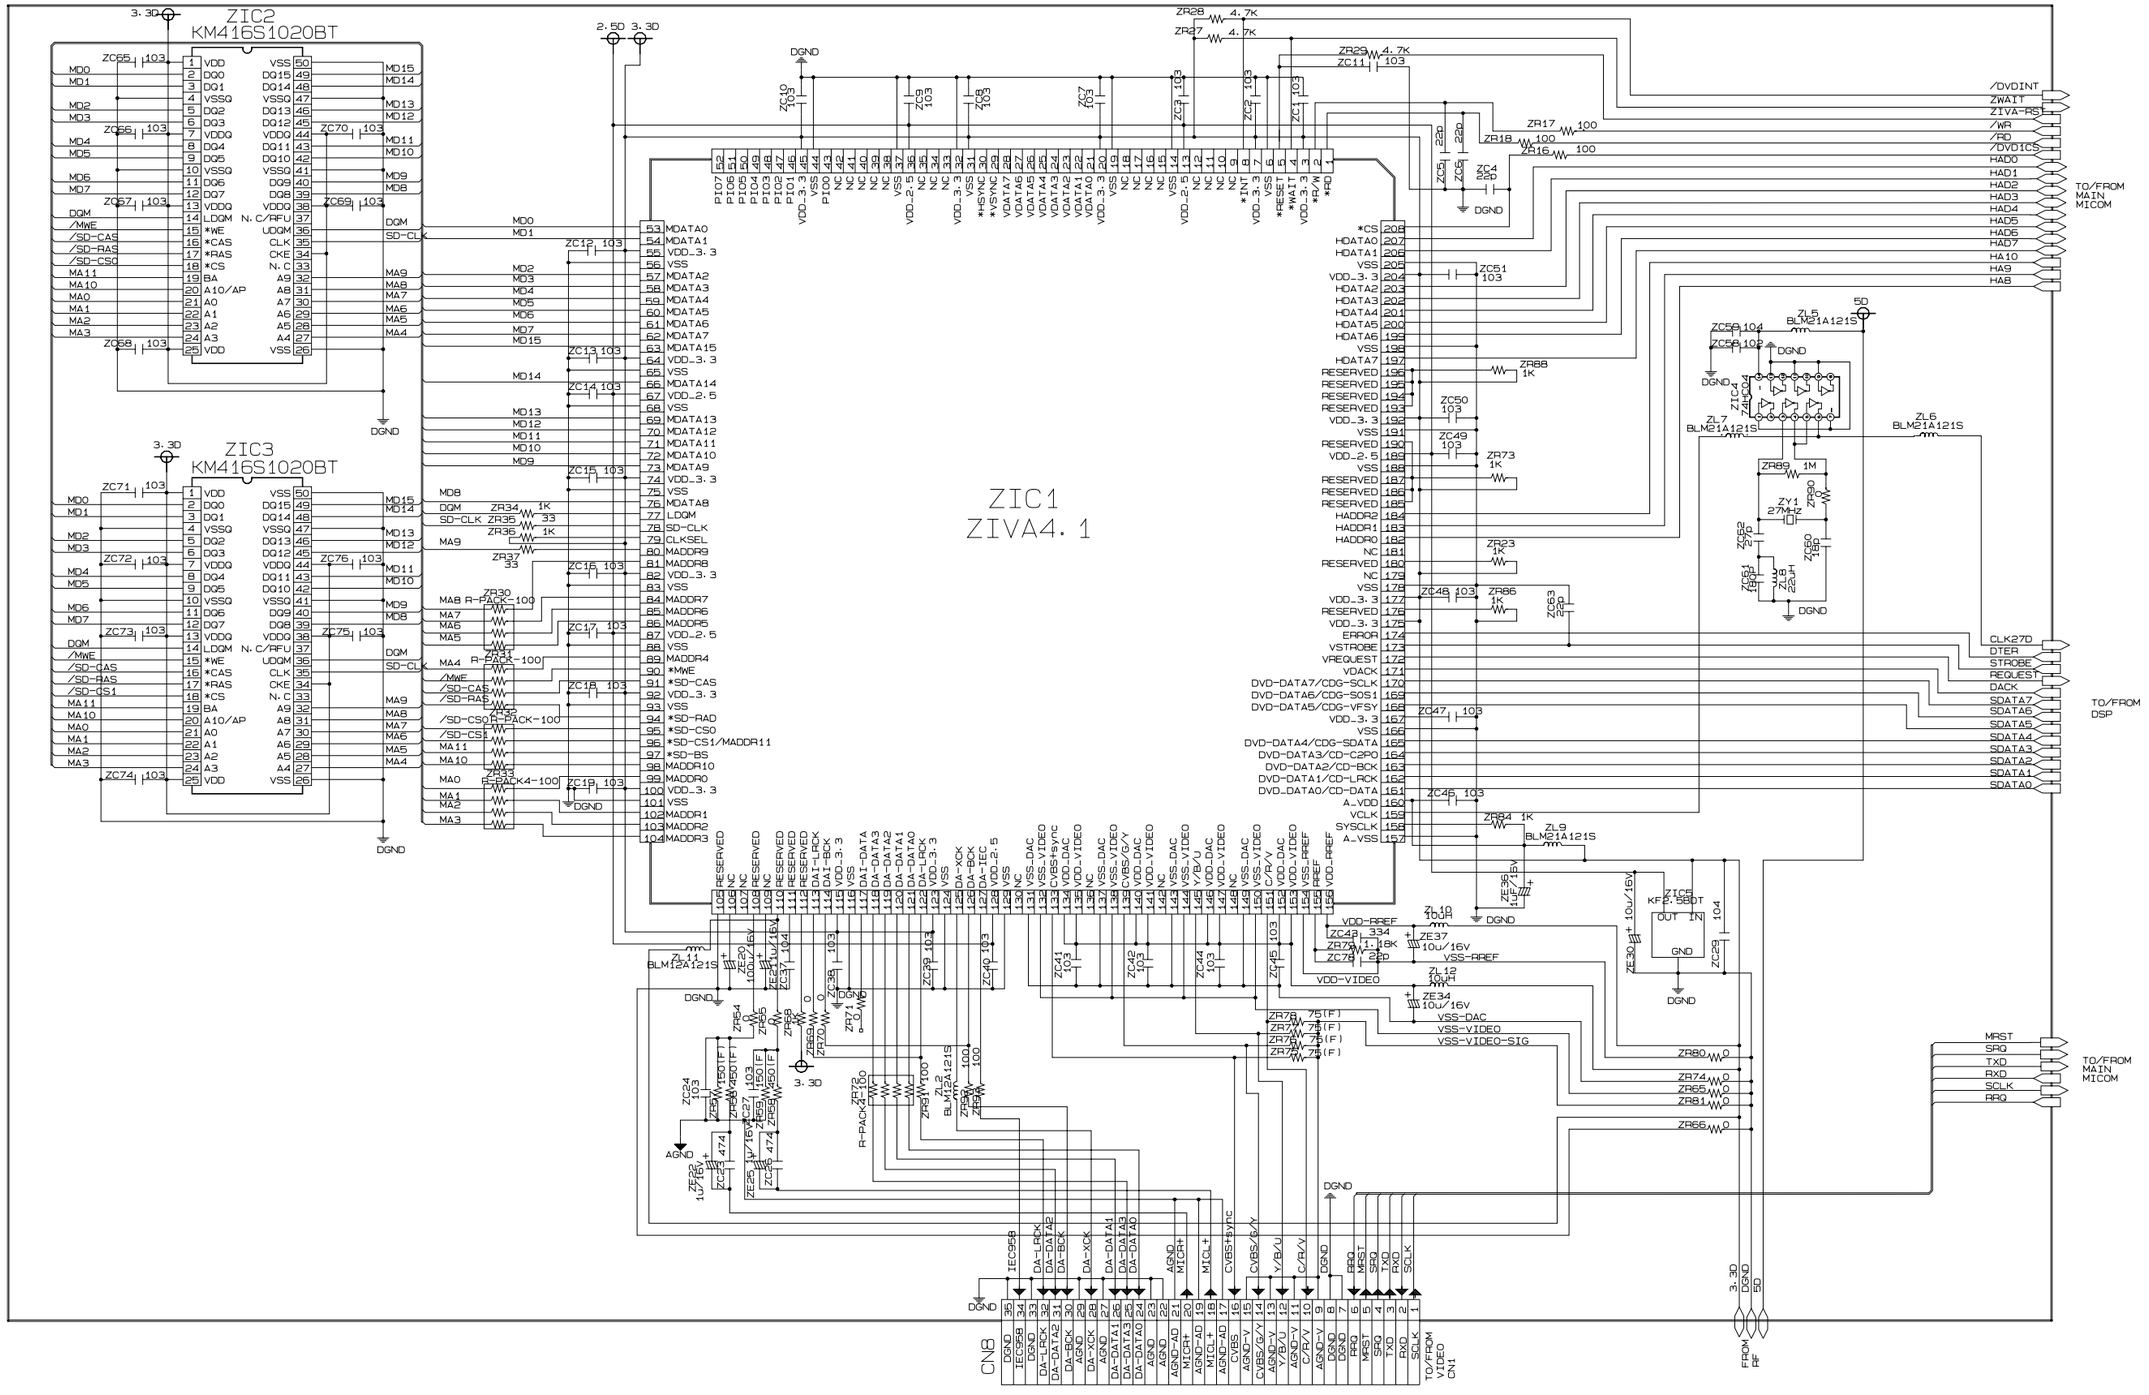

12-8 DSP

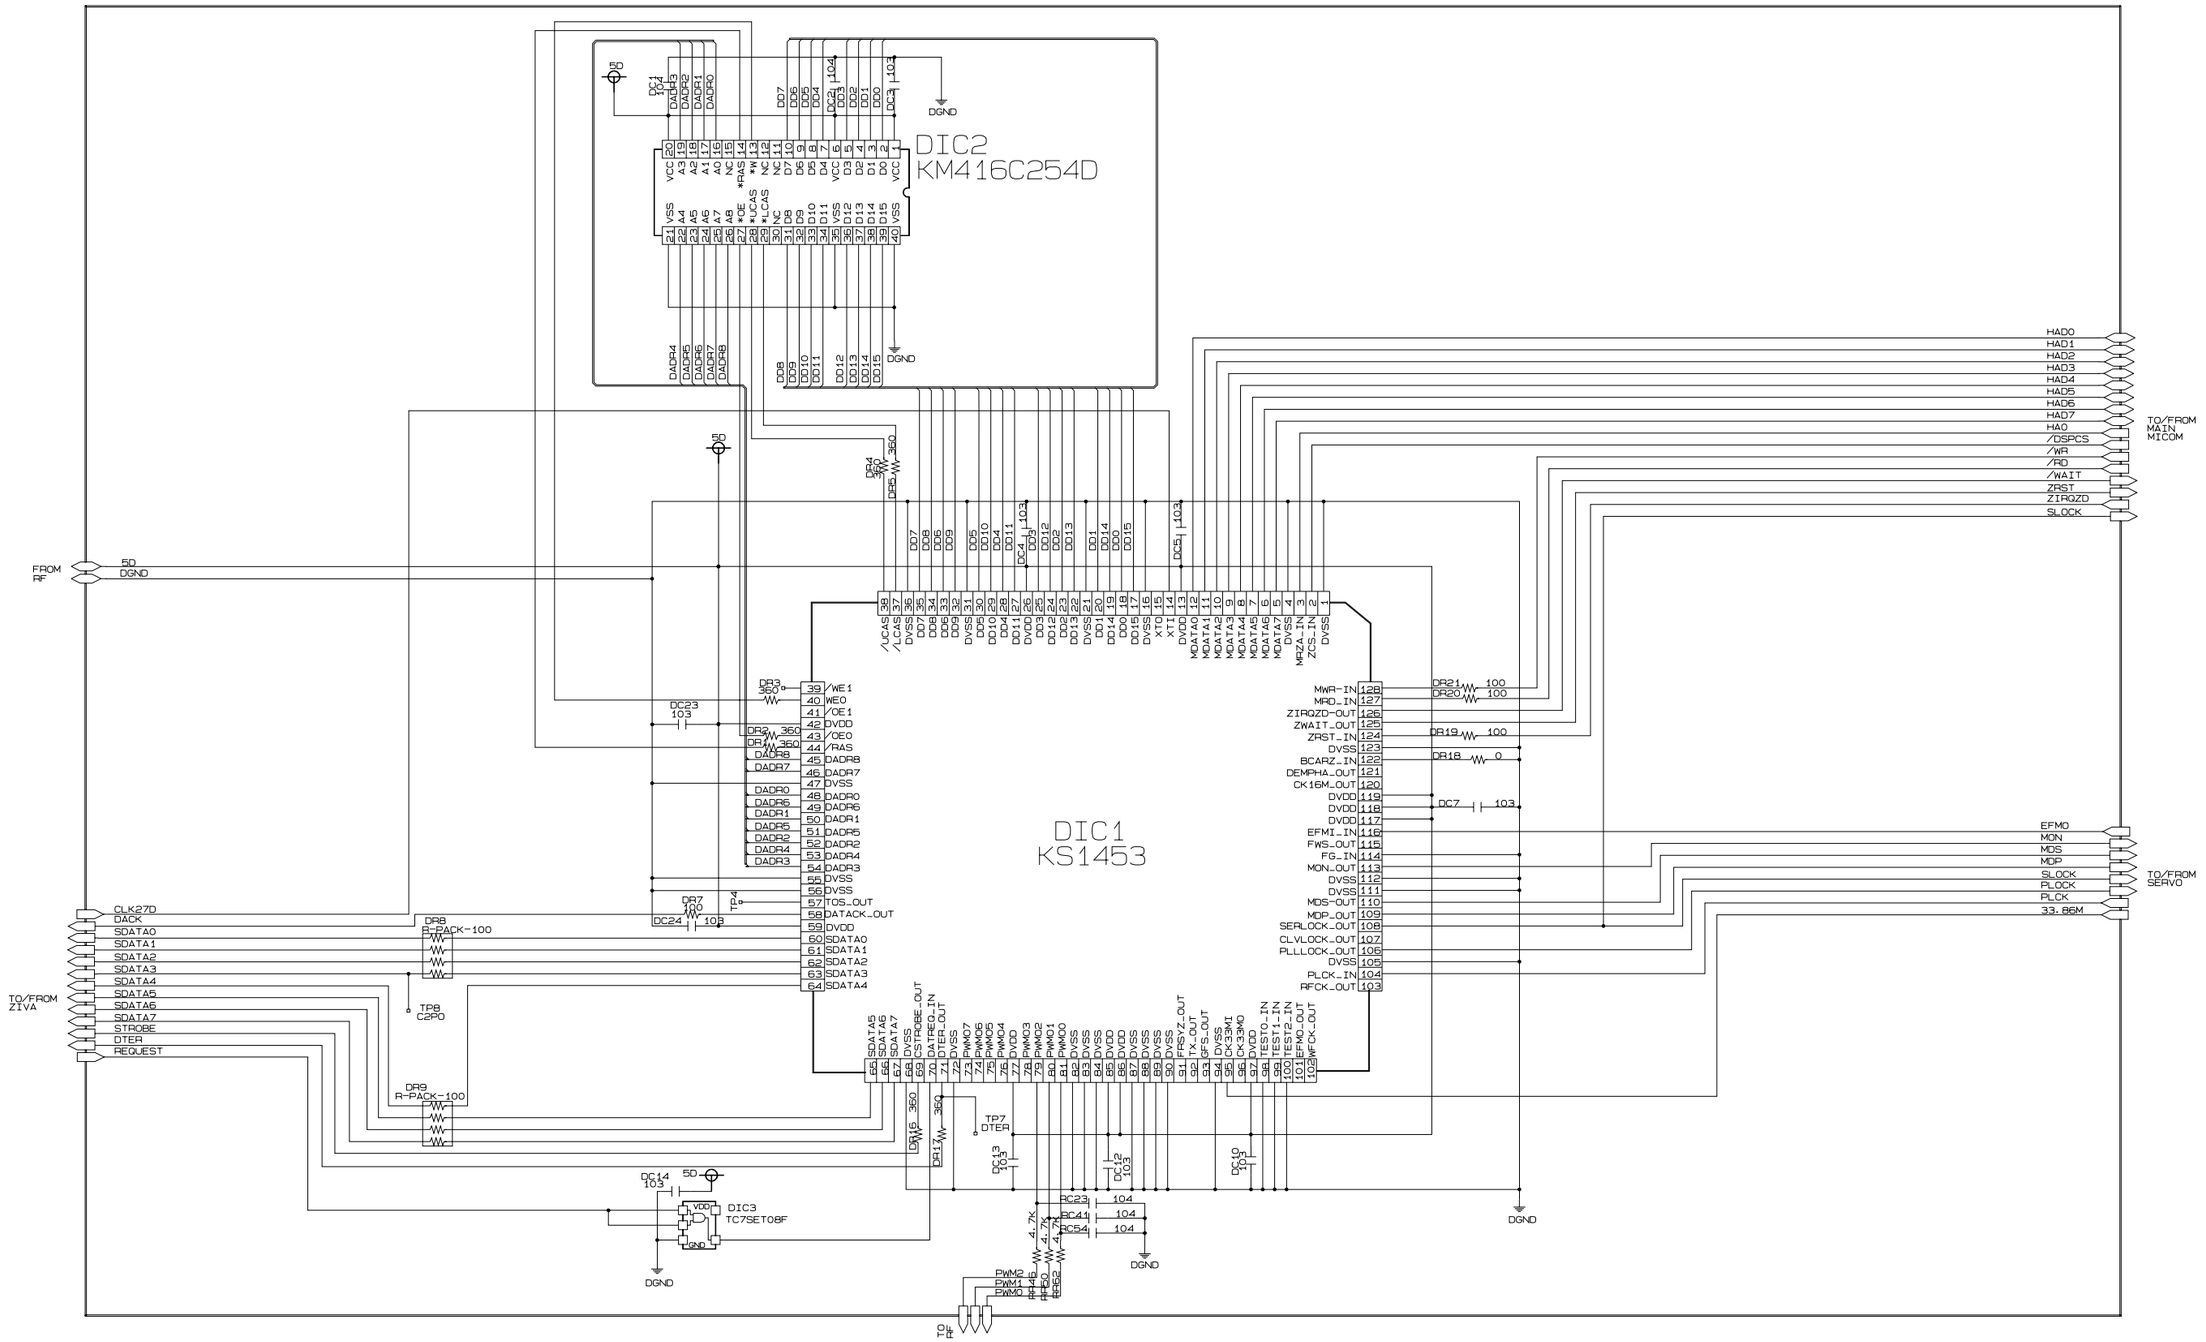
DIC2
KM416C254D
DIC1
KS1453
DIC3
TC7SET08F
TO/FROM MAIN MICOM
TO/FROM SERVO
TO/FROM ZIVA
FROM RF
TO RF
HAD0
HAD1
HAD2
HAD3
HAD4
HAD5
HAD6
HAD7
HA0
/DSPCS
/WR
/RD
/WAIT
ZRST
ZIRQZD
SLOCK
EFMO
MON
MDS
MDP
SLOCK
PLOCK
PLCK
33.86M
CLK27D
DACK
SDATA0
SDATA1
SDATA2
SDATA3
SDATA4
SDATA5
SDATA6
SDATA7
STROBE
DTER
REQUEST
DGND
5D

12-9 Front-Micom/VFD Display

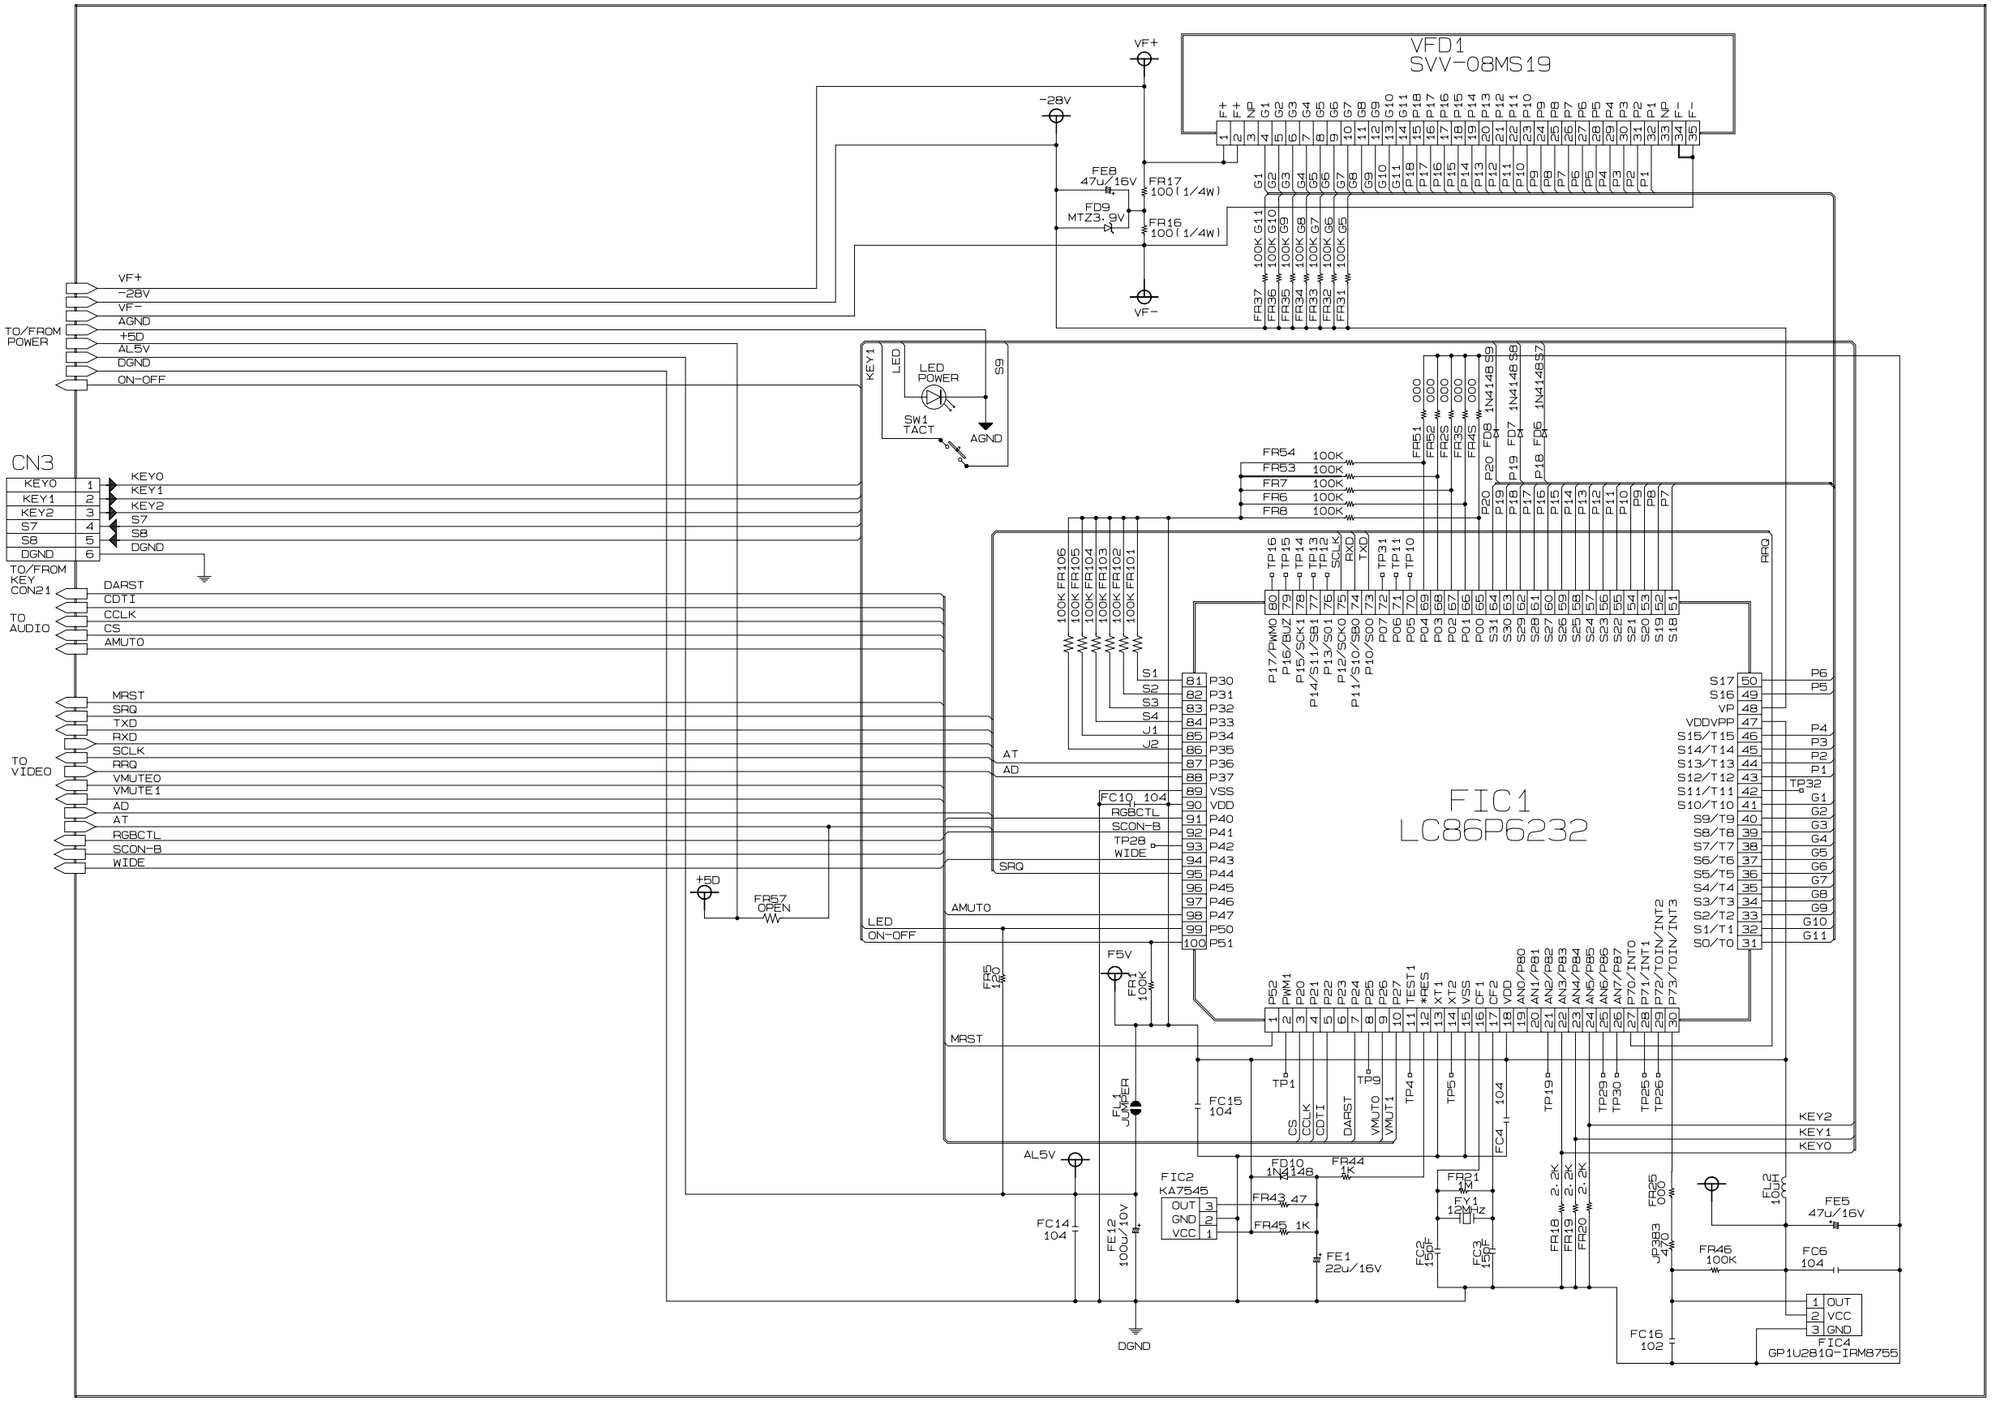

12-10 Key

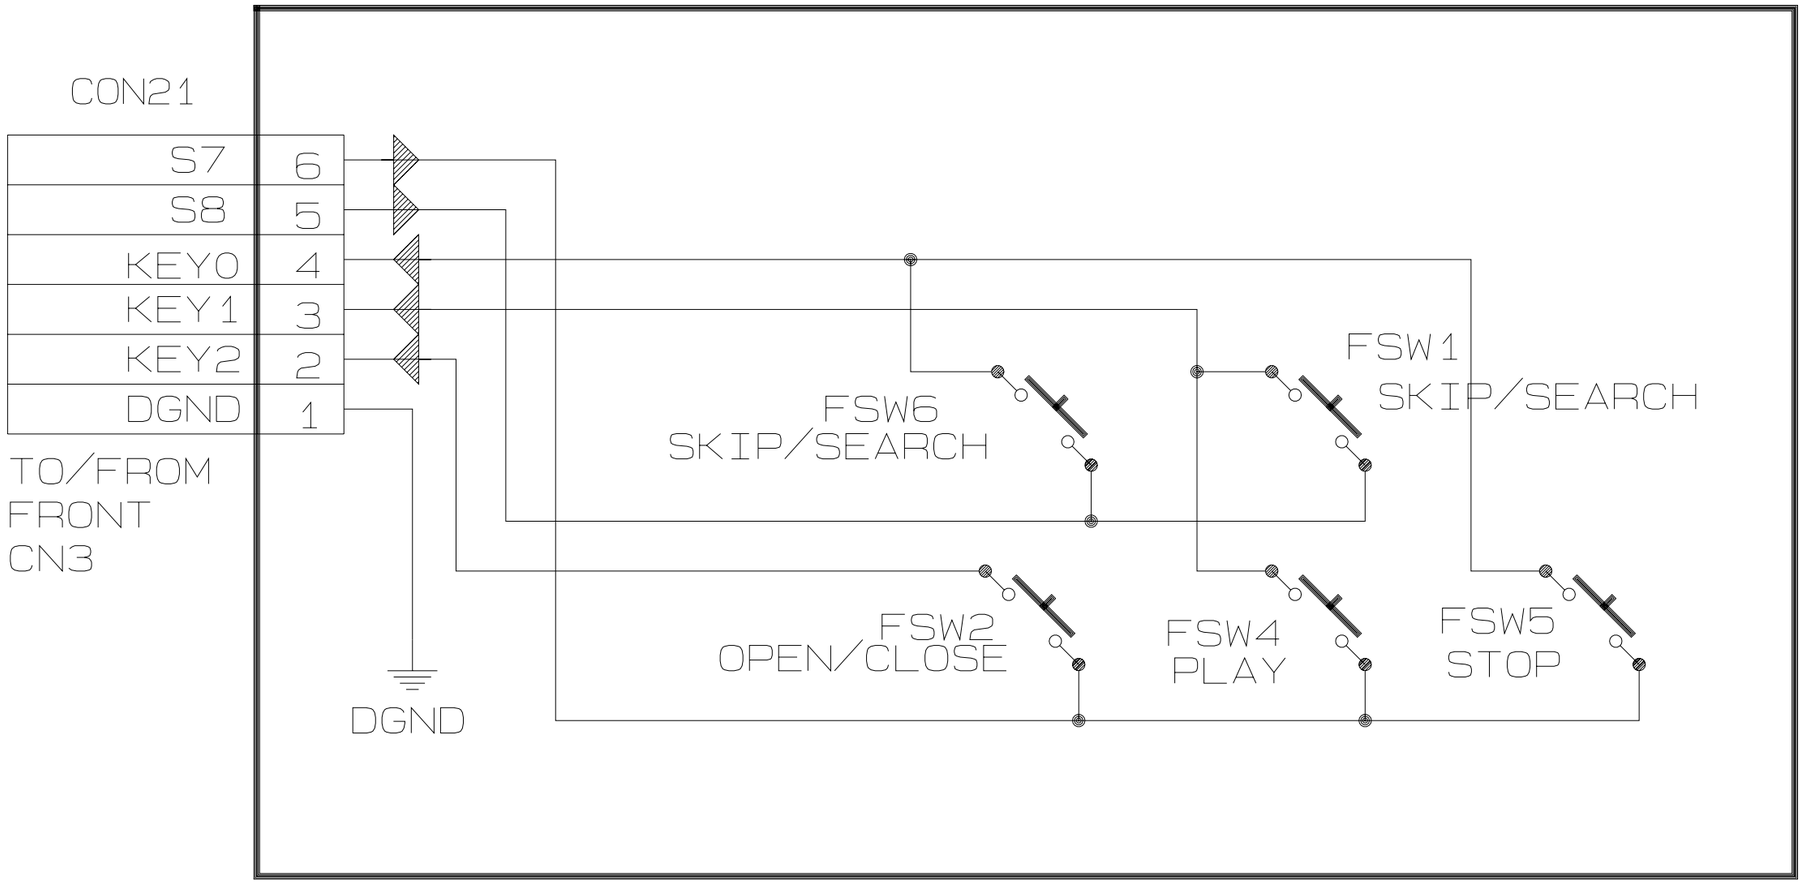
CON21
S7
6
S8
5
KEY0
4
KEY1
3
KEY2
2
DGND
1
TO/FROM
FRONT
CN3
FSW6
SKIP/SEARCH
FSW1
SKIP/SEARCH
FSW2
OPEN/CLOSE
FSW4
PLAY
FSW5
STOP
DGND

12-11 Deck

1 LD ; DVD-511

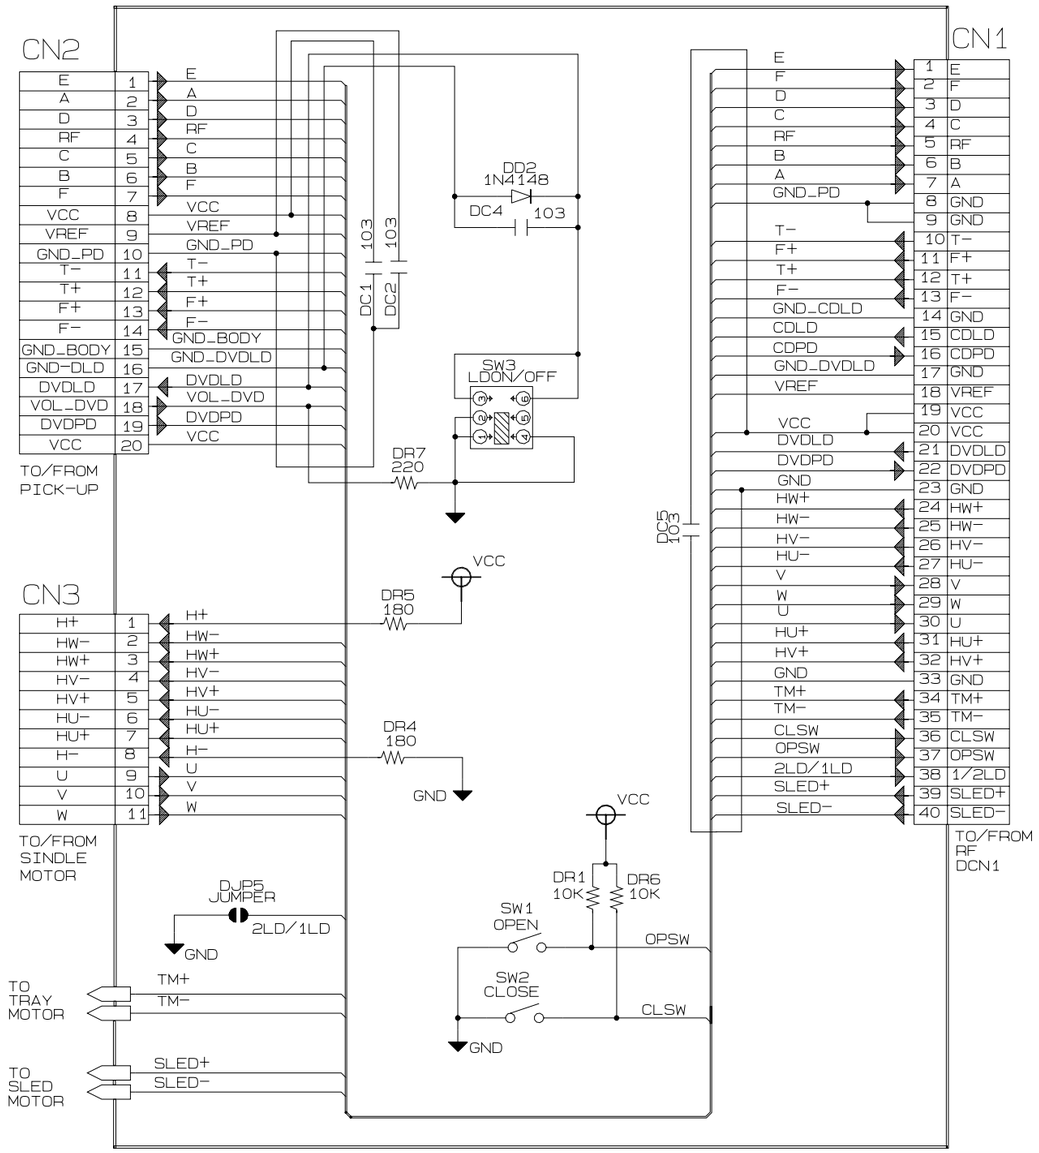

2 LD ; DVD-611/611B/615

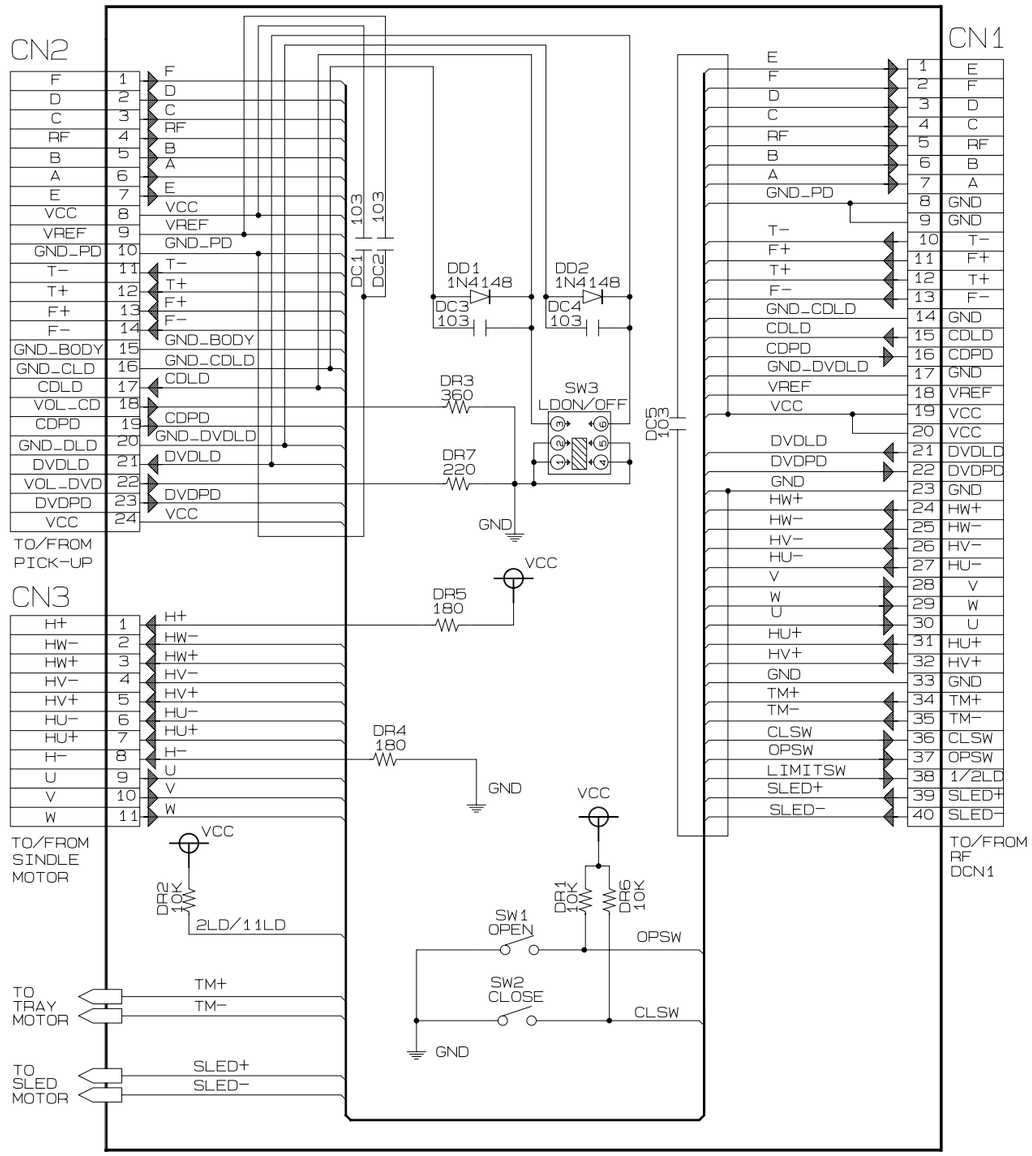

12-12 Remote Control

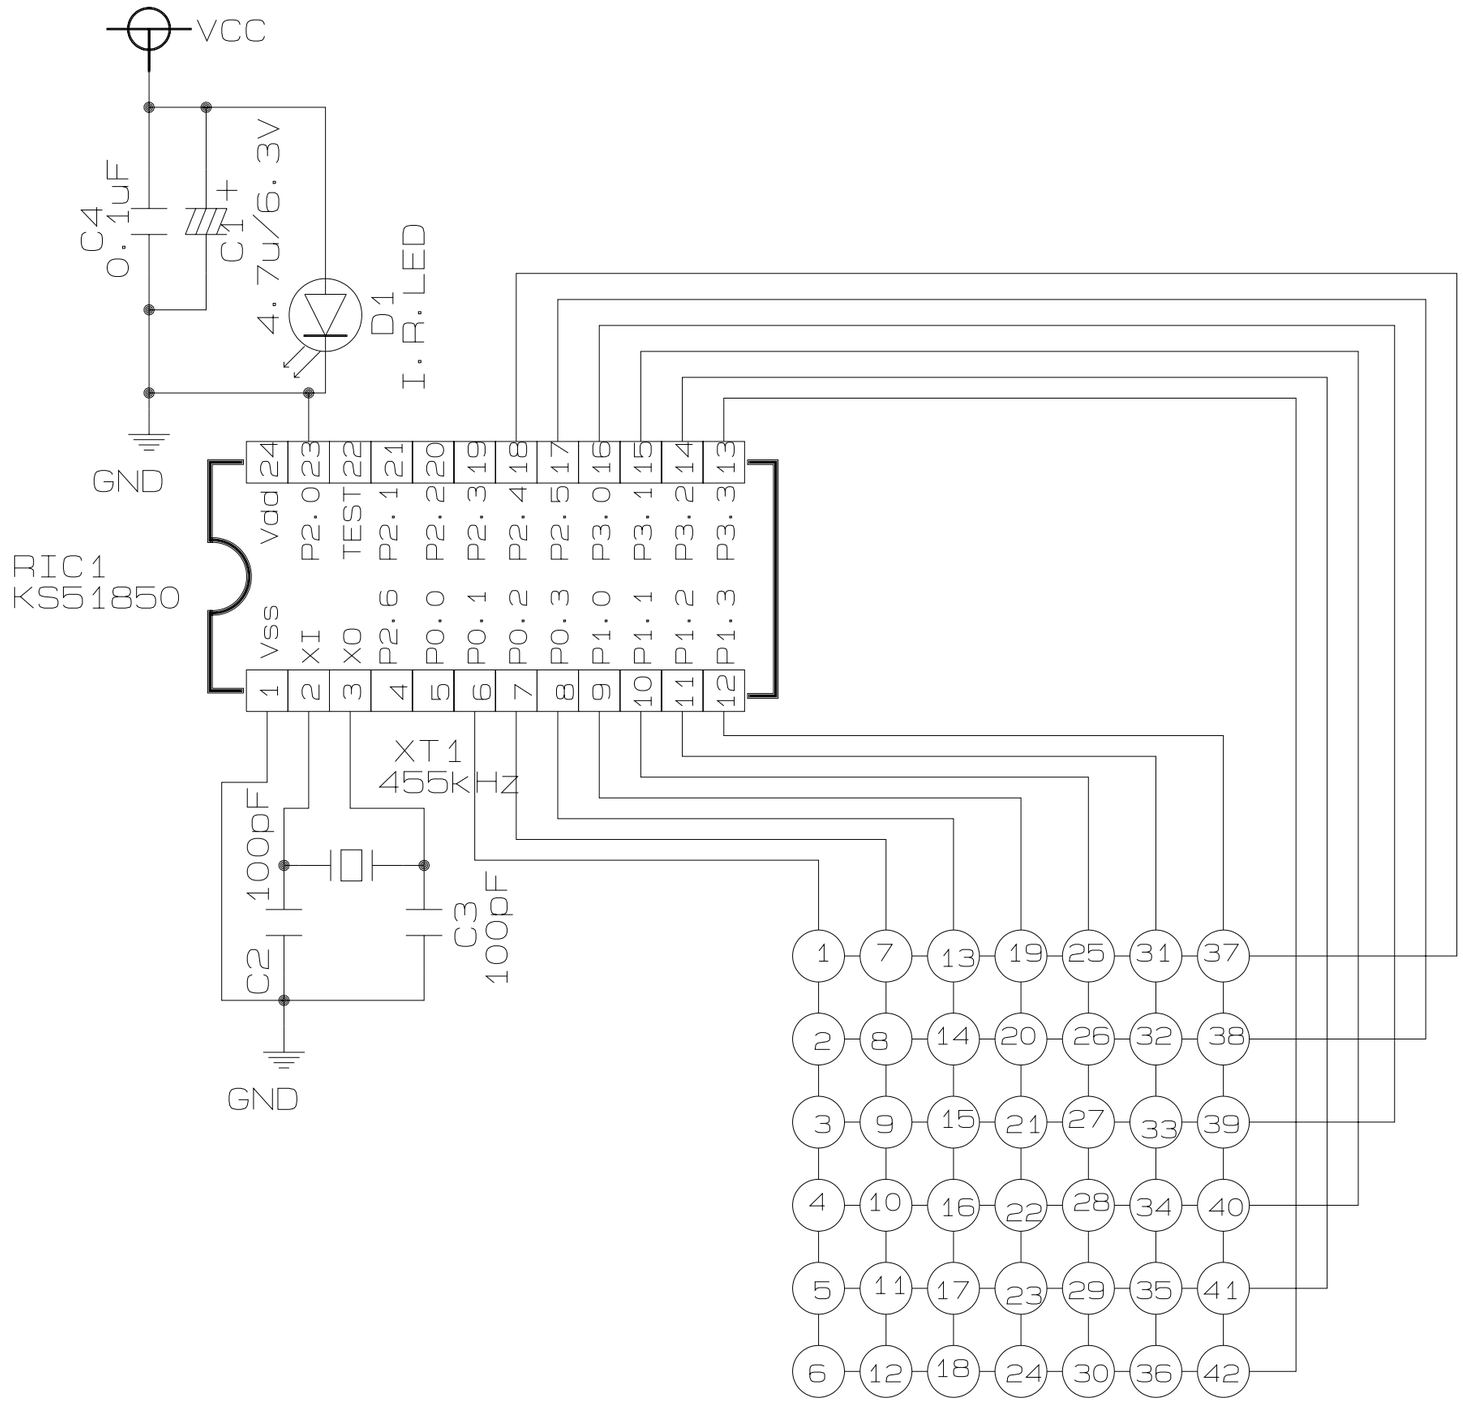

MEMO